



MODEL NO. RPJ176

PORTABLE PROJECTOR SCREEN

INSTRUCTION MANUAL



PLEASE READ BEFORE OPERATING THIS EQUIPMENT

This product has been manufactured and sold under the responsibility of CURTIS INTERNATIONAL LTD. RCA, the RCA logo and the two dogs (Nipper and Chipper) logo are trademarks used under license by CURTIS INTERNATIONAL LTD. – further information at www.rca-brand.com. All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

Warnings


- The warranty will only be valid if you follow the instructions below carefully! Improper use and care may cause serious injury and/or damage!
- Make sure the surface you have chosen for installing the screen is flat and secure.
- Please read the following as any damage to the screen surface will impact the image's quality:
 1. Do not touch the screen surface by hand.
 2. Do not write or draw on the screen surface.
 3. Do not poke the screen surface by finger or edge tools, as it may cause scratches or tears.
 4. Do not use any detergent or cleaning products to clean the screen surface, please clean it with a soft cloth and lukewarm water.
- Retract the screen after every use.
- Do not pull two sides of the screen fabric by hands, do not fold the screen fabric.
- To prevent unnecessary damage, the operation and maintenance of the screen should be done by adult.

Ignoring the safety warnings may lead to injuries or damaging the product.	The screen should be installed at secure place to avoid any accidents or the screen falling down.
Retract the screen after every use. Leave it hanging for a long period may cause screen fabric loose	Please contact your local dealer for repair or maintenance, and contact us if you have any further questions. Avoid taking apart the fixtures by yourself. Loose parts may cause the screen fall down.
Avoid hanging anything on the screen as it may cause the screen to fall down.	

Do not take apart and replace with unknown parts. If there are any problems, please contact your local dealer. Product specifications are subject to change.

A		x 6pcs (Each 29.3cm)
B		x 26pcs (Each 29.3cm)
C		x 2pcs (Each 29.3cm)
D		x 2pcs
E		x 2pcs
		x 2pcs (For Base)

Complete picture of projector screen installation

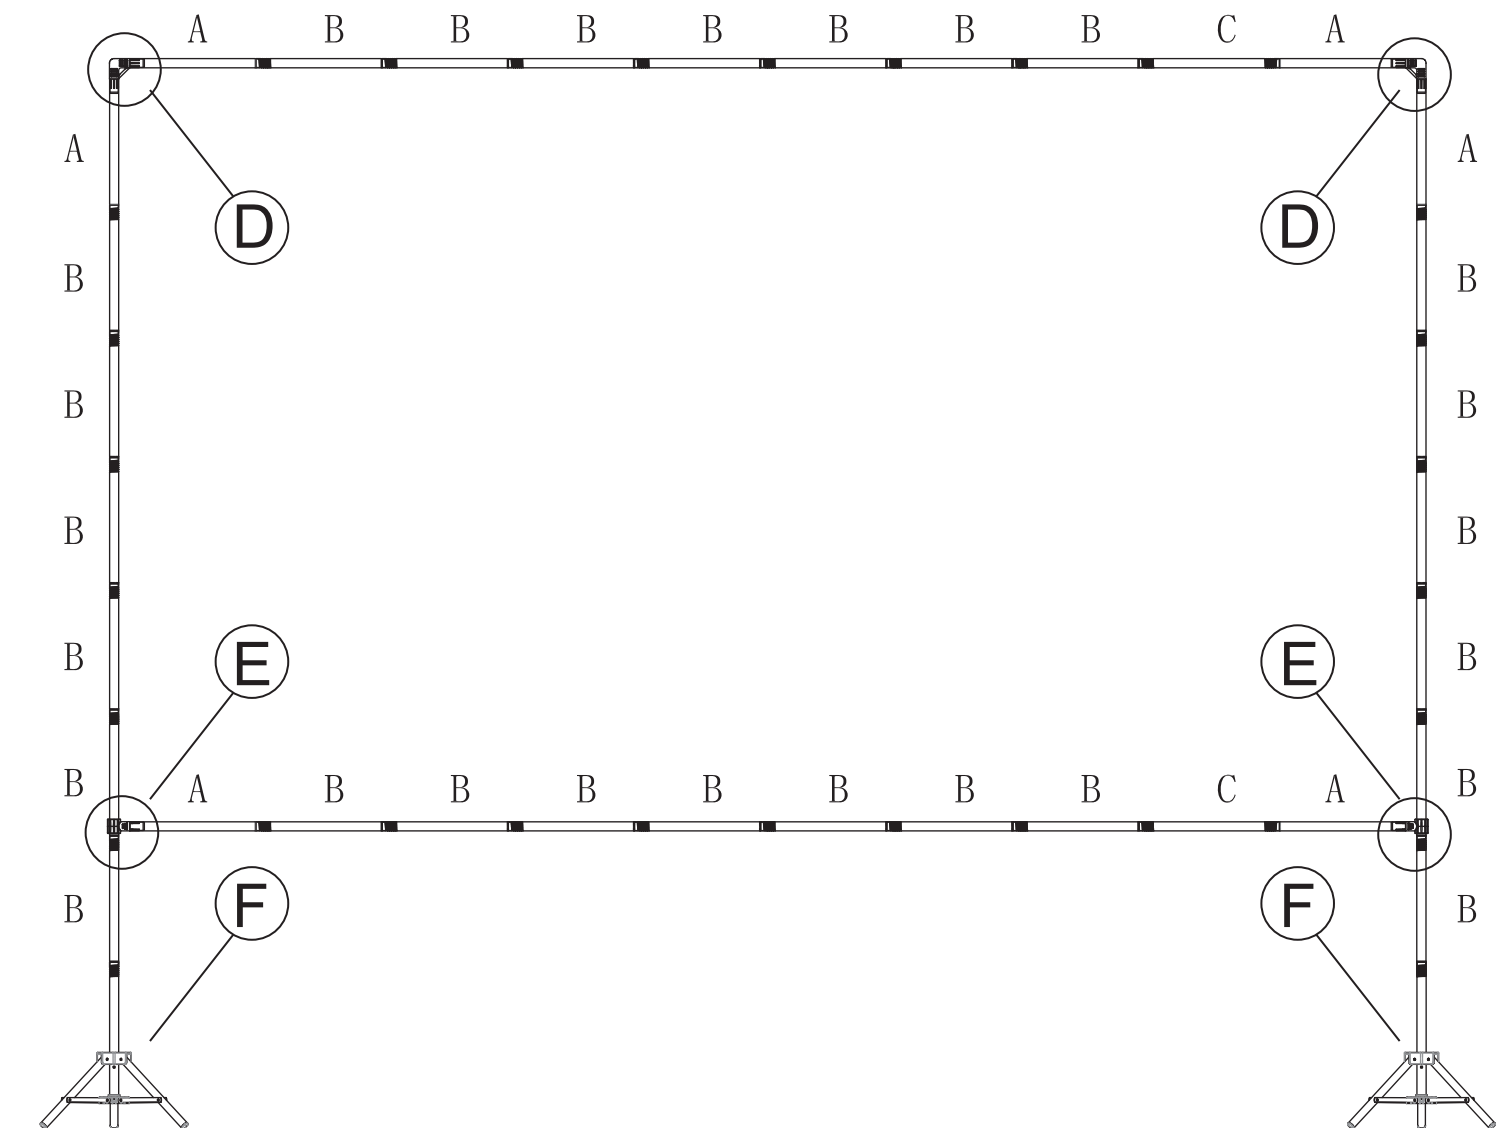

For service assistance and product information, please call: 1-800-968-9853. Pour obtenir assistance et information appelez: 1-800-968-9853. Curtis International Ltd. 7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

1

Use 2 x "A" tubes, 7 x "B" tubes, 1 x "C" tubes join together with spacers to assemble the top & down cross bar.
 Note: The installation shall be assembled in the order shown in the figure ("A" tubes, "B" tubes, "C" tubes)

2

Use 1 x "A" tubes, 5 x "B" tubes join together with spacers to left & right posts.
 Note: The installation shall be assembled in the order shown in the figure ("A" tubes, "B" tubes)

LEFT SIDE RIGHT SIDE

3

Put the crossbar through the upper side of the curtain.

4

Insert and secure joints at both ends of the crossbar and the screen.

5

Insert retaining joints at the lower ends of the crossbar and screen.

6

Twist the two posts into the bottom tripod. Assembly is complete.

To make a warranty claim, please email support2@curtiscs.com or call 1-800-968-9853.

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does **not** cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.