## TRUE WIRELESS SPORTS EARBUDS WITH CHARGING CASE

# **IQ**sound®

IQ-140TWS User Manual



### Spectfications:

True wireless stereo (TWS), real no wires design, individual left and right channel, HIFI sound, both the left and right earbud are Bluetooth enabled. could be used separately, or used as one pair.

Bluetooth version:	V5.0, ultra low consumption
Bluetooth Mode:	A2DP1.3/HFP1.6/HSP1.2/AVRCP1.6/D11.3.
Bluetooth Frequency:	2.4GHZ
Bluetooth Range:	10 meters with no obstacles
Battery capacity:	Earbud: 70mah rechargeable Li-ion battery Charging dock:350mah (optional)
Talk/Play time:	Single earbud mode:Up to 5 hours One Pair earbuds mode:Up to 5 hours
Standby time:	Up to 120 hours

### About pairing:

Long press the multi-function button until the led flashing in red and blue alternately, then turn on the Bluetooth on your device and select "IQ-140TWS" on your list, there would be reminding voice saving "connected", then you could enjoy music or making phone calls, it supports reporting incoming calls.

### Using as a pair:

Press and hold multifunction buttons on both earbuds to power on both earbuds, the indicator lights will flash red and blue on both earbuds.

Turn on the Bluetooth on your device and choose"IQ-140TWS" to connect, when the led flash slowly in blue, they pair successfully. Battery status display on your cellphone



Assistant

Function Button -

turns off when fully charged.

they are power ON before charging.

2.Activating Siri Or Google Assistant

Be sure the earphone connected with your mobile phone, then you can

listen to music on your music list. Shortly press the power button to stop

the music and replay by press again. Press and hold "+" &"-" for Voice +/press "+" &"-" for Next/Previous.

There is reminding sound when battery is low, and the led would flash in

red at the same time. When taking charge, the led would be in red, and

Note: the earphone would be forced to shut down when charging even if

To TURN OFF-press and hold the multifunction button on either earbud until the LED flashes red for three times.

#### Bluetooth usage:

#### 1 Making phone calls:

Be sure the earphone connected with your mobile phone, and then you can make phone calls. When making calls, press function button on either earbuds once to answer; press and hold function button to reject.

When the earphones are in music mode, you dial your latest number by quick press the function button on right earbuds function button 2 times. (redial the latest number).

## Charging Dock:








Magnetic Charging Case


Charge-In Port

Charge-Out

4 LED Charging Case Indicator

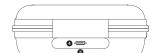

4

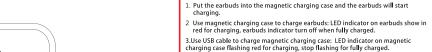

### Warnings:

- 1.Please do not overuse this earphone or put it under heavy pressure. keep away from wet and heat.
- 2.Keep away from WIFI, router or other high frequency transmitting equipment to prevent interruption of signal receiving.
- 3.Please use this earphone under its working range (10meters), and the effect would be better if there is no obstacle between the connected devices.
- 4.Use this Bluetooth earphone to connect any device with Bluetooth
- 5.Please DO NOT use too much force on earbuds/charging dock when charging/pairing.

## Diagram

### Product Diagram

Charging Input Microphone

Power button

6 "-" button

3 "+" button

LED Charging Indicator Light

#### FCC statement

This device complies with Part 15 of the ECC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference. and (2) this device must accept any interference received, including interference that may cause undesired operation.

Supersonic Inc.("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use. for ninety (90) DAYS from the date of original purchase. Proof of purchase

2. Charging case x 1 3. Micro USB charging cable x 1 4. User manual x 1

### Troubleshooting Tips:

Package contains

1. Earbuds x 1

- \* If only one earbud is working, press the other earbud to reconnect. \* If pairing two earbuds does not work, turn off the earbuds and restart.
- \* Make sure your earbuds are within range of your smart device.
- \* Make sure your earbud is charged.

#### Warranty

Basic Warranty Statement

(receipt) required.

Please visit http://www.supersonicinc.com/warranty for additional information.