

Instruction Manual

IQ-2323BT



To ensure correct operation and avoid damage, please read this user manual carefully before using this product.

Features:

- 2.0CH portable Bluetooth fabric speaker
- Water resistant IPX6, perfect for beach, poolside, boat and more outdoor activities
- TWS function, achieve true wireless playing with double enhanced stereo sound
- Optimized Google Assistant and Siri voice control
- Hands-free Mic for easy picking up the call
- RGB Lighting
- With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device
- USB support
- FM radio
- Line-in function, suitable for PC, MID, TV and other audio devices

- Built-in lithium rechargeable battery 3600mAh
- Shoulder strap, easy to take out
- USB compatibility with Flash drive only, size capacity up to 32G.
- Support files format MP3/wav/wma/flac/ape.

Specifications:

Bluetooth version: V4.2+BR

Speaker Size: 3 inch*2

Speaker output: 7W*2, 4Ω

Battery Capacity: 3.7V, 3600mAh

Play Time: 3 hours at maximum volume

Frequency Response: 100Hz-20kHz



Bluetooth connecting range: 10m

Product size: 283(L) *123(W) * 126 (H) mm

Package Contents:

- 1x Portable Bluetooth speaker
- 1x Charging cable
- 1x Audio cable
- 1x User manual
- 1x Shoulder strap

Product Details:

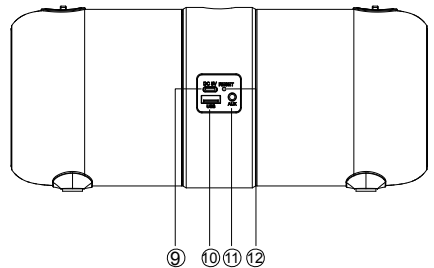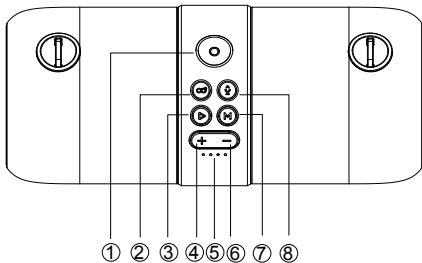

1. Power On/Off

2.TWS Button

3.Play/Pause

4.Forward/Volume Up

5.Battery Indicator

6.Backward/Volume Down

7.Mode Button (turn the modes among Bluetooth, USB disk, FM radio and AUX-IN)

8.Siri Button

9.Charging Jack

10.USB Port

11.AUX Port

12.RESET Jack

Power On/Off

Long-press the Power button to turn the speaker on, short-press the Power button to turn the speaker off.

Bluetooth:

- Turn the power button to “ON”, the speaker enter Bluetooth mode automatically.
- Activate *Bluetooth* of mobile phone and search for device name “**IQ-2323BT**” then connect it.
- Play the music from your mobile phone and enjoy.
- Long-press Forward or Backward button on the device or operate on Mobile phone to select songs you like.
- Short-press Forward or Backward button to adjust volume up and down. Or adjust the mobile phones’ volume.
- Short-press Play/Pause button on the device or operate on Mobile phones to play/pause the music.
- Long-press TWS button to disconnect Bluetooth connection, then make Bluetooth connection with other mobile phone.

TWS Function:

- Turn on two identical speakers you want to pair, both under BT mode. Only need to set one of the two units.
- Short-press the TWS button to pair, a tone will be audible and TWS button will keep lighting after paired successfully.
- Make Bluetooth connection with your mobile phone to play music by the two paired Speakers.
- Short-press the “TWS” button again to exit the TWS connection.

Notes:

- Under TWS mode and Bluetooth connected, when user long-press the TWS button, both the TWS connection and Bluetooth connection will be disconnected.
- When Bluetooth connected, if user short-press TWS button to make TWS connection, the Bluetooth connection will be disconnected for a short time, after TWS paired, the Bluetooth will be connected again.

Playing music from USB disk:

- Turn the Power button to “ON”.
- Insert USB flash disk into slot, the speaker will play the stored music automatically.
- Long-press Forward or Backward button to select songs you like, short-press to adjust the volume up and down.
- Short-press Play/Pause to play or pause.

Notes: Under Bluetooth playing mode, insert USB disk will disconnect the Bluetooth and switch to play the USB disk. You can short-press the MODE button to switch to Bluetooth mode again.

FM Radio:

- Turn the power button to “ON”, short-press the “MODE” button to enter radio state.
- Long-press “Play/Pause” button to auto search the FM Channel and store it automatically. Short-press “Play/Pause” button to mute the speaker.
- Long-press Forward or Backward button to change the stored FM channel, short-press to adjust the volume up and down.

AUX-IN:

- For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device’s “Line Out” to the “Aux In” of this device, then enjoy...

- Under any playing mode, when you use the audio cable to connect the device, it will auto-switch to the AUX mode.
- When using an external device, all functions can be controlled by the external device.

RGB Lighting

When the speaker is turned on, the RGB light is on automatically, user can long-press the Mode button to switch the RGB light on and off.

Activating Voice Assistant:

- Make Bluetooth connection with your mobile phone.
- Short-press Siri button to activate voice assistant SIRI/GOOGLE ASSISTANT.

Hands-free call:

- Under Bluetooth connection status, if there is an incoming call, user can short-press Play/Pause button to accept the call or long-press Play/Pause button to reject the call.
- During the call, user can long-press Play/Pause button to switch to talking on the phone.
- Short-press Play/Pause button or operate on mobile phone to end the call.

Reset Functionality:

If the speaker does not turn off or respond, user can short-press the RESET jack with a small round pin to reset the speaker.

More Remarks:

- Default volume is at 50% status of max volume.
- Play time may vary depending on volume level and music style.

How to charge:

- The charger is not included in the package, please charge the speaker via a standard 5V/1-2A charger or via a PC.
- Charge time should be 4-6 hours. After full charging, the 4 LEDs keep lighting.
- When battery voltage is low, the speaker will prompt for recharging.
- The unit does not have power bank function, it is forbidden to charge other

device via this unit or to connect other device via the USB port.

IMPORTANT:

When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume.

Warning:

- Don't use/store this speaker in extreme temperatures.
- Please store it in cool and dry area, keep away from anything that generates heat, such as radiators, stoves, etc.
- In order to have hearing protection and an extended speaker life, avoid listening to songs on maximum volume.
- When cleaning this speaker, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Warranty

Basic Warranty Statement

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required.

Please visit <http://www.supersonicinc.com/warranty> for additional information.

Garantía

Declaración básica de garantía Supersonic Inc. ("Supersonic") garantiza este producto al comprador original SOLAMENTE, para estar libre de defectos en materiales y mano de obra bajo uso normal, por noventa (90) DÍAS a partir de la fecha de compra original. Se requiere una prueba de compra (recibo). Visite <http://www.supersonicinc.com/warranty> para obtener información adicional.