 


# IQsound®

## Karaoke Speaker with Microphone

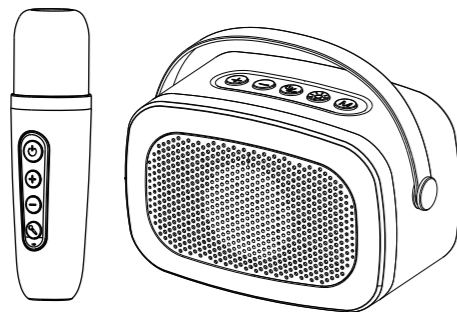

**Model No.: IQ-908K**

Please read carefully this manual before operating the device.

### SAFETY INSTRUCTIONS

- Clean only with dry cloth.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, objects have fallen into the apparatus, does not operate normally, or has been dropped.

### WARNING!

 
This is not a toy. Adult supervision is recommended. Do not allow small children to use this product. The presence of small parts may present a choking hazard. Do not use this product with non-compatible stereo devices.

### SPECIFICATION

Bluetooth Version: V 5.3  
Speaker Diameter: 57 mm  
Speaker Power Output: 5W\*1  
Speaker Impedance: 4 Ω  
Battery Capacity: 1200mah for Speaker  
500mah for Microphone  
Frequency Response: 60HZ-20KHZ  
Bluetooth Connecting Range: 10m  
Playing time: about 5 hours (50%~60% of the volume)

### INSTRUCTIONS FOR USE


#### DESCRIPTION

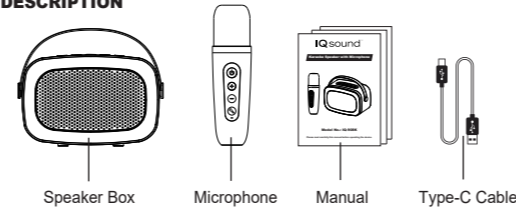


#### PAIRING THE DEVICE

1. Place speaker within 30ft of Bluetooth enabled device.
2. Power On/Off: Press and hold the ON/OFF button for 2-3 seconds
3. On your device's Bluetooth menu, find and select "IQ-908K"
 
#### FUNCTION

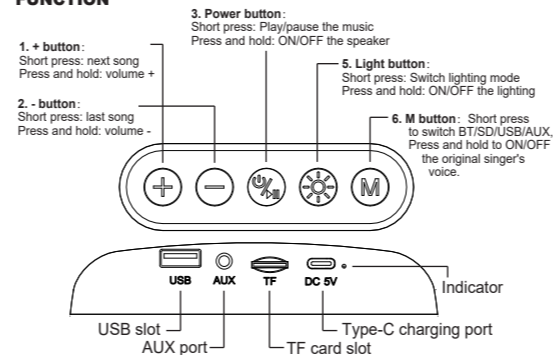

#### MICROPHONE FUNCTIONS

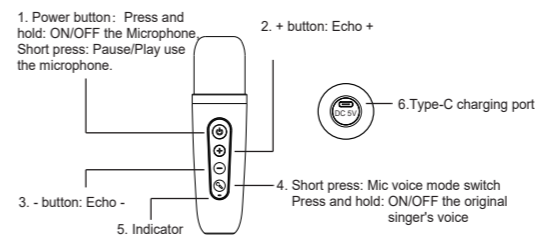 

#### CHARGING THE DEVICE

- Before using this speaker for the first time, charge for 24 hours.
1. Plug the Type-C end of the charging cable into the port on the Speaker or Microphone. Plug USB end into a computer's USB port or a compatible AC wall adapter.
  2. The red LED will turn on to indicate the device is charging.
  3. Once fully charged, the red LED will turn off. When Battery is low, approximately 2.5 hours of charging time is needed to fully recharge the Speaker battery.

#### TROUBLE SHOOTING

##### NO POWER

- Recharge your speaker using the Type-C to USB cable. If the problem persists, try another Type-C to USB cable.

##### NO RESPONSE FROM THE UNIT


- Ensure your Bluetooth device supports an A2DP, AVRCP, or HFP profile.
- Check if both devices are paired and connected to each other.
- Restart the device and try to reconnect.

### BATTERY INFORMATION

#### SPEAKER BATTERY

**WARNING:** The device is equipped with an integrated lithium battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.

### DISPOSAL

 **ENVIRONMENTAL PROTECTION**  
Waste electrical production should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

**Warranty**  
Basic Warranty Statement  
Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required. Please visit <http://www.supersonicinc.com/warranty> for additional information.

**Garantía**  
Declaración básica de garantía  
Supersonic Inc. ("Supersonic") garantiza este producto al comprador original SOLAMENTE, para estar libre de defectos en materiales y mano de obra bajo uso normal, por noventa (90) DÍAS a partir de la fecha de compra original. Se requiere una prueba de compra (recibo). Visite <http://www.supersonicinc.com/warranty> para obtener información adicional.