


# OPERATION INSTRUCTION

## FUNCTIONAL DESCRIPTION

### WORLD BAND RECEIVER

### SC-1097BT

**SUPERSONIC**  
Live. Life. Easy.

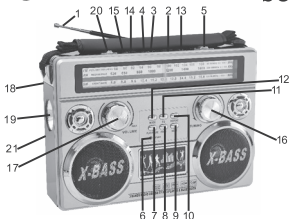

1. Telescopic antenna
2. USB jack
3. SD card slot
4. TF card slot
5. MP3/BT Band switch
6. MP3 monitor
7. MP3 PLAY/PAUSE button
8. MP3 PREV button
9. MP3 NEXT button
10. REPEAT playback
11. EQ button
12. MODE button
13. AUX jack
14. SOLAR 12V PANEL (DC 6V) IN socket
15. CHARGE LED
16. TUNING knob
17. VOLUME control
18. Battery compartment
19. Torch
20. Torch (on/off)
21. AC socket



The Lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

#### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

1. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
2. **WARNING** : To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
3. **WARNING**: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
4. **WARNING**: The mains plug is used as disconnect device, the disconnect device shall remain readily operable
5. No naked flame sources, such as lighted candles, should be placed on the apparatus.
6. Attention should be drawn to environmental aspects of battery disposal.

CURRENT 60mA POWER 13.2W

# Function Operation

## 1. Battery Operation:

Put Batteries or Connect AC power cord. If adding battery type(UM-1 "D" size x4 DC 6V) into battery compartment(18) pay close attention to the polarity. Or you can connect the AC power cord to the AC socket(21) to power on and charge the speaker

## 2. FM Radio Function:

Radio Function; Turn the volume knob clockwise to turn on the radio, when hear a "DI" sound, the radio can be turn on, the volume will increase. Turn the volume knob anticlockwise to decrease the volume, continue to turn, when hear a "DI" sound, the radio can be turn off.

## 3. Band Selector:

Adjust the band selector(5), and then turn the tuning knob(16) to receiver the different radio stations from AM/FM/SW

## 4. FM Band:

Adjust the band selector(5) listen to FM, Please pull out the antenna and change the length to receive a more clear signal.

## 5. AM Band:

Adjust the band selector(5) listen to AM. You can move the radio's position to receive the best signal.

## 6. Bluetooth Function

The Bluetooth version is 5.0. Turn the MP3/BT Band switch selector (5) to MP3/BT (left), you can hear "bluetooth is ready to pair". Turn on the bluetooth of the mobile phone, search and Connect "SC-1097BT", then you can hear "Bluetooth device connected successfully"

## 7. NOTE:

When you don't want to listen to the radio, please turn it off and disconnect the AC power cord and take out the batteries. If you are not going to use the radio for a very long time, please remove the batteries from battery compartment.

## USB(SD) PLAYBACK

### 1. POWER ON

### 2. SET THE FUNCTION SELECTOR TO USB(SD)

3. INSERT A USB FLASH DRIVE (OR A SD CARD) WITH Mp3 FORMAT MUSIC, THE USB WILL PLAY AUTOMATICALLY. PRESS PAUSE/PLAY BUTTON TO PAUSE MUSIC, PRESS IT AGAIN TO CONTINUE THE PLAYBACK. PRESS FIX REPEAT BUTTON TO REPEAT THE PLAYING SONG, PRESS REW BUTTON TO SELECT THE PREVIOUS SONG AND FW BUTTON TO THE NEXT SONG.

## NOTE:

1. THIS MODEL INCLUDES BUILT IN RECHARGEABLE BATTERY.
2. IN ORDER TO PROLONG BATTERY LIFE AND PRODUCT NORMAL USE, CHARGING TIME PLEASE KEEP 6-8 HOURS

## Band Selector:

Select Function Switch to (SW) Radio Bands for shortwave radio:

Is specially designed to receiver shortwave TV radio from places and countries far away from where you live and are "hidden" in between the standard AM and FM different band frequencies. SHORTWAVE STATIONS BANDS depends on how strong the signals is at your location, your receiver and your antenna.

# Warranty

## Warranty

### Basic Warranty Statement

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use. for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required.

Please visit

<http://www.supersonicinc.com/warranty> for additional information.

### Package Contains:

- 1 Wold Band Radio Receiver
- 1 AC power cord  
(Located inside battery compartment)
- 1 User Manual

### Flashlight Operation:

Press in the Light ON/OFF button on top of Radio receiver. Located above the Flashlight.

### Charging Portable Instructions:

Plug in the AC power cord into backside of Radio. Leave radio plugged in for 2 Hrs for a full charge. Remove AC cord and begin to use you radio as portable.

SPECIFICATION:AC:120V/240V (AC only for charge)

DC:6V (size D X4pcs) (size D batteries not included)

Built in rechargeable battery

Power consumption:2.5W

("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required.

Please visit

<https://www.supersonicinc.com/pages/warranty> for additional information.