 




7" PortableTV & Digital Multimedia Player

SC-195

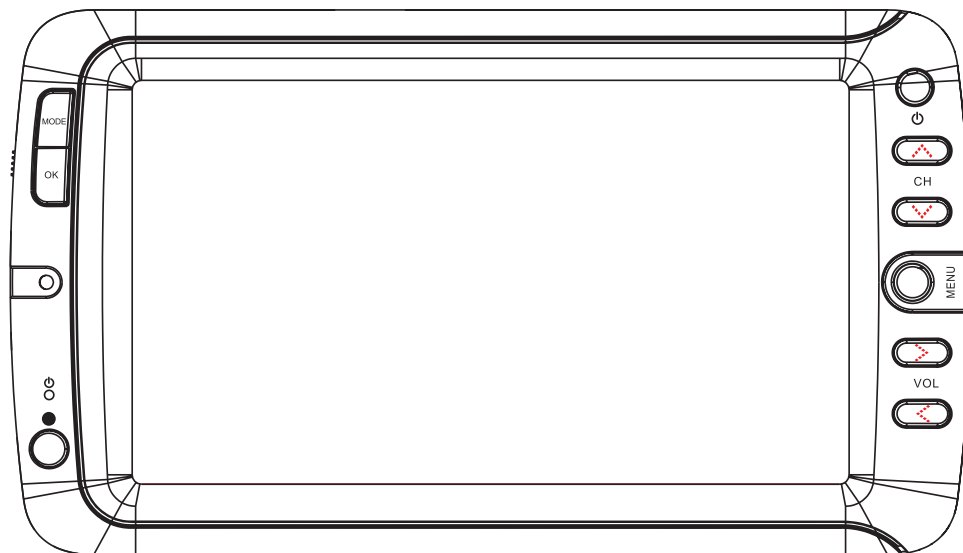

Instruction Manual

Please read carefully before use and keep for future reference.

Table of Contents

Before Your Start	3	TV Menu Operation	13
In the Box	5	Channel.....	13
At a Glance	6	Picture.....	15
Main Unit.....	6	Sound.....	15
Remote Control.....	9	Time.....	16
Basic Operation	11	Option.....	16
Connect the Power Supply	11	Lock.....	17
Using the Built-in battery.....	11	Multimedia Interface	18
Connect the Antenna.....	11	Photo Playback	18
Connect an External A/V player	11	Music Playback.....	18
Using the Number Keypad	12	Movie Playback.....	18
Adjusting the Volume	12	Specifications	19
Setting the Input Source.....	12	Limited Warranty	19

Before Your Start

Please take note of the following before you start.

WARNING

The operation instructions provided are intended for reference, only. Changes in the manufacturing process may cause the features and designs described herein to change without notice.

WARNING

- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- The mains plug is used to disconnect the device from power. The mains plug must remain readily accessible and able to disconnect completely from the mains.
- The apparatus should not be exposed to dripping or splashing liquids. No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.

- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as direct sunshine, the interior of a parked car, fire or the like.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Storage

- Keep this product away from extremely hot or cold places. This storage temperature range of this device is 20°C to 60°C (-4°F to 140°F); the operating temperature range of this device -5°C to 40°C (23°F to 104°F).
- Do not use this product in a damp environment (e.g., in or near bathtubs, wash basins, kitchens, basements, swimming pools, or similar places).
- Do not expose your TV set to high humidity, dust or smoke (including auto exhaust).
- Do not throw or drop this product.

- Do not subject this device to strong vibrations or impact. If using the device in a car, rough roads will shorten the life of your device.
- Do not puncture or abrade the device, or otherwise subject it to strong forces.
- For your safety and the safety of others, do not turn the TV on or watch TV programs while driving.

Maintenance

- Disconnect power and all cables from this device before cleaning it.
- Use a soft cloth to wipe the screen, enclosure, and keys. If necessary, use a cloth lightly moistened with water to wipe the device. Do not use rough or abrasive materials to wipe the device (e.g., a polishing cloth).
- Do not clean the device with astringents, propellants, or cleaning agents (including alcohol and benzene)

WARNING

- Do not use this device while operating a car or other motorized vehicle. Obey all local and federal regulations when using this device. There may be specific laws in your area to prevent distracted driving.

Notice

- The panel used in this television contains millions of thin film transistors that have been manufactured using a high-technology process to deliver a crisp, clear, and detailed picture. Occasionally, a few of these transistors may become stuck or non-active; please note that this does not affect the performance of the television. These light or dark spots are within the normal operating tolerances of the unit; do not attempt to fix the screen.
- This unit is controlled by microcomputer. If it should freeze, please restart it.
- If the TV behaves abnormally, turn it off immediately and please contact us or the retailer. This device contains many finely tuned electronic components but has no user serviceable parts inside. Disassembly or alteration may result in damage or serious injury.


In the Box

Please take a moment to make sure that you have everything in the list below :


- 7" Portable TV
- Removable Stand with screws
- AC power adapter
- DC car power cord
- Antenna extension adapter
- Rotary Rod Antenna
- External antenna
- A/V cable
- Remote control
- Instruction manual


At a Glance


Main Unit

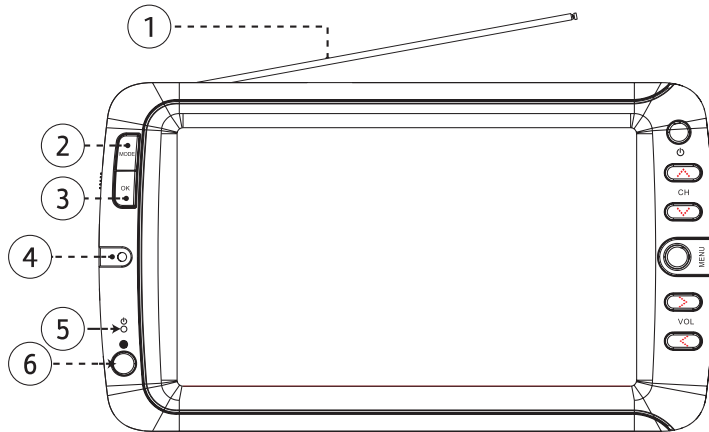

1	Telescopic antenna	Antenna for TV reception
2	MODE	Change the active source mode. Press to view the Mode menu; press CH+/CH- to browse the list of modes; then press OK to select and change the mode.
3	OK	Press to confirm a selection in the system menu.
4	Charge indicator	Lights up when the TV is connected to power and charging. The indicator will darken when the TV is fully charged.
5	Power indicator	Lights red when the TV is on.
6	Remote sensor	Detects IR signals from the included remote control.

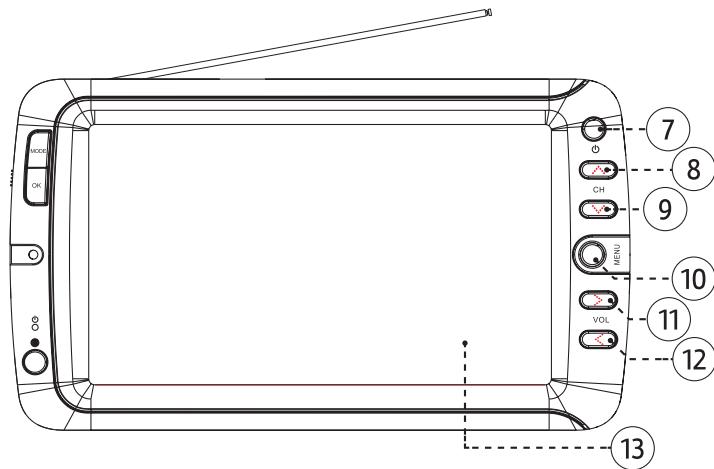



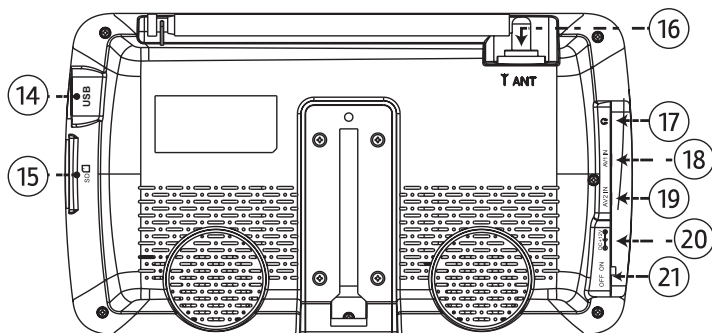




7		Power/Standby. Press to turn the TV on or to place it in standby mode. Make sure that the Master Power Switch [21] is set to ON.
8	CH ▲	Channel up/browse up when navigating a menu
9	CH ▼	Channel down/browse down when navigating a menu
10	MENU	Access the system menu to adjust the TV's options.
11	VOL ►	Volume up/browse right when navigating a menu
12	VOL ◀	Volume down/browse left when navigating a menu
13	TV display	Color TFT LCD screen







14	USB port	Load a USB memory stick with compatible media files, then set the active source mode to USB.
15	SD card slot	Load an SD card with compatible media files, then set the active source mode to CARD.
16	Antenna input jack	75 ohm coaxial connector for TV antennas.
17	Head- phone jack	3.5 mm stereo audio output.
18	AV1 In jack	Use with the included A/V cable to connect an external composite video/audio source, then set the active source mode to AV1.
19	AV2 In jack	Use with the included A/V cable to connect an external composite video/audio source, then set the active source mode to AV2.
20	DC input	Use with the included AC power adapter or DC power cord.
21	Master Power Switch	Set to ON to use the TV. If you will not be using the TV for an extended period of time, set the switch to OFF to turn the unit off completely. (The TV will use a little bit of power when the switch is set to ON and the TV is placed in Standby mode.)

Remote Control

Power 	Power Switching Key. Turn the TV on or off.
ZOOM	Picture modes
FREEZE	Temporarily pause the video.
MUTE 	Enable/disable the sound output.
Channel Keys	Use the number keypad to change the channel.
 Return key	Go to the last viewed channel.
SOURCE	Change the active input source mode (TV, AV, MEDIA)
INFO	View program information.
Up/Down	Browse up/down in menu lists.
Left/Right	Browse left/right or adjust an option in menu lists.
CH+/ 	Change the channel up or down, respectively.
CH-/ 	
VOL+/ 	Increase/decrease the volume level, respectively.
VOL-/ 	
ENTER	Confirm a selection.
MENU	View the system menu.

EXIT	Exit the system menu.
AUDIO	Change the default audio language.
CC	Change the closed-caption display modes.
EPG	If available, view program guide information from over-the-air ATSC TV broadcasts.
P.MODE	change the picture preset mode.
S.MODE	Switch State Among Personal/Standard /Music/Movvie/Sports
CH.LIST	View all the available channels.
FAV.LIST	View the channels in your favorites list.
SLEEP	Set a sleep timer (max 240 minutes).

The following keys only work when Playing photo/music /movie files in MEDIA(USB AND CARD)MODE.

REP	Change the repeat mode.
	Start, pause, or resume playback.
	Stop playback.
	Go to the previous track.
	Skip to the next track.



Scan in reverse quickly.



Scan forward quickly.



To adjust the volume when playing an MP3 or video file, first press the CH ▼ key on the TV to hide the system menu, then press VOL ▶ or VOL ◀ to adjust the volume. To return to the system menu, press OK.



Notes:


1. Keep within 3 meter distance when using the remote control to work TV.
2. Keep about 45° angle or the obverse angle to aim IR sensor location on TV.

The remote control operates 1pc "CR2025" lithium battery (included). To power up the remote control, remove the insulation tab from the back of unit.



Installing battery

1. Push the button toward right.
2. Pull the battery loader out.
3. Insert one "CR2025" size battery with the positive side (+) facing up.
4. Replace the cover.

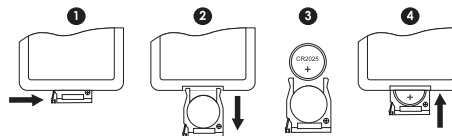

Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

Basic Operation

Connect the Power Supply

Use the supplied power adapter to connect the DC Input jack [20] on the TV to a power supply. The AC power adapter works with AC 100–240V outlets; the DC car adapter works with the power socket found in most motor vehicles.



Using the Built-in battery

The TV has a built-in rechargeable lithium battery. Charge the built-in battery before using it for the first time. The charging indicator will change from red to darken when the battery becomes fully charged.

Notes: About 3–5 hours to be fully charged; And the battery working time is about 1.5 hours.

Warnings:


- * To charge the battery, just connect the AC adapter.
- * Recharge the built-in battery when you are ready to use it again.
- * To get the longest service life of the built-in battery, charge at indoor-temperature.
- * While using the built-in battery, the environment temperature should be 5°C (41°F) to 35°C (95°F).

Connect the Antenna

Use the supplied external antenna for improved TV reception. Connect one end of the antenna extension adapter to the Antenna Input jack [16] of the TV. Connect the other end of the adapter to the supplied external antenna.



Antenna extension adapter

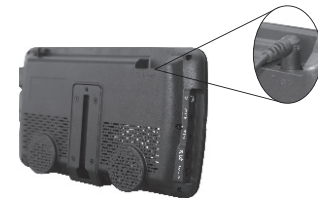

You may also connect a larger or amplified antenna for improved reception.

Connect an External A/V player

The TV can accept composite video and audio signals from external players (e.g., DVD player). Using the supplied A/V cable, plug the side with the 1/8" jack into the AV1 IN [18] OR AV2 IN[19]connector of the TV. Connect the yellow RCA plug to the composite video out jack of the external player; connect the white and red RCA plugs to the L/R audio out jacks of the external player, respectively.



A/V cable

Using the Number Keypad

Use the number keypad (0-9) on the remote to tune directly to a channel or to input a value when prompted on a menu or option screen.

To tune to channel 15-1, for instance:

1. Press the "1" key, then press the "5" key.
2. Press the "--/—" key.
3. Press the "1" key again
4. Press the ENTER key.

To go to track 15, for instance:

1. Press the "1" key, then press the "5" key.

2. Press the ENTER key.


Adjusting the Volume

- Use the VOL▶ and VOL◀ keys [11, 12] to increase or decrease the volume level, respectively.
- press the MUTE key on the remote control to disable sound output completely .Press the MUTE key again to restore sound output.

Setting the Input Source

Set the input source to choose which connection is active and displayed on the TV screen.

Press MODE [2] to access the input source menu, then press CH ▲ or CH ▼ [8, 9] to change the input source. Press OK [3] to confirm the selection.

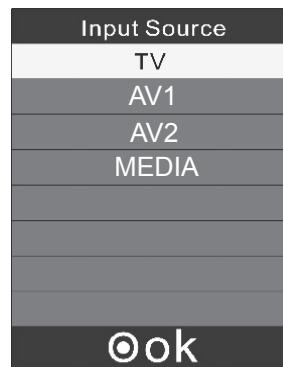

TV Menu Operation

Press the MENU key to access the menu list and then press the ENTER key on Remote to enter the list. Press the CH+▲ /CH- ▼ and VOL- ◀/VOL+ ▶ key to move within the Menu, and then press the ENTER key on Remote to confirm the change.

To exit the menu, press the EXIT key on Remote to back out of all menu options.

Channel

1. Air/Cable: Set to Air if you are using an antenna like the ones provided to receive over-the-air TV broadcasts. Set to cable if you are connecting to a Cable TV system.
2. Auto Scan: Automatically finds all TV stations with a signal and saves them to the channel list. Note: use this Auto Scan feature whenever you move the TV to a different geographic location.
3. Favorite: Add channels to the Favorites list. Press ▲/▼ and ◀/▶ to browse the channel list, then press ENTER on Remote to mark/unmark a channel as a Favorite.
4. Show/Hide: Choose whether a channel will be selectable when tuning with the CH+/CH- keys. Press ▲/▼ and ◀/▶ to browse the channel list, then press ENTER on Remote to mark/unmark a channel as hidden.

i You can still tune to a hidden channel directly with the numeric keypad.

5. Software Update (USB): Used to perform software updates via USB.
6. DTV Signal: Displays the signal quality of the current channel.



⚠ Troubleshooting Tip

1. *Not Able to get local channel stations:*

To solve the problem you can use amplified Antenna to boost the signal drive it through the coax cable. Poor reception is simply the result to Find out where the broadcast towers are in your area, Aiming your antenna at TV transmission towers can improve reception.

To search for your local Channel Tower Transmitters go to: www.antennaweb.org

2. *For best reception:*

- Place the antenna in or near a window...
- Go as high as possible.
- Test different antenna placements, Scan for channels in different room, location outdoors. RV, etc.
- Use a Longer Cable To Reach Window...
- Face it in the Right Direction...
- Move it Higher Up - HIGHLY RECOMMENDED!...
- Put it in a Skylight, rooftop - HIGHLY RECOMMENDED!..


* You can also try to use an Amplified Antenna or outdoor antenna that can to more in mile range.

* Use the digital antenna and put it on a metal base, then scan for channels.

* Please refer to "TV Channel Scan Procedure Manual" to get more informations about TV reception.

Picture

1. Picture mode: Select a picture preset that looks best (Standard, Soft, user, and Dynamic).
2. Color Temperature: Press “ENTER” on Remote then the ◀/▶ arrow keys to adjust color to Warm, User or Cold.
3. Aspect Ratio: Adjust the screen width by pressing “ENTER” on Remote then ▲/▼ arrows to select Auto ,4:3 , 16:9 ,Zoom1,Zoom2 , just scan and Panorama .
4. Noise Reduction: Press “ENTER” on Remote then the ▲/▼ arrow keys to select, “close, low, middle, or high.”

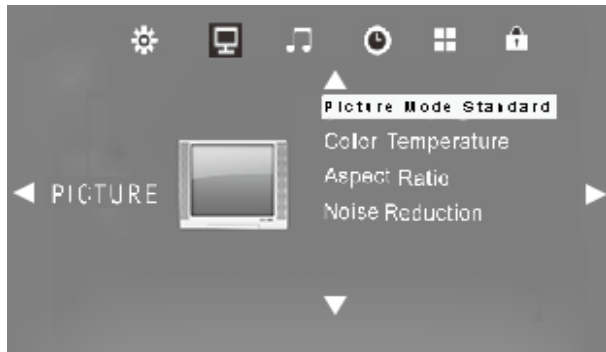

Sound

1. Sound mode: Set a preset equalizer to match the type of program you are watching from; standard, music, movie, sports, and user setting.
2. Balance: Press “ENTER” on Remote then the ◀/▶ arrow keys to adjust the audio level from -50 to 50.
3. Auto Volume: Press the “ENTER” key on Remote to enter the menu and select Open or Close to set Auto Vol.
4. Audio Only: Press the “ENTER” key on Remote to enter the menu to select, “close the image signal.” Only audio will be heard as the image will disappear.



Time

1. Clock: Press the “ENTER” key on Remote to enter the menu, then the ▲/▼ to select; then press the ◀/▶ keys to adjust the current date and time.
2. Off Time: Press the “ENTER” key on Remote to enter the menu, then ◀ / ▶ arrow keys to set a day and time to auto shut off the TV.
3. On Time: Press the “ENTER” key on Remote to enter the menu, then ◀ / ▶ arrow keys to set a day and time to auto turn on the TV.
4. Sleep Timer: Set a timer. the TV will turn off automatically at the end of the timer.
5. Auto Sync: Set the system time to match the time carried by the antenna signal (cable or air). This option is not adjustable. The TV must be connected to an antenna or cable system for Auto Sync to work.
6. Time Zone: Set the time zone adjustment to match your location.



Option

1. OSD Language: Set the display language of the on screen menus.
2. Closed Caption: When closed caption is available for a TV program, a synchronized transcript of the program can be displayed on screen.
 - CC Mode : CC Off / CC On / CC On Mute
 - . select off to never display the closed caption information
 - . select on to always display the closed caption information .
 - . Select CC on Mute to only display the closed caption in formation when Mute is enabled.
 - Basic selection : off /CC1/CC2/CC3/CC4/Text1/Text2/Text3/Text4;Change how closed caption information is displayed
 - Advanced Selection off/ service1 /Srvic2 /Svce3 /Srvic4 /Srvic5 /Srvic6
 - Option: setup the Service mode

3. Setup Wizard: An on-screen guide that will help you get your TV up and running. Set the menu language, time zone, DST, and time format. Then, it scans all the channels to find all stations within broadcast range.
4. Restore Factory Default: Return all options to their factory setting
5. TTS (Text to Speech): Converts normal language text to speech.



Lock

Use the remote control to enter the default password (0000) to access the Lock options.

1. Lock System: Enter the default password of (0000) to access the Lock Options to enable or disable.
2. Set Password: Set a new password. When you change the password, write it down and store it in a safe place. Resetting the factory options will not reset the password.
3. Input Block: Completely block the TV mode or the AV modes.
4. US: Prevent programs from being viewed based on US TV or MPAA rating guidelines.
5. Canada: Prevent programs from being viewed based on Canadian English or French guidelines.
6. Reset RRT: Refresh the Rating Region Table if you are having problems with the US or Canada rating guidelines.
7. Unrated: Enable or disable the ability to watch unrated programs.



Multimedia Interface

Make sure your USB drive (or SD card)is in the USB PORT (or SD CARD SOLT) on the TV .

From the input Menu, select MEDIA. Press Enter key on remote to access either Photo/Music/Movie/ or Text icon.

Photo Playback

Insert your USB drive in the USB on the TV. Press the ◀ / ▶ arrow keys to select Photo and press Enter. Press ▶| key on the remote or press CH ▲ [8] KEY on the main unit to start slide show .

Press◀◀ or▶▶ to display the previous and next photo. Press return to quit.

Music Playback

Insert your USB drive in the USB Slot on the TV. Press the ◀ / ▶ arrow keys to select Music and press Enter. Press ▶| key on the remote or press CH ▲ [8] KEY on the main unit to play music.

Press ◀◀ or▶▶ to play the previous and next track. Press return to quit.


Movie Playback

Insert your USB drive in the USB Slot on the TV. Press the ◀ / ▶ arrow keys to select Movie and press Enter. Press ▶| key on the remote or press CH ▲ [8] KEY on the main unit to play movie.

Press ◀◀ or▶▶to display the last chapter and next chapter. Press return to quit.

Support format as follow:

Multimedia	Support file
Photo	jpg
Music	MP3
Movie	MPEG,XVID,AVC,MP4, H.264,HEVC(H.265)FLV,MKV

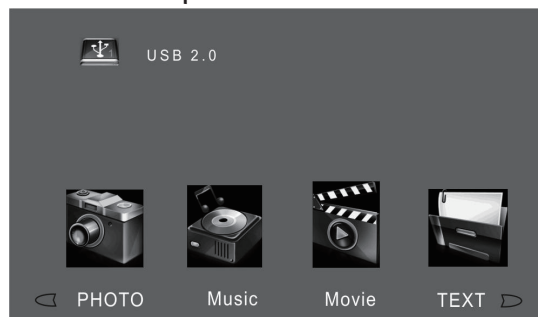 

Specifications

Screen type	7" (16:9) TFT LCD
Screen resolution	800 x 480
Removable Memory Support	Memory CARD USB
Input Connections	AV1 Composite audio/video (3.5mm) AV2 Composite audio/video (3.5mm)
HDTV signal support	ATSC
ATSC Frequency:	54MHz ~ 803MHz
NTSC Frequency:	55.25MHz ~801.25MHz
Power Consumption:	about 12 W
Speaker Output Power	0.8 W x 2 (1.6 W total)
Power	Rechargeable lithium polymer battery(3.7V,1900mAh) AC 100-240 V power adapter DC car power cord

Note: Products are improved continuously. We reserve the right to modify the product and specifications without prior notice.

Limited Warranty

Basic Warranty Statement:

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials workmanship under normal use, for **ninety(90) DAYS** from the of original purchase. Proof of purchase (receipt) required.

For additional information Please visit:

<http://www.supersonicinc.com/warranty>

*** FCC NOTICE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



