



23.6" LED TV COMPATIBLE WITH DVD PLAYER

MODEL NO.: SC-2426SDVD



USER MANUAL

Please read this manual carefully before using,
and keep it for future reference.

IMPORTANT INSTRUCTIONS

Safety information

CAUTION:

DVD/VIDEO CD/CD PLAYER IS A CLASS 1 LASER PRODUCT. HOWEVER THIS DVD/VIDEO CD/CD PLAYER USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE DVD/VIDEO CD/CD PLAYER CORRECTLY AS INSTRUCTED.

WHEN THIS DVD/VIDEO CD/CD PLAYER IS PLUGGED TO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENING OF THE DISC TRAY AND OTHER OPENINGS TO LOOK INTO THE INSIDE OF THIS PLAYER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

- TO PREVENT FIRE OR SHOCK HAZARD. DO NOT USE THIS POWER CORD WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

- TO PREVENT FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION - LASER RADIATION WHEN OPEN, DO NOT STARE INTO BEAM.
VENTILATION WARNING - THE NORMAL VENTILATION OF THE PRODUCT SHALL NOT BE IMPEDED FOR INTENDED USE.



The lightning flash and arrow head within the triangle is a warning sign alerting you of “dangerous voltage” inside the product.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

Always follow basic safety precautions when using electrical products, especially when children are present.

WARNING: To avoid the risk of electrical shock, make sure the product is unplugged from the electrical outlet before relocating, servicing, or cleaning it.

Read all instructions before using

- Do not use this product near water.
- Install the product in accordance with the operating instructions.
- Do not set the product near heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit the product.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Unplug the product during lightning storms or when unused for long periods of time.
- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- Do not place in or expose the product to direct sunlight, extreme heat, humid or dusty locations.
- Never operate this product if it has a damaged power cord or plug, do not work properly, has been dropped, damaged, or exposed to moisture, water, or other liquids.
- Do not attempt to examine or repair this product yourself; take the product to a service center for inspection and repair.
- Keep magnetic objects such as speakers, at a distance from the player.



LASER SAFETY

This set employs an optical laser beam system in the CD mechanism designed with built-in safeguards. Do not attempt to disassemble. Exposure to this invisible laser light beam may be harmful to the human eye. This is a Class-1 laser product. Use of controls, adjustments or procedures other than those specified herein may result in hazardous laser light beam exposure. This compact disc player should not be adjusted or repaired by anyone except qualified service personnel. The laser mechanism in the set corresponds to the stylus (needle) of a record player. Although this product uses a laser pick-up lens, it is completely safe when operated according to directions.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications. Such modifications could void the user's authority to operate the equipment.

- 1) Operate turning controls and switches as instructed in the manual.
- 2) Before turning on the power for the first time, make sure that the plug is properly installed.
- 3) Store your discs in a cool area to avoid damage from heat.

Battery Handling and Usage

- Keep batteries away from children and pets. Only adults should handle batteries.
- Never throw batteries into a fire or expose them to fire or other heat sources.
- Follow the battery safety and usage instructions.

DISC Handling and Maintenance

Handling precautions

- Hold the disc by the edges so the surface will not be soiled with fingerprints. Fingerprints, dirt and scratches can cause skipping and distortion.
- Do not write on the label side with a ball-point pen or other writing utensils.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids.
- Be careful not to drop or bend the disc.
- Do not install more than 1 disc on the disc compartment.
- Do not try to close the disc cover when the disc is not installed properly.
- Be sure to store the disc in its exclusive case when not in use.

If the surface is soiled

Wipe gently with a soft, damp (water only) cloth.

When wiping discs, always move the cloth from the center hole toward the outside, which will not cause distortion. (If you wipe the discs using a circular motion, circular scratches are likely to occur, which will cause distortion.)

If the disc is brought from a cold to a warm environment, moisture may form on the disc.

Wipe this moisture off with a soft, dry, lint-free cloth before using the disc.

Improper disc storage

You can damage discs if you store them in the following places:

- Areas exposed to direct sunlight
- Humid or dusty areas
- Areas directly exposed to a heat outlet or heating appliance

ACCESSORIES

User Manual.....	1
Remote Control.....	1
Power Cord.....	1
Car Adaptor.....	1

All the pictures in this manual are just for your reference, appearance and display should subject to the final product.

TABLE OF CONTENTS

GETTING STARTED

IMPORTANT INSTRUCTIONS.....	1-3
ACCESSORIES.....	3
FEATURES.....	5
GENERAL PARTS.....	6-7
REMOTE CONTROL.....	8-9
REMOTE CONTROL PREPARATION.....	10
BASIC CONNECTION.....	11-13

OPERATIONS

BASIC OPERATIONS.....	14-19
DVD.....	14-18
TV.....	19
LIVE TV.....	20-22
CONNECTION.....	23-25
MULTI-SCREEN.....	26-27
SMART FUNCTIONS.....	28-30
PICTURE AND SOUND.....	31-35
CHANNEL.....	36
ACCESSIBILITY.....	37
SYSTEM AND SUPPORT.....	38-40

FOR REFERENCE

MAINTENANCE.....	41
WALL MOUNTING.....	41
STAND INSTALLATION.....	42
SPECIFICATIONS.....	43
TROUBLESHOOTING.....	44-45

FEATURES

23.6" LED DISPLAY

This player has a built-in LED display window to provide clear vision and low radiation.

With Built-in DVD Player

Support Auto Program Scanning Function

Support Digital Broadcasting Reception

Compatible with USB for Music, Photo and Video Playback (TV Mode)

Support Multi-languages On Screen Display

Support Full Function Remote Control

Compatible with LAN, HDMI Input

Compatible with EARPHONE and OPTICAL Output

With Detachable Stand Holder

With External Antenna Jack

 
With Built-in Speakers

With Noise Reduction Function


GENERAL PARTS

MAIN UNIT

Front View

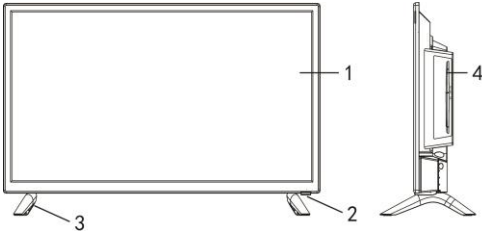


Back View

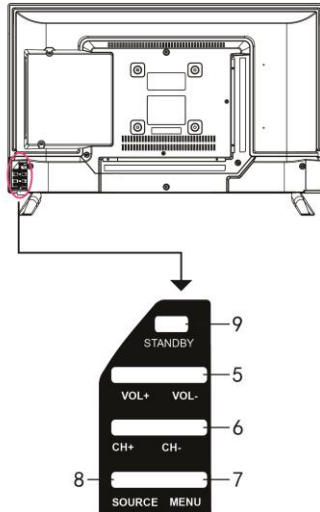 

1. LED display screen
2. Remote control sensor / Power indicator- In standby mode the indicator light will display red color; when switching on the unit the indicator light will display blue color.
3. Stand holder
4. Disc slot - To insert a disc according to the silk screen on the side of this slot.
5. VOL +/- button - To increase/decrease the volume level or move left/right.
6. CH +/- button- To select next/previous channel or move up/down.
7. MENU button- To enter menu setting page.
8. SOURCE button- To select the input source.
9. STANDBY button- To turn ON/OFF the TV.

GENERAL PARTS

 Back View

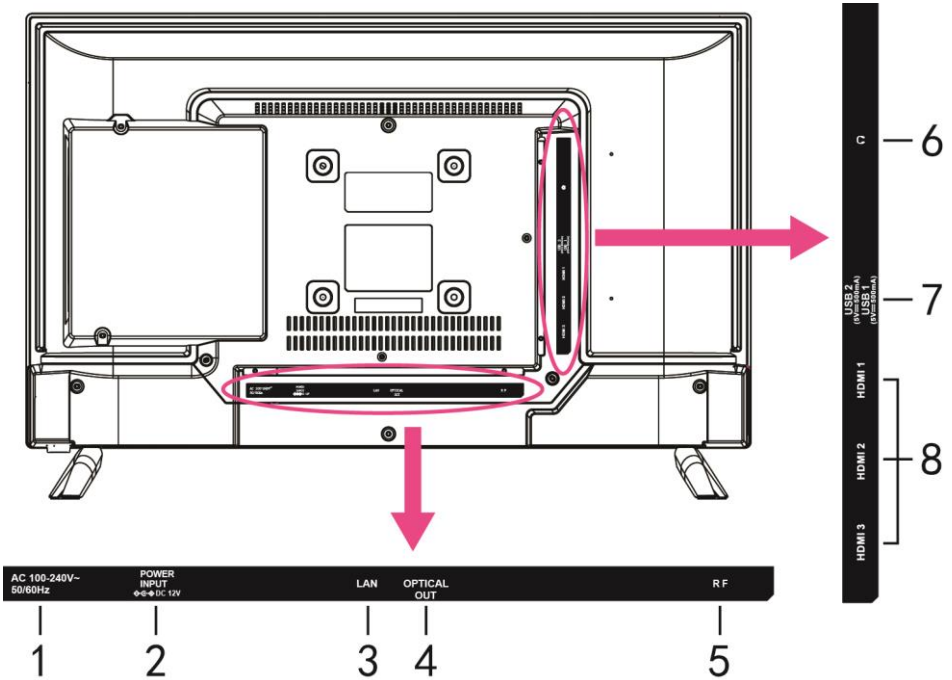

1. Power input (AC cord)
2. Power input (DC)
3. LAN input terminal
4. OPTICAL output terminal
5. RF input terminal- To connect the external antenna.
6. EARPHONE output terminal
7. USB 1/2 input terminal (TV)
8. HDMI1/2/3 input terminal

REMOTE CONTROL

1 **STANDBY(POWER)**

Set the unit in standby mode; press it again to switch it on.

2 **INPUT / ▲**

Press to select desired input source. / Press to open or close the disc compartment in DVD mode.

3 **Number buttons (0-9)**

Input the number information, such as channel number and so on.

4 **MTS**

To select desired soundtrack in TV mode.

5 **—**

Switch the digit when watching TV programs.

6 **◀◀**

Move fast backward.

7 **▶▶**

Start/pause playing.

8 **▶▶▶**

Move fast forward.

9 **■**

Stop playing.

10 **MENU**

Call out the main menu or return to previous menu.

11 **4 Color**

Customized in different page.

12 **DIRECTION/OK**

Move up, down, left, right/Confirm.

◀◀ / ▶▶

Press to play previous chapter. / To play next Chapter.

13 **BACK**

Return to the previous interface or menu.

GOTO

To play a certain point in DVD mode.

14 **EXIT**

Exit the current interface or menu.

SETUP

Press to enter setup menu in DVD mode.



REMOTE CONTROL

15 HOME

Enter home page.

16 VOL +/-

Increase/decrease the volume level.

17 CH +/-

Play the next/previous program.

18 MUTE

Mute the sound.

19 LIVETV

TV source.

20 SLEEP

Set desired sleep time.

21 CC

CC in LIVE TV.

22 FREE

Press to enter the free video directly.

23 SPORTS

Press to enter the sport programme directly.

24 DEEZER

Press to enter the deezer directly.

25 Content area

Six buttons for CSP Apps.



REMOTE CONTROL PREPARATION

BATTERY INSTALLATION

Install the batteries as the following pictures. Be sure + and – terminals are positioned as indicated in the battery compartment (Fig1).

SERVICE LIFE OF BATTERIES

- The batteries normally last for one year although this depends on how often the remote control is used.
- If the remote control fails to work even when it is operated near the player, replace the batteries.
- Use two size AAA dry batteries.

NOTE:

 
- Do not drop, step on or otherwise impact the remote control. This may damage the parts or lead to malfunction.
- If the remote control is not going to be used for a long time, remove the batteries.

REMOTE CONTROL OPERATION

Point the remote control from no more than about 6m from the remote control sensor and within about 60° of the front of the player (Fig2).

NOTES:


- The operating distance may vary according to the brightness of the room.
- Do not point bright light at remote control sensor.
- Do not place objects between the remote control and the remote control sensor.
- Do not use this remote control while simultaneously operating the remote control of any other equipments.

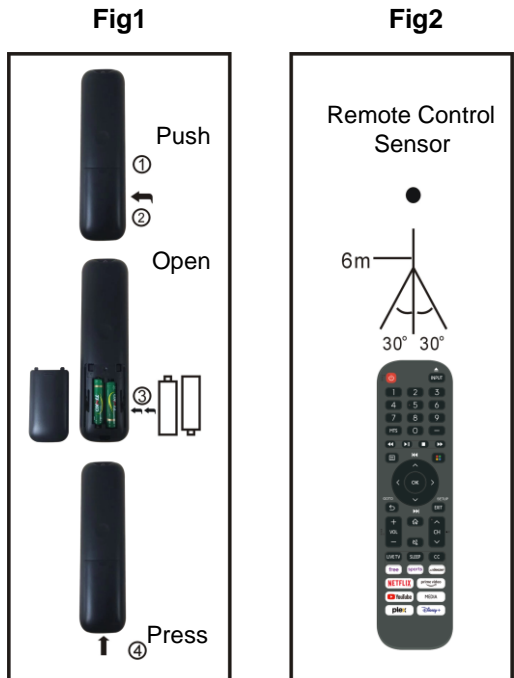

BASIC CONNECTION


- Ensure all the cables are disconnected from the main unit before connecting to AC power source.
- Read through the instructions before connecting other equipments.

 CONNECTING TO AC POWER SOURCE

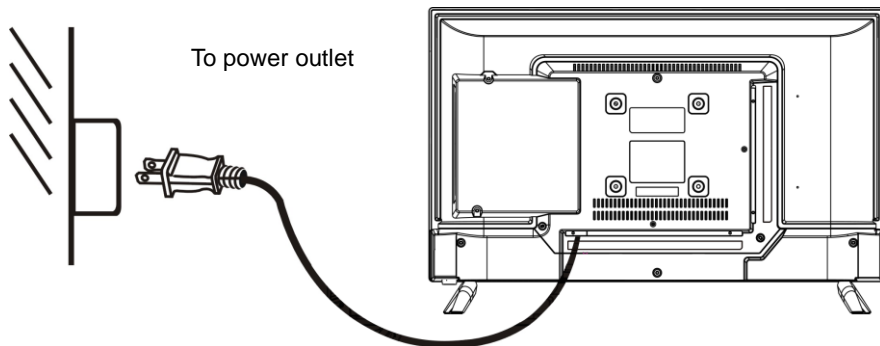


CONNECT EXTERNAL ANTENNA TO UNIT

 
Install external antenna into antenna jack for best picture.

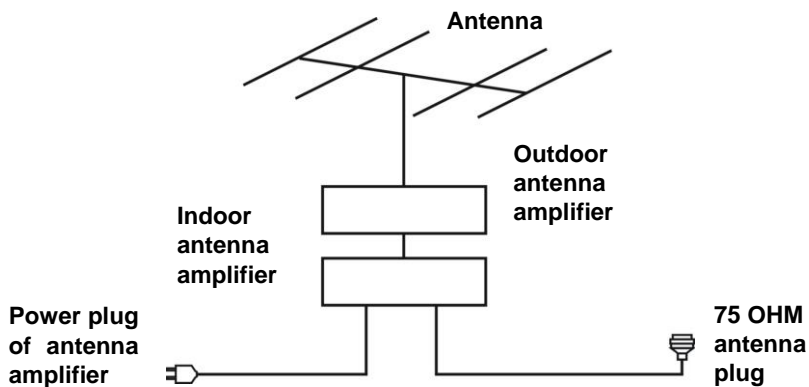


HDMI CONNECTION

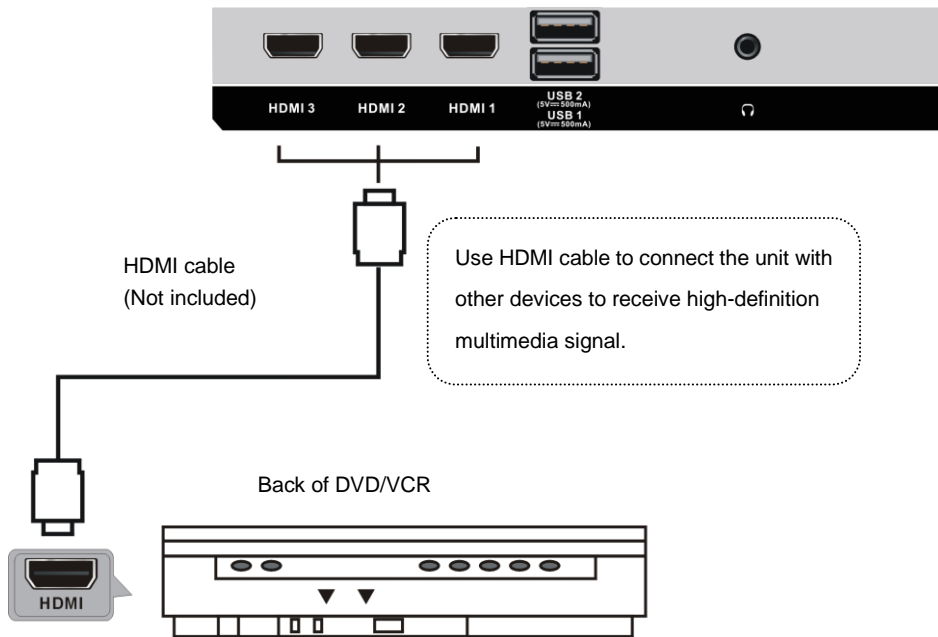 

EARPHONE CONNECTION

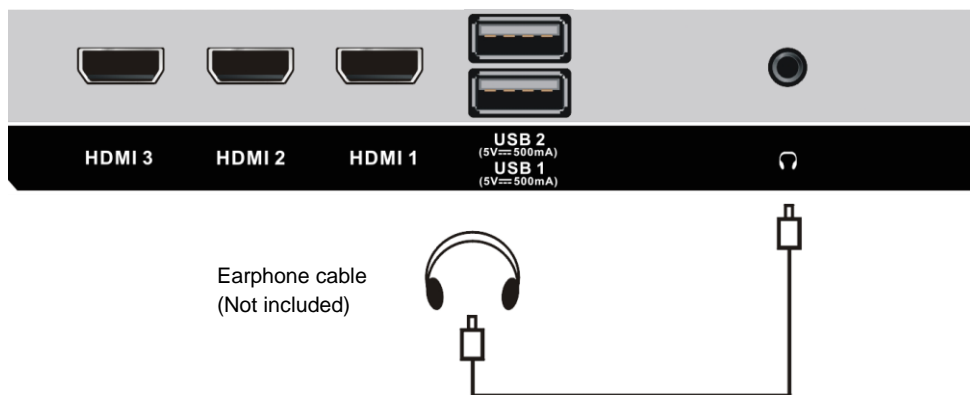 

USB CONNECTION

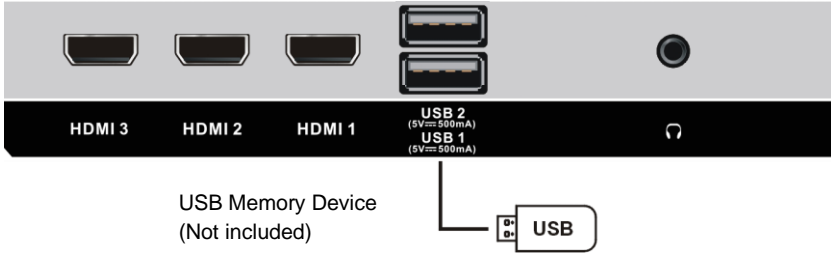 

OPTICAL CONNECTION



Use OPTICAL cable (not included) to connect the unit with amplifier or other audio decoding devices for coaxial audio signal output.

RJ-45 (Local Area Network) Connection



Use a LAN cable (not included) to connect this TV with available network.

MAKE SURE ALL THE EQUIPMENTS AND POWER PLUG ARE CONNECTED PROPERLY AND THE UNIT IS SET IN CORRECT MODE BEFORE OPERATING.

BASIC OPERATIONS

- Press **STANDBY** button on the unit or remote control to power **ON** the unit (indicator will glow blue); press it again to power **OFF** (standby mode) the unit (indicator will glow red).

DVD

1. Basic play

Press the **OK + EXIT** button to switch to DVD mode. If there is no disc in the DVD player the screen will show "NO DISC". Insert Disc according to picture next to disc slot. Do not touch the playing surface. Hold the disc around the outside with your fingers and place the disc into the slot. The player will automatically draw the disc into the player. To "Eject" the disc, press the "▲" button on the remote control.

2. Stopping play

Press ■ (STOP) button to PRE STOP. Press ■ (STOP) button again to stop playing

NOTE: When player is stopped, the player records the point where STOP was pressed (RESUME function). Press ►| button again, playback will resume from this point. When the tray is taken out or ■ (STOP) is pressed again, the RESUME function will be cleared.

 
3. Skipping ahead or backward

Skipping ahead

During playback, press ►► button to play the next chapter (Video CD/CD).

Skipping backward


During playing, press ◀◀ button to play the previous chapter (Video CD/CD).

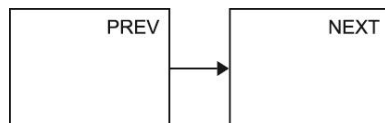

4. Fast forward/Fast backward

During playback, press ►► button or ◀◀ button to fast forward/backward.

Press ►|| button to resume normal play.

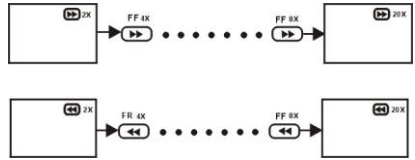 

5. Pause/play

During playback, press ►|| button to pause playing, press it again to resume normal playback.



6. Music playback

a) Insert the disc which contains music files and after a few seconds, the screen will show all the folders on the disc.

b) Select the folder you want to play by navigation buttons and press the OK button to confirm.

c) The files in this folder are displayed and select the desired song by navigation buttons, then press the ►|| or OK button to start playback.



7. Movie playback

a) Insert the disc which contains movie files and after a few seconds, the screen will show all the folders on the disc.

b) Select the folder you want to play by navigation buttons and press the OK button to confirm.


c) The files in this folder are displayed and select the desired file by navigation buttons, then press the ►|| or OK button to start playback.

d) Press STOP ■ button to return to play list page.



8. JPEG playback

 For JPEG picture CD, select the folder you want to play by the navigation buttons and press OK button to confirm. The files in this folder are displayed and select your pictures by using the up/down navigation buttons and press OK button to confirm. Thumbnail of picture will be displayed while you scrolling across the file name. Then press the ► button to start playback.

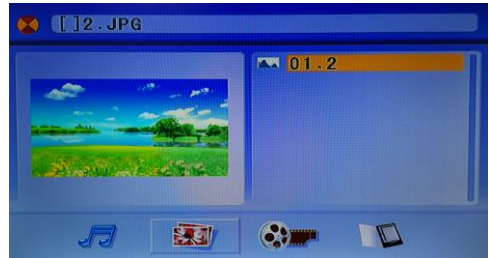

NOTE: The time of loading and displaying a picture depends on its size. During playback, press STOP ■ button to return to file selecting page.

Rotating pictures

- Press RIGHT navigation button to rotate the picture clockwise.
- Press LEFT navigation button to rotate the picture counter-clockwise.

Flipping pictures

- Press UP navigation button to flip the picture vertically.
- Press DOWN navigation button to flip the picture horizontally.

9. Enjoying Video CD with playback control

a) Press number buttons to select corresponding track.

Example: Track 9, press 0 and 9, several seconds later, it will automatically switch to track 9.

Track 15, press 1 and 5, several seconds later, it will automatically switch to track 15.

NOTE: The function is available when press the MENU button repeatedly to select MENU PLAY "OFF".

b) Press ► or ◀ button, the player will play the next or previous track.

10. GOTO

Press GOTO button continuously to select the item you want to set and enter a time number, chapter number, track number, etc. Accordingly, the disc will be played from the selected point.

11. Initial settings

Once the initial programming is entered it will be retained in memory until changed, the player can always be operated under the same conditions.

Common procedure for initial settings

- Press SETUP button on remote control.
- Use the navigation buttons to select preferred item, and press OK button, each screen for setting the value is displayed. Then move the navigation buttons to set the item and press OK button to confirm the settings.
- Press SETUP button again to close setup menu.
- Use LEFT or RIGHT navigation button to switch to another main setup item. Then press DOWN button to confirm the selection. Press RIGHT or OK button to enter sub-menu page; press LEFT button to return to previous menu page.

1. GENERAL

1.1 TV DISPLAY - It is for selecting TV output mode.

Available Options:

- a) 4 :3 PanScan.
- b) 4 :3 Letterbox.
- c) 16:9.

1.2 OSD LANGUAGE - It is used to choose your desired OSD language.

1.3 SCREEN SAVER - If no operation is carried out for around 5 minutes, screen saver will display on the screen when SCREEN SAVER is ON.

1.4 ANGLE MARK - It is used to select whether or not the multi-angle icon is display on screen when a Multi-angle disc is playing.

1.5 LAST MEMORY - Enter another input source during DISC playback, and then back to DVD input source again, this unit will resume playback from the point where last playback was stopped, if LAST MEMORY is ON.



2. AUDIO

SPEAKER SETUP- It is used to select desired audio output mode.

Options:

- a) STEREO
- b) MONO L/R
- c) MIX MONO



3. PREFERENCE

3.1 TV SYSTEM - Select desired TV system.

3.2 DEFAULT - It is used to reset to factory settings.



TV

- Press **STANDBY** button on the unit or remote control to power **ON** the unit (indicator will glow blue); press it again to power **OFF** (standby mode) the unit (indicator will glow red).

SELECT DESIRED PROGRAM

1. Press CH+ button to play next channel.
2. Press CH- button to play previous channel.
3. Press number buttons on remote control directly to select desired program.

VOLUME CONTROL

- Press VOL+ or VOL- to adjust the level of current volume.
Available range: 0-100.

MUTE CONTROL

- Press MUTE button to mute the sound, press it again to turn on the sound.

SOURCE SETTING

- Press INPUT button on the remote control to display the sources list.
- Press navigation buttons to select desired input source, and then press OK button to confirm selection.

INFORMATION DISPLAY

- Press UP navigation button on remote control to display information of current program.

MEDIA PLAYBACK

- Press INPUT button on remote control to switch the unit to USB mode.
- Insert a USB memory device into USB slot before following operations.
- Press UP/DOWN/LEFT/RIGHT navigation button to move the cursor.
- Press BACK button to return to previous menu page.

LIVE TV

Channel Scan

Auto Channel Scan

 > **Settings** > **Channel** > **Auto Channel Scan**

 
Note:

Before you select Automatic Scan, you can press

 > **Settings** > **Channel** > **Tuner Mode**,


press OK button into the sub-menu, select


Antenna or Cable.

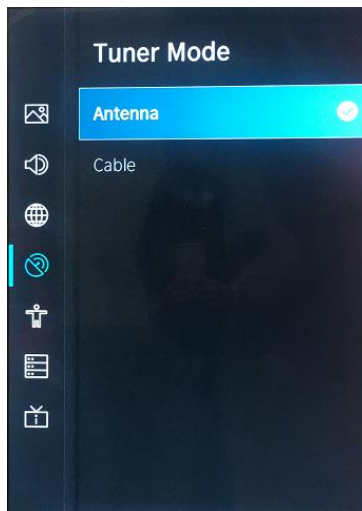

Channel List

Display the channel list

 In Live TV, press  button on the remote control to display the channel list menu.

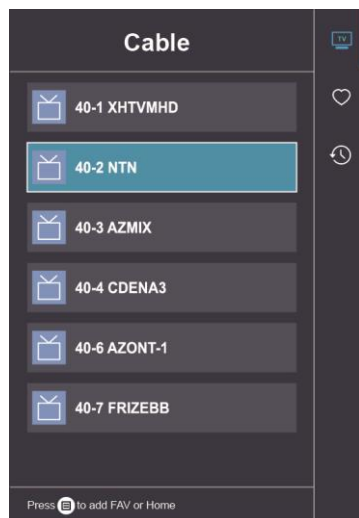


Favorite

Adding channels to your 'Favorites' list

Press **OK** button to call out the channel list, the channel list appears on the right side of the screen.

Press **Menu** button and Navigation button to select your favorite channel; Press **OK** button to confirm.

 Press **Left Arrow** and Choose **Add to Favorite**; press OK button and a heart-shaped icon will appear next to your favorite channel.

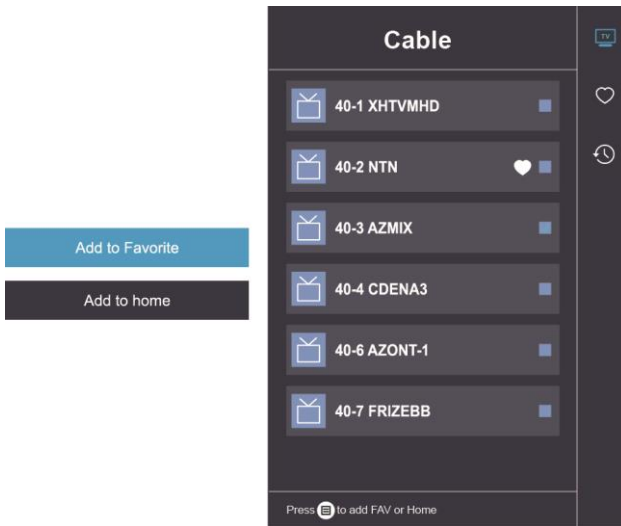

Viewing your 'Favorites' list

Press **OK** to call out the channel list, the channel list appears on the right side of the screen.

Press Navigation buttons to select **Favorite icon** and press OK button to confirm, then your favorite channel with a heart-shaped icon will appear on the favorite list.

 
Deleting channels from your 'Favorite' list

Press **OK** to call out the channel list, the channel list appears on the right side of the screen.

Press Navigation buttons to select **heart-shaped icon** and press OK button to confirm;

Press **≡** button and Navigation buttons to select your desired channel; Press **OK** button to confirm.

Press **←** and Choose **Delete Fav. Channel**; press OK button to delete the selected channel.

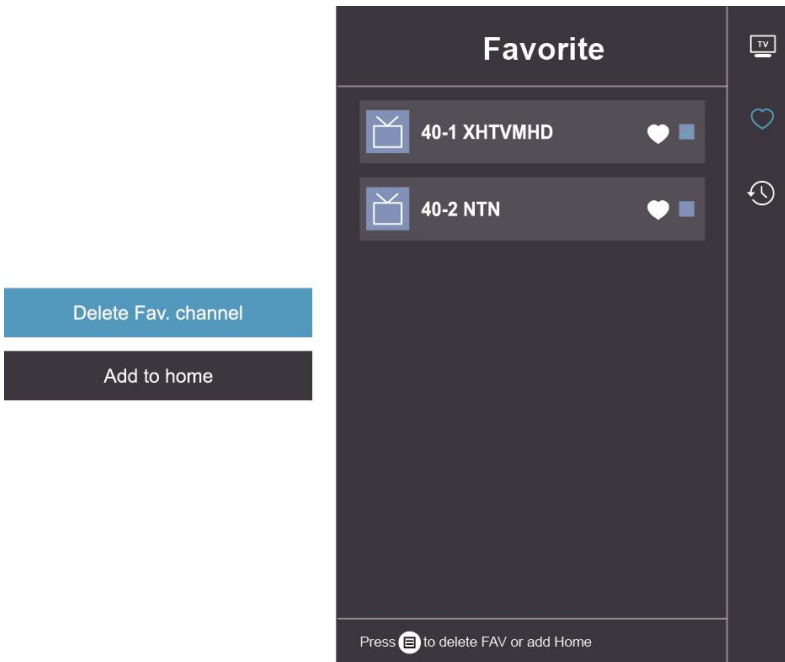

Note:


These steps should be operated under TV inputs.


Before you edit the favorite lists, complete channel scan first.

 
CONNECTION

Wired LAN

Connecting to the Internet

 > Settings > Network > Network Configuration

You set the TV network by selecting Configuration and press the  button to enter the sub-menu.

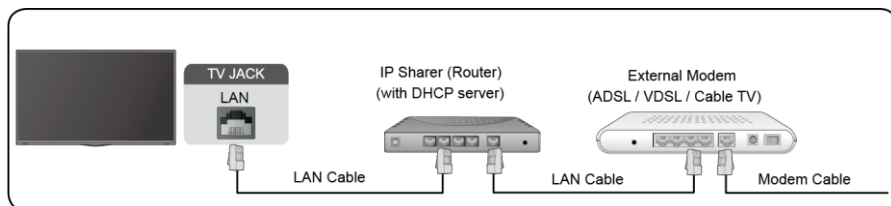

Automatically obtain an IP address

1. If you connect to the wired network, the TV will automatically obtain an IP address and connect to the network.
2. If the connection fails, disconnected message will display for the Ethernet status. Retry or enter the IP settings, and select Manual to input the information again.

Manually enter the IP address

1. Enter the IP settings to select Manual.
2. Enter the IP Address, Netmask, Gateway, DNS Server 1 and DNS Server 2 in the menu.

Note:

 
This section is only for 4K models.

You get access to the Internet through your TV.

The default option of IP Settings Mode is DHCP.

Wireless

Connecting to the Internet

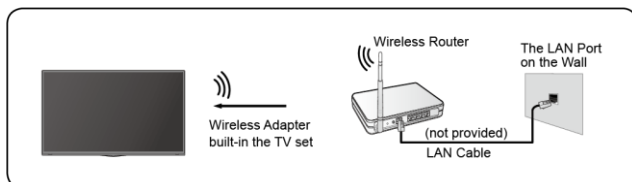


Note:


You get access to the Internet through your TV.

Connect to an available wireless network.

Make sure that you have the wireless router's SSID and password before attempting to connect.

Connecting to a Wireless Network

 > **Settings** > **Network** > **Network Configuration**

You set the TV network by selecting Configuration and press the  button to enter the submenu.

Connection Type

Choose a wireless network connection to access the Internet.

Refresh

Refresh wireless network.

Advanced Settings

Configure the advanced wireless network settings for the TV.

Add

You can add wireless network.


Note:

If no wireless router is found, select **Add** and enter the network name in the SSID.

If no wireless router is found, select **Refresh**.

HDMI-CEC

You can use your TV remote to control the external devices that are connected to the TV by HDMI cable. The external devices need to support HDMI & CEC Function (HDMI-CEC).

Connecting an external device through HDMI-CEC Function  >

Settings > **System** > **HDMI-CEC**

1. Set **CEC control** to On.
2. Connect an HDMI-CEC-compliant device to the TV.
3. Turn on the connected external device. The device is automatically connected to

the TV. After connection is finished, you can access the menu of the connected device on your TV screen using your TV remote and control the device.

Note:

HDMI cables must be used to connect HDMI CEC-compatible devices to your TV. The HDMI CEC feature of the connected device must be turned on.

If you connect an HDMI device that is not HDMI CEC-compatible, all the HDMI-CEC control features do not work.

 
Depending on the connected HDMI device, the HDMI-CEC Control feature may not work.

HDMI Device

Connect an HDMI cable from an external A/V equipment.


Some devices such as DVD player require HDMI signal to be set to output in the device's settings. Please consult your device user manual for instructions.

Please note that the HDMI connector provides both video and audio signals, it's not necessary to connect an audio cable.

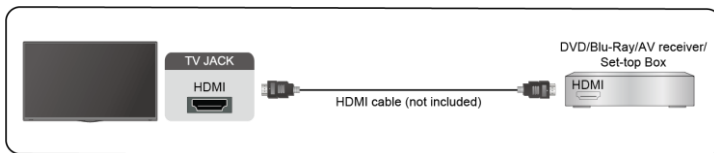

USB Device

 Connect the USB devices such as hard drives, USB sticks and digital cameras for browsing photos, listening to music.

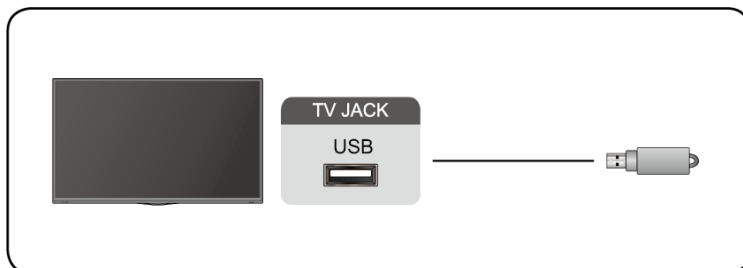

Support format: FAT32.

Multi-screen

 
Screen Sharing

Mirror content from your device to the TV.

INPUT > Screen Sharing

Turn on the casting function of your Android/Windows10 device.

Find the TV name in the searching list of your device and select it. Wait for the connection progress to complete and the content on your device will be displayed on the TV.

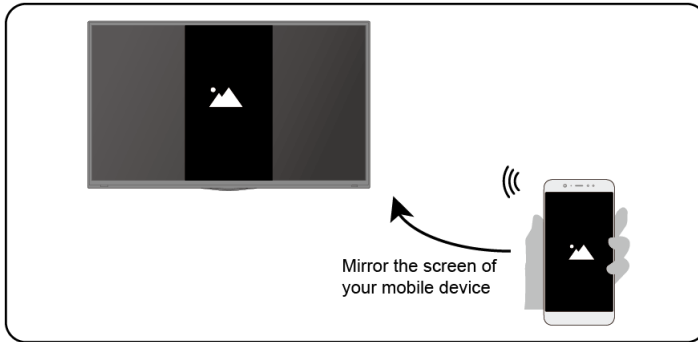


Note:

Some Android devices may not support casting.

Content Sharing

Share media content, like videos, music or photos, from your device to the TV screen.

 
Before you use this function, turn on Content Sharing at  > **Settings** > **System** > **Application Manager** > **Content Sharing**.

Establishing Content Sharing connection between the TV and your device

1. Turn on the content sharing function of your device.
2. Find the TV name in the searching list of your device and select it.
3. Wait for the connection progress to complete, and select the content you want to share.

View media content of your device

Press INPUT button on your remote, and select a media content on the screen.

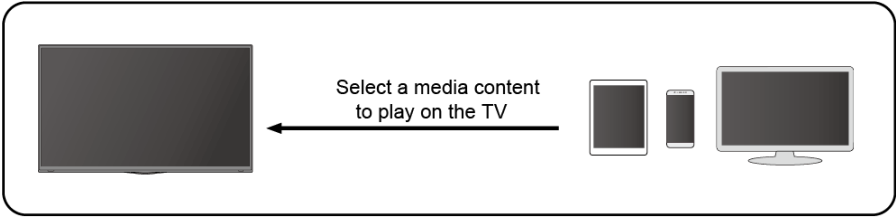

Note:

Make sure our device and the TV are connected to the same network.

Some devices may not support content sharing. If your device doesn't support content sharing, you can download an app that supports the function.

If you want to mirror content from your device, go to **INPUT >Screen Sharing**.

Media

Playing Media contents

 > **My Apps > Media**

 
By default, there are **Content Sharing** displayed on the Media screen. If your mobile device is connected to the TV, its name also appears on the Media screen.

Note:

For more information about Content Sharing, refer to its detailed introduction.

 > **My Apps > Media > connected device**

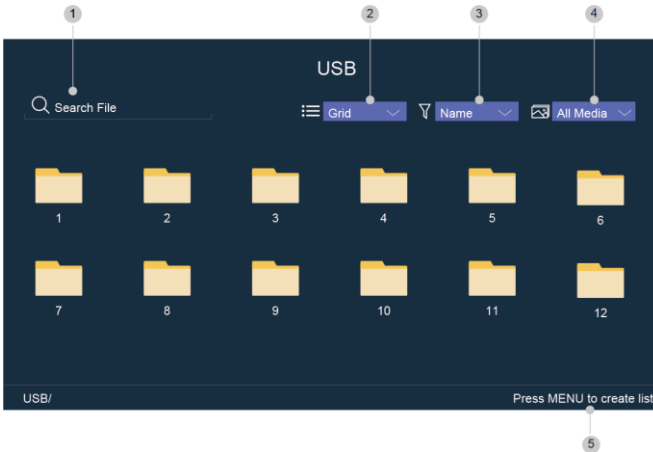

Select the content you want to play on the screen, like pictures, videos and music.



1. Input the content name you want to play.
2. Arrange the content list by **Grid, List**.
3. Arrange the content list by **Name, Date Modified, Size**.
4. Filter the content list by **All Media, Photo, Video, Music**.
5. Create a photo, music, or video playlist.

Playing background music during viewing pictures

You need to:

- Choose a picture to playback.
- Press  /  button to call out playbar.
- Select Background Music and choose your music to create a Music Playlist.
- Play the background music during viewing pictures.

Note:


The TV may be support the following file formats:

Medium	File Format
Video	.MP4, .MOV, .MPG, .MPEG, .FLV
Picture	.jpg, .BMP, .PNG, .GIF
Music	.MP3, .AAC, .wav


For more information about connection to other device, refer to the detailed introduction of each part.

Home

Getting familiar with the Home screen

Run the TV more conveniently by selecting the corresponding sections. Press  button.

You can always view the current time at the top of the Home screen.

If your TV is connected to the Internet through a wireless connection, then the icon  will be at the top right corner of the screen.

Manage apps

Select the item you want to move, press  button to manage.

Search

Search the app you want.

Inputs

Select the input you want.

Settings

Display the Settings menu.

Notifications

Allow pop-up notifications to appear for useful information and events that occur with your TV.

Select **Notifications** on the Home screen, and select **Settings** then display **Advertising, New Arrivals, Warnings And Legal Statements, System Message**, from which you can choose the types of notifications you would like to receive.

VIDAA Account

Sign in your VIDAA account.

 
A VIDAA account gives you all the best feature of your smart TV and always keeps it up to date.

Picture and Sound

Adjusting the Picture Quality

Adjust current picture mode to apply to all sources or just current source.

The menu is only for reference. The following modes may differ from the actual product.

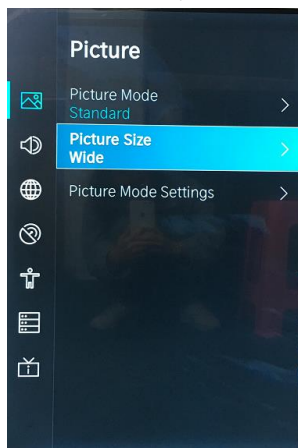

Choosing a picture mode

 > **Settings** > **Picture** > **Picture Mode**

You can select the Picture Mode that provides the best viewing experience.

Vivid

Standard

Energy Saving

Theater

Game

Sports

Galibrated

Choosing a Picture Size

 > **Settings** > **Picture** > **Picture Size**

You can adjust the picture aspect ratio based on the content you are watching.


Auto

Normal

Zoom

- Wide
- Direct
- Dot-By-Dot
- Panoramic
- Cinema

Configuring advanced picture settings

 > Settings > Picture > Picture Mode Settings



Adjust display setting for each Picture Mode.

Apply Picture Settings: Adjust current picture mode to apply to all sources or just current source.

Backlight: Adjust image backlight.

Contrast: Adjust image contrast.

Brightness: Adjust image brightness.

Color : Adjust image color density.

Tint: Adjust the image tint to view the natural skin tones of people on the screen.

Sharpness: Adjust the image edge sharpness.

Overscan: Turn on if you are receiving analog antenna or cable input.

Color Temperature: Adjust the overall color of the image. (Optional: High/Medium/Mid-Low/Low).

Noise Reduction: Improve how clear the picture appears by reducing noise.

 
Digital Noise Reduction: Improve picture clarity by reducing video noise.

HDMI Dynamic Range: Select Limit for 480p DVD players and select Full for Blu-ray.

Active Contrast: Automatically adjust contrast according to video content to improve detail.

Expert Settings: Adjust the color space and Gamma to best suit the content you're viewing.


Reset Picture Settings: Restore all the picture settings in the current picture mode to the factory default values.

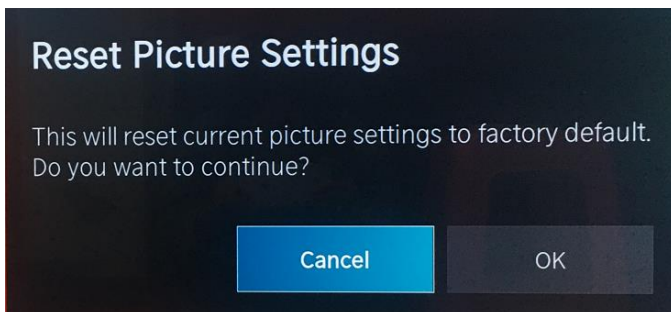

Adjusting the Sound Quality

Adjust current sound mode to apply to all sources or just current source.

 The menu is only for reference. The following modes may differ from the actual product.

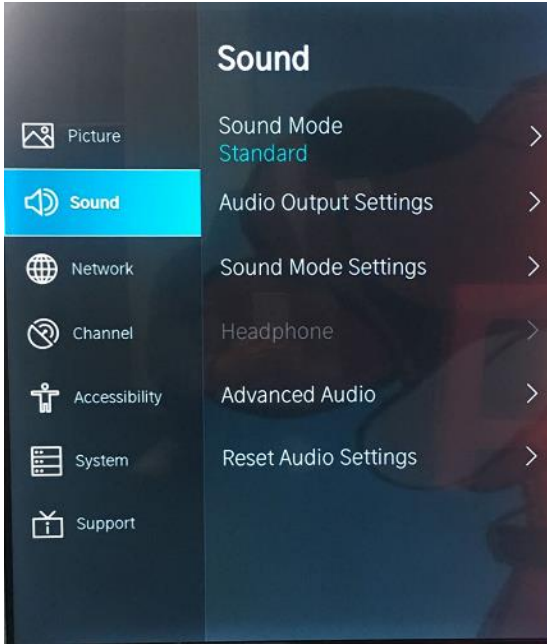

Choosing a sound mode

 > **Settings** > **Sound** > **Sound Mode**

You can select a favorite sound mode suitable for the content type or the listening environment.

Standard: Produced a balanced sound in all environment.


Theater: Increase the surround sound effect and provides a more prominent subwoofer response.

Music: Preserves the original sound. Good for musical programs.

Speech: Low and high frequencies are attenuated to improve the reproduction and clarity of the human voice.

Sports: Optimized sound for watching football.

Late Night: Improve the reproduction and clarity of the human voice with a low volume level.

 > **Settings** > **Sound** > **Audio Output Settings**

Switches the sound from the TV speakers to Optical or HDMI ARC output connectors..

☰ > Settings > Sound > Sound Mode Settings

Customize selected Sound Mode.

☰ > Settings > Sound > Headphone

Set the sound out mode for headphones.

☰ > Settings > Sound > Advanced Audio

Tune the audio settings to improve sound quality.

☰ > Settings > Sound > Reset Audio Settings

Reset all Audio settings in current audio mode to the factory default values.

Hotel Mode

 
☰ > Settings > Sound > Audio Output

Settings>Balance

Press 0548, then the Hotel Mode will display.


Press OK to set the hotel Mode On.

Press OK again to set the Hotel Mode OFF.

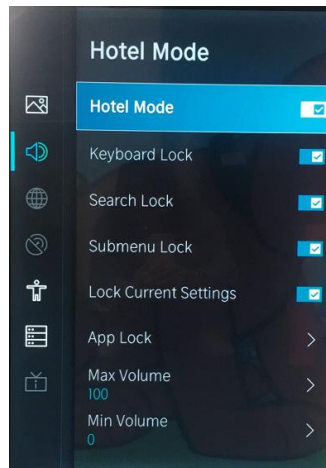

Channel

 Press  > **Settings > Channel**

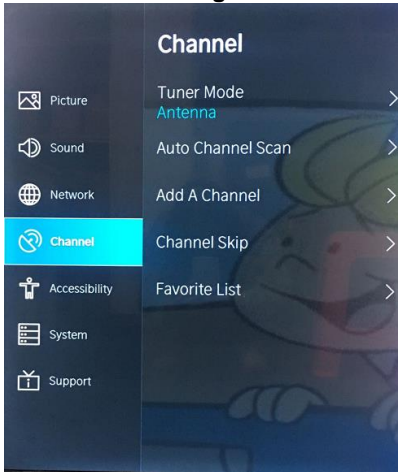

Press Navigation buttons to select the option that you want to adjust in the Channel menu. Press OK button to adjust.

Tuner Mode

Select if you receive TV channel over the air(antenna) or trough a cable set top box.

Automatic Channel Scan

Automatic search can search for effective program channel automatically.

Add A Channel

Type in a channel to add it manually to your TV.

Channel Skip


Skip selected channels from your Channel List.

 
Favorite List

Add Channels to your Favorite List.

Accessibility

Press Navigation button to select Accessibility

 > **Settings > Accessibility**

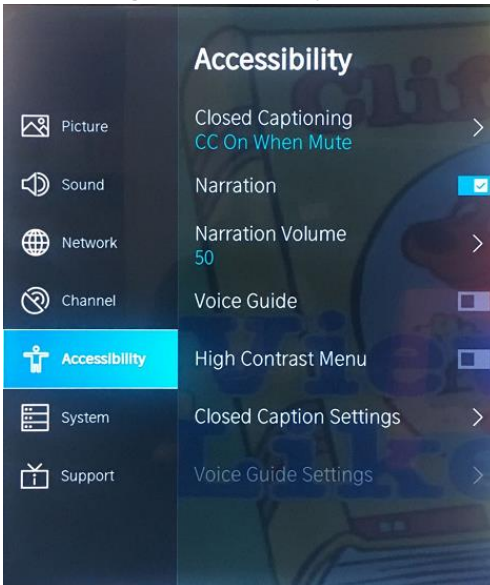

Closed Captioning: Set closed captions display mode.

Narration: Enables broadcasted descriptive audio for visually impaired.

Narration Volume: Independently adjust the volume of voiceover.

 
Voice Guide: Reads the menu items for visually impaired.

High Contrast Menu: Turn High Contrast Menu on or off.

Closed Caption Settings: Allows customization of closed caption text display.

Voice Guide Settings: Allows customization of spoken menu language.

System and Support

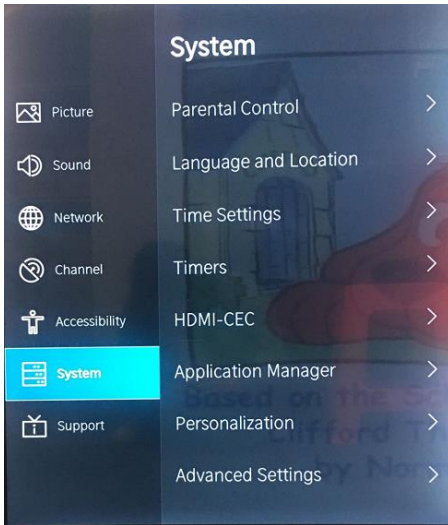

☰ > Settings > System > Parental Control

Turn on Parental Control to block children from being able to view certain programs.

☰ > Settings > System > Language and Location

Select the language used for this TV and your location.

☰ > Settings > System > Time Settings

Time Zone

Select your time zone; press **▶** to enter sub-menu to setup.

Time Format

Set the time format(Optional: 12-hour/24-hour).

Date Format

Select the date format mm-dd-yyyy/dd-mm-yyyy/yyyy-mm-dd.

Daylight Savings

Select whether to apply Daylight Savings Time to the TV.

Date and Time

Set the date and time.

☰ > Settings > System > Timers

Adjust the timer settings to suit your preference.

Sleep Timer

Set the sleep timer to automatically turn the TV Off within a specified time: Off, 10 / 20/ 30/ 40/ 50/ 60/ 90/ 120 Minutes.

Power On Timer

Set the clock for the time you want the TV to turn on automatically. You can set the time only once or set the time in specified date weekly.

Power Off Timer

Set the clock for the time you want the TV to turn off automatically. You can set the time only once or set the time in specified date weekly.

Menu Timeout

Set the amount of time that you would like for the menu to display: 10s/ 20s/ 30s/ 60/ 90s/ Off.

> **Settings > System > HDMI-CEC**

Control your TV and CEC-enabled devices with one remote.

> **Settings > System > Application Manager**

Play content from another device and remove this TV from your application accounts.

> **Settings > System > Personalization**

Menu display personalization settings.

> **Settings > System > Advanced Settings**

Access the Advance Settings menu.

Press  > **Settings > Support**



System Info

View System information.

Self Diagnosis

Perform self diagnosis to test sound, picture and connections.

E-Manual

Launch E-Manual and get to know more about your TV.

Bandwidth Monitoring

Test the speed with a third-party website.

Mobile App Installation

Install Remote NOW app on your smart phone to control your TV..

Terms and Conditions, Privacy Policy

Click to read our terms and policy.

System Update

Set your TV to receive the latest firmware.

Factory Reset

Reset your TV to the factory settings.

MAINTENANCE

- Be sure to press POWER button to set the player to the standby mode and disconnect

 
the power plug before maintaining the player.

- Wipe the player with a dry, soft cloth.
- If the surface is extremely dirty, wipe clean with a cloth which has been dipped in a weak soap-water solution and wrung out thoroughly, and then wipe again with a dry cloth.
- Never use alcohol, benzene, thinner, cleaning fluid or other chemicals. And do not use compressed air to remove dust.

WALL MOUNTING

- Contact a professional for assistance when wall mounting your TV. We are not responsible for any damage to the product or injury to yourself, if you mount the TV on your own.
- Do not wall mount the TV while TV is turned on. It may cause personal injury due to electric shock.
- Use standard M4*10mm screws (4 pieces) to mount this TV.

Back of your TV

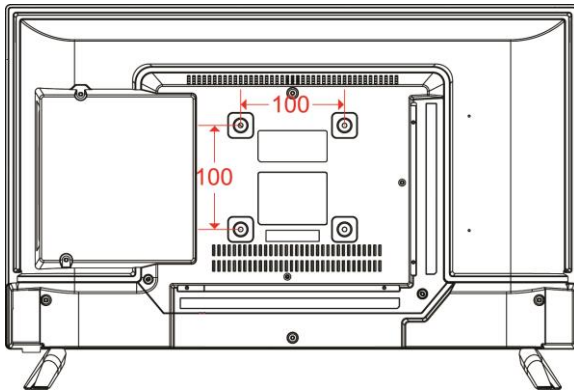

STAND INSTALLATION

Your TV is packaged with the Stand and the Cabinet separated. Before enjoying this TV, please carry out the Stand Installation according to the instructions below.

Step 1

Place the TV faced down on a soft cloth or cushion to prevent the panel from being damaged.

Step 2

 
Align the stand and the bottom of this TV.

Step 3

Tighten the included screws with a screw driver.

NOTES:

- Unplug the power plug first when installing or removing the TV Stand.
- To avoid any damage to this TV, contact one or more partner for assistance when installing or removing the TV stand.

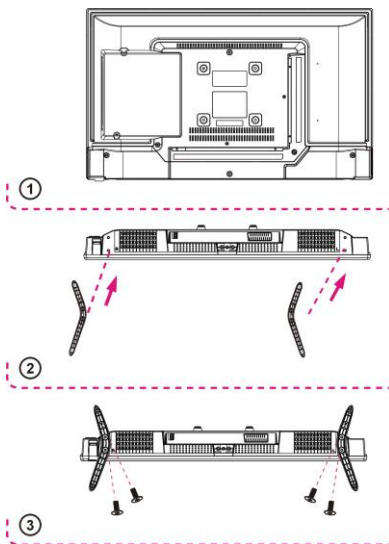

SPECIFICATIONS

Display Device	23.6 inch LED TV
Resolution	1366×768
Display Colors	16.7M
Contrast Ratio	3000:1
Aspect Ratio	16:9
Life Time	30,000 Hrs
Supported Discs	DVD/CD/CD-RW/CD-R/VCD Compatible
Multimedia Playback	Music
	Photo
	Video
POWER SOURCE	AC 100-240V, 50/60Hz + DC 12V
POWER CONSUMPTION	Max.42W
OPERATION TEMPERATURE	-5°C to 45°C
MEASUREMENT	553 (W) × 166(D) × 370(H) mm
WEIGHT	Approx. 2.72 kg

USB 2.0/Max 128G

Medium	File Format
Video	.MP4, .MOV, .MPG, .MPEG, .FLV
Picture	.jpg, .BMP, .PNG, .GIF
Music	.MP3, .AAC, .wav

Specifications are subject to change without notice.

GENERAL TROUBLESHOOTING

Check the following points before assuming malfunctions of this unit:

Symptom[COMMON]	Remedy
No power.	Insert the power plug securely into the power outlet.
No picture.	Ensure that the equipment is connected properly.
<ul style="list-style-type: none"> ● No sound. ● Distorted sound. 	<ul style="list-style-type: none"> ● Ensure that the equipment is connected properly. ● Ensure that the input setting for the TV and stereo system are correct. ● Adjust the master volume to a suitable volume by pressing VOL+/VOL- button.
No operations can be performed with the remote control unit.	<ul style="list-style-type: none"> ● Check the batteries are installed with the correct polarities. ● The batteries are exhausted: Replace them with new ones. ● Point remote control at the remote control sensor and operate it again. ● Operate the remote control unit at a distance of no more than 6m from the remote control sensor. ● Remove the obstacles between the remote control and remote control sensor.
No key operation (by the main unit and/or the remote control unit) is effective.	Disconnect the power plug from power source and then reconnect it. (This TV may not be operating properly due to lightning, static electricity or some other factors.)
Symptom[TV]	Remedy
No or poor picture.	<ul style="list-style-type: none"> ● Adjust antenna or use an external antenna. ● Relocate the unit near a window (if inside a building). ● Move units away from this product that causes interference. ● Do Auto Tuning again. ● Try another channel.
No sound or poor sound.	<ul style="list-style-type: none"> ● Check the audio settings. ● Press MUTE button on remote control to cancel mute function. ● Unplug the headphone.
Noise or other interface.	Electronic equipment near the unit is causing interface. Relocate the unit or move the equipment.
Symptom [DVD compatible]	Remedy
Play does not start even when title is selected.	Confirm the region code setting is right.
Symptom [Video CD compatible]	Remedy
No menu play.	This function works only for Video CDs with playback control.

Region code setting

Region coding: All DVD discs are coded by the sales territory. Please note the player is set

to region 1 coding by the factory which cannot be changed. This is in compliance with the DVD patent requirements.

 
 
The region number for this DVD player is



CHANNEL SCAN UNDRE “Antenna /Cable”


STEP 1

Press MENU key on remote control.
Press Left/Right arrow key to select Settings item,
and press OK key to enter the sub-page.
Press Left/Right arrow key to select Channel item,
and press OK key to enter the sub-page.

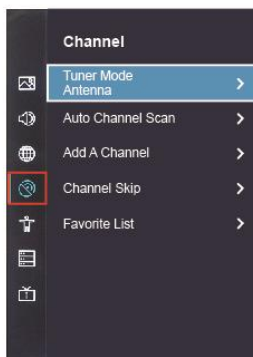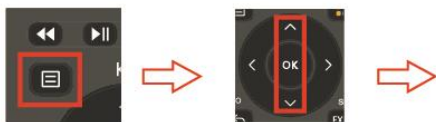



STEP 2

 Highlight Tuner Mode item and press OK key to enter the sub-page. Press Up/Down arrow key to select Antenna or Cable, and press OK key to confirm. Press MENU key to return the previous page.

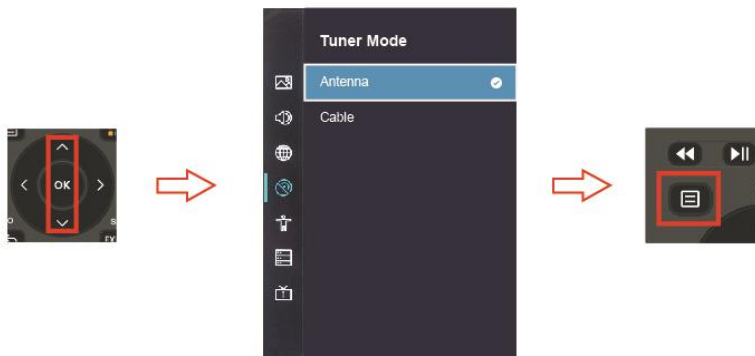

STEP 3

  Press Up/Down arrow key to select Auto Channel Scan and press OK key to start scanning.

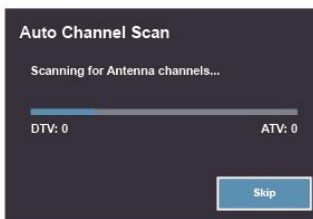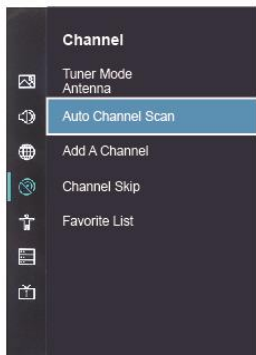

If you have your TV connected with a Cable box or Satellite Receiver box any other Video Input source you don't need to run a channel scan, please follow the procedure below to see the input source.

1. Power on TV and press "INPUT" button on remote control.
2. Press LEFT/RIGHT/UP/DOWN navigation key on remote control to select AV or HDMI input source and press OK key to enter it.

How to change "Input Source" signal

1. Power on TV and press "INPUT" key on remote control.



2. Press navigation key to select desired source.



3. Press OK key on remote control to confirm, and input source will show on TV.



Warranty

Basic Warranty Statement

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required.

Please visit <http://www.supersonicinc.com/warranty> for additional information.