


How to enter the DVD mode

Enter the DVD mode

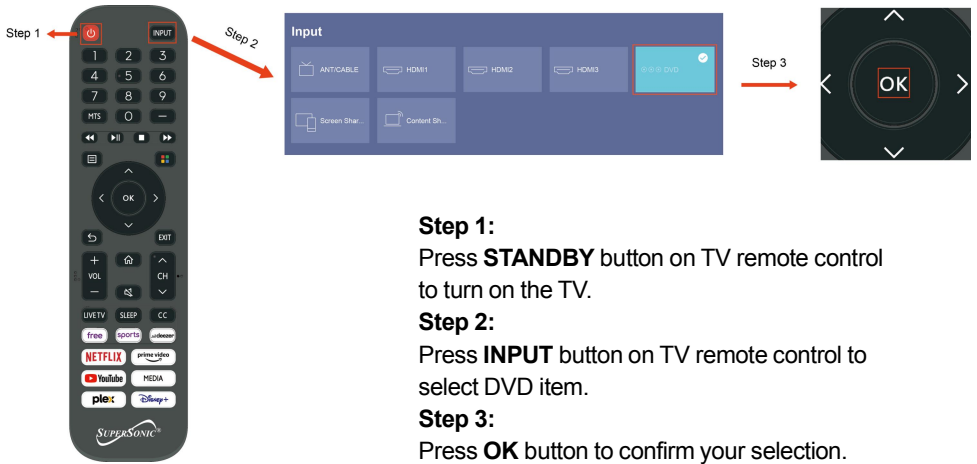

Step 1:

Press **STANDBY** button on TV remote control to turn on the TV.

Step 2:

Press **INPUT** button on TV remote control to select DVD item.

Step 3:

Press **OK** button to confirm your selection.



Step 4:

Press **STANDBY** button on DVD remote control to turn on the DVD.


Step 5:

Insert disc to the disc slot.

Exit the DVD mode



Step 1:

Press  button on DVD remote control to eject the disc and take it out.

Step 2:

Press **STANDBY** button on DVD remote control to turn off the DVD.

To return to TV channels




Step 1:

Press **INPUT** button on TV remote control and select ANT/CABLE item.

Step 2:

Press **OK** button on TV remote control to enter the TV mode.

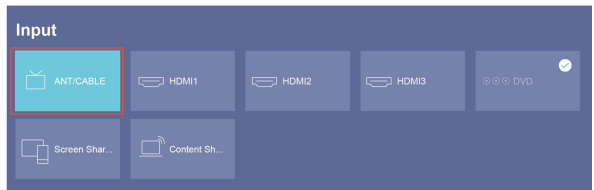

REMOTE CONTROL(FOR DVD)

1 **STANDBY(POWER)**

Set the unit in standby mode; press it again to switch it on.

2 ▲

To open or close the disc compartment in DVD mode

3 ▶||

Press to start/pause playing.

4 ■

Press to stop playing.

5 **SETUP**

Press to enter setup menu in DVD mode.

6 ◀◀ / ▶▶ / ◀◀◀ / ▶▶▶ / ENTER

◀◀: To move fast backward.

▶▶: To move fast forward.

◀◀◀: To play previous chapter.

▶▶▶: To play next chapter.

ENTER : To move fast forward.

7 **VOL-**

Press to decrease the volume.

8 **VOL+**

Press to increase the volume.

9 **NUMBER BUTTONS(0-9)**


To input the number information.

10 **GOTO**

To play a certain point in DVD mode.

11 **MENU**

To display the main menu.

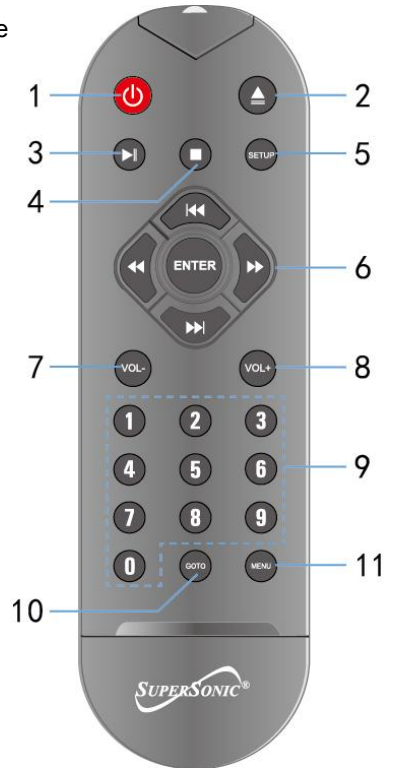

REMOTE CONTROL

1 **STANDBY(POWER)**

Set the unit in standby mode; press it again to switch it on.

2 **INPUT**

Select desired input source.

3 **Number buttons (0-9)**

Input the number information, such as channel number and so on.

4 **MTS**

To select desired soundtrack in TV mode.

5 **—**

Switch the digit when watching TV programs.

6 **◀◀**

Move fast backward.

7 **▶▶**

Start/pause playing.

8 **▶▶▶**

Move fast forward.

9 **■**

Stop playing.

10 **MENU**

Call out the main menu or return to previous menu.

11 **4 Color**

Customized in different page.

12 **DIRECTION/OK**

Move up, down, left, right/Confirm.

13 **BACK**

Return to the previous interface or menu.

14 **EXIT**

Exit the current interface or menu.

15 **HOME**

Enter home page.

16 **VOL +/-**

Increase/decrease the volume level.

17 **CH +/-**

Play the next/previous program.



REMOTE CONTROL

- 18 MUTE**
Mute the sound.
- 19 LIVETV**
TV source.
- 20 SLEEP**
Set desired sleep time.
- 21 CC**
CC in LIVE TV.
- 22 FREE**
Press to enter the free video directly.
- 23 SPORTS**
Press to enter the sport programme directly.
- 24 DEEZER**
Press to enter the deezer directly.
- 25 Content area**
Six buttons for CSP Apps.



Note: Please ignore the description of remote control and how to switch to DVD in manual, and take the insert for reference.