CS 5329 5329-2 5329-3 5329-4

Click on the **I** in the manual to watch the video tutorials.



Scan the QR code to go and subscribe our tutorial channel



Congratulations

on purchasing your new VTech product. Before using this telephone, please read Important safety instructions.

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech telephone. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich VTech product. For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com or call (800) 595-9511. In Canada, go to 1 phones.vtechcanada.com or call 1 (800) 267-7377.



Telephones identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of Telecommunications the Industry Association. Used under license.



The ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

Important safety instructions

13. Do not overload wall outlets and extension cords. When using your telephone equipment, basic safety 14. Unplug this product from the wall outlet and refer precautions should always be followed to reduce the risk of fire, electric shock and injury, including the the following conditions: following:

- 1. Read and understand all instructions.
- 2. Follow all warnings and instructions marked on the product.
- If the product has been exposed to rain or 3. Unplug this product from the wall outlet before water. cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- If the product does not operate normally by following the operating instructions. Adjust 4. **CAUTION**: Do not install the telephone base at a only those controls that are covered by the height above 2 meters. operation instructions. Improper adjustment 5. Do not use this product near water such as near a of other controls may result in damage and bath tub, wash bowl, kitchen sink, laundry tub or a often requires extensive work by an authorized swimming pool, or in a wet basement or shower. technician to restore the product to normal 6. Do not place this product on an unstable table, operation.
- shelf, stand or other unstable surfaces.
- If the product has been dropped and the 7. Avoid placing the telephone system in places telephone base and/or handset has been with extreme temperature, direct sunlight, or damaged. other electrical devices. Protect your phone from • If the product exhibits a distinct change in moisture, dust, corrosive liquids and fumes. performance.
- 8. Slots and openings in the back or bottom of the 15. Avoid using a telephone (other than cordless) telephone base and handset are provided for during an electrical storm. There is a remote risk ventilation. To protect them from overheating, of electric shock from lightning. these openings must not be blocked by placing 16. Do not use the telephone to report a gas leak in the the product on a soft surface such as a bed, sofa vicinity of the leak. Under certain circumstances, or rug. This product should never be placed near a spark may be created when the adapter is or over a radiator or heat register. This product plugged into the power outlet, or when the should not be placed in any area where proper handset is replaced in its cradle. This is a common ventilation is not provided. event associated with the closing of any electrical 9. This product should be operated only from the circuit. The user should not plug the phone into type of power source indicated on the marking a power outlet, and should not put a charged label. If you are not sure of the type of power handset into the cradle, if the phone is located supply in your home or office, consult your dealer in an environment containing concentrations of or local power company. flammable or flame-supporting gases, unless 10. Do not allow anything to rest on the power cord. there is adequate ventilation. A spark in such an Do not install this product where the cord may be environment could create a fire or explosion. walked on. Such environments might include: medical use of 11. Never push objects of any kind into this product oxygen without adequate ventilation; industrial through the slots in the telephone base or handset gases (cleaning solvents; gasoline vapors; etc.); a because they may touch dangerous voltage leak of natural gas; etc.

- points or create a short circuit. Never spill liquid of 17. Only put the handset of your telephone next to any kind on the product. your ear when it is in normal talk mode.
- 12. To reduce the risk of electric shock, do not 18. The power adapter is intended to be correctly disassemble this product, but take it to an oriented in a vertical or floor mount position. The authorized service facility. Opening or removing prongs are not designed to hold the plug in place parts of the telephone base or handset other if it is plugged into a ceiling, under-the-table or than specified access doors may expose you cabinet outlet. to dangerous voltages or other risks. Incorrect

reassembling can cause electric shock when the product is subsequently used.

- servicing to an authorized service facility under
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.

- 19. For pluggable equipment, the socket outlet shall be installed near the equipment and shall be easily accessible.
- 20. 🔨 🔟 Use only the batteries indicated in telephones): this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batteries (BT162342/BT262342) for the handset. Do not dispose of batteries in a fire. They may explode.
 - Do not use the battery in following conditions:
 - » High or low extreme temperature during use, storage or transportation.
 - Replacement of a battery with an incorrect type that can defeat a safeguard.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a batteryin an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
 - » A battery subjected to extremely low air pressure that can result in an explosion or the leaka
- 21. Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously damage the product.
- 22. The applied nameplate is located at the bottom or near of the product.

SAVE THESE INSTRUCTIONS

Battery

- CAUTION: Use Only Supplied Battery. To order a replacement, visit out website at website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to phones.vtechcanada.com or call 1 (800) 267-7377.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit with conductive materials.
- Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

About cordless telephones

- Privacy: The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- Electrical power: The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- Potential TV interference: Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.

- **Rechargeable batteries:** Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

Install Set up	10
What's in the box	10
Connect the telephone base	11
Connect the charger	11
Install the battery	12
Charge the battery	12
Check the battery level	13
Check for dial tone	13
Before use	14
Set date and time (before use)	14
Set up through voice guide - Answering system (before use)	14
Alternate way to set up	15
Install	15
Mount the telephone base 🚺	15
Overview	16
Telephone base	16
Handset	17
Display	19
Handset lights	19
Telephone base lights	20
Operating range	20
Operate	21
Make, answer or end a call	21
Make a call	21
Predial a call	21
Answer a call	21
End a call	21

View dialing options	21
Sound	22
Use speakerphone	22
Volume control	22
Mute the microphone	22
Temporary ringer silencing	22
Join a call	23
Join a call in progress (for multiple handset models only)	23
Call waiting	23
Intercom	24
Initiate an intercom call	24
Answer an incoming call during an intercom call	24
Transfer a call via intercom	25
Find handset	26
Page/ find handset	26
Use phone menu	26
Phonebook	
Phonebook entry	27
Add a phonebook entry	27
Review the phonebook entries	28
Dial a phonebook entry	28
Delete a phonebook entry	28
Delete all phonebook entries	28
Edit a phonebook entry	29
Alphabetical search	30

Redial list
Review a redial list entry
Dial a redial list entry
Delete a redial list entry
Chain dialing
Caller ID
Review the caller ID log
Save a caller ID log entry to the phonebook
Save a caller ID log entry to call block list
Dial a caller ID log entry
Delete caller ID log entries
Caller ID memory match
Missed call indicator
Call block
Block unknown calls
Add a call block list entry
Review call block list
Edit a call block list entry
Save a caller ID log entry to the call block list
Unblock a telephone number
Mute first ring

Contents

31	Answering system	39
31	Difference between the built-in	
31	answering system and voicemail	20
31	service	39
32	Use your built-in answering system	40
33	Turn on or off the answering	
33	system	40
	Playback messages	41
33	Adjust listening volume during message playback	42
34	Skip to the next message	42
35	Repeat the playing message	42
35	Listen to previous message	42
35	Stop the message playback	42
36	Delete a message	42
36	Delete all messages	43
36	Answering system remote access	43
36	Call intercept while using	
37	answering system	44
37	Recording memo	44
	Turn on or off the call screening	45
38	Screen a call with answering	
38	system	45

38

Announcement	46
Record a new outgoing announcement	46
Play your announcement	46
Delete your annoucement	47
Voicemail (via Telephone service provider)	47
Turn off the new voicemail indicators	48
Configure Settings	48
Answering system settings	48
Set your built-in answering system	48
Set answering system through voice guide	49
Set voice language	49
Set remote access code	50
Turn on or off the message alert tone	50
Dial modes	51
Temporary tone dialing	51
Set dial mode	51
Ringer	52
Set ringer tone	52
Set ringer volume	52
Set date and time	53

46	Set languages	53
	Set LCD language	53
46	Sound settings	54
46	Set number of rings	54
47	Set QUIET mode	54
4-	Set listening volume	55
47	Set key tone	55
48	Voicemail settings	55
	Set speed dial voicemail num	ber 55
48	Add and register handset	56
48		
48		
49		
49		

General product care	
Veneral product care	
Taking care of your telephone	
Avoid rough treatment	
Avoid water	
Electrical storms	
Cleaning your telephone	
Technical specifications	
DECT 6.0 digital technology	5
Telephone operating range	5
Redefining long range coverage and clarity	5
Simulated full-duplex handset and base speakerphones	5
Frequently asked questions	5
The RBRC seal	Ć
FCC, ACTA and IC regulations	Ć
California Energy Commission battery charging testing	_
	6
For C-UL compliance only	6


Contents

Install | Set up

 
What's in the box

Your telephone package contains the following items. Save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service.

• To purchase replacement batteries or power adapters, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to phones.vtechcanada.com or dial 1 (800) 267-7377.

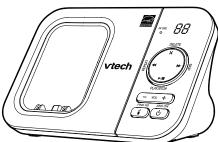









- 1 set for CS5329
- 2 sets for CS5329-2
- 3 sets for CS5329-3
- 4 sets for CS5329-4

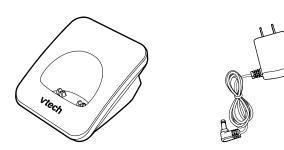


- 1 set for CS5329-2
- 2 sets for CS5329-3
- 3 sets for CS5329-4

Connect the telephone base Connect the charger

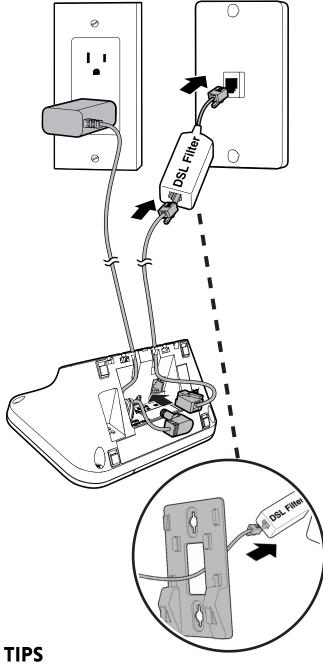

:는 TIPS


- If you want to mount the base, make sure telephone line pass through the mounting bracket before connecting to the DSL filter.
- If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you connect a DSL filter (not included) to the telephone wall jack.

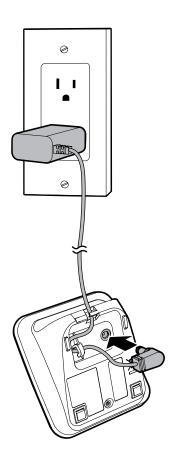


Install the battery


Charge the battery


- 1. Plug the battery connector securely into the socket inside the handset battery compartiment.
 - Make sure the battery label **THIS SIDE UP** is facing up, as indicated.

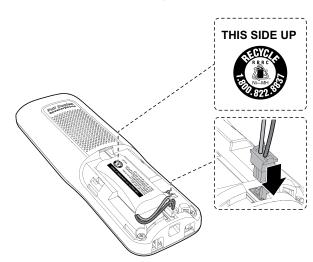

2. Align the cover flat against the battery compartment, then slide it upwards until it clicks into place.

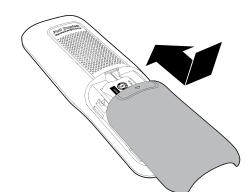

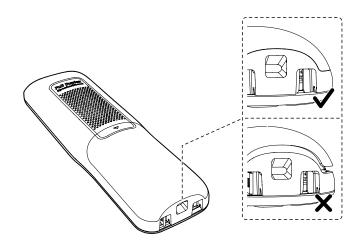

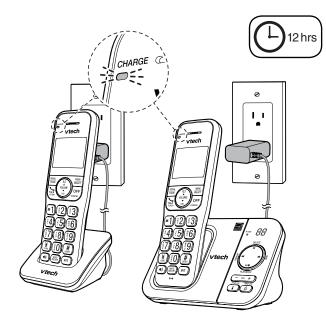

The following table summarizes the battery indicators and actions to take.

Battery	Battery	Action
indicators	status	
 The screen is blank, or shows Put in charger and flashes. 	 The battery has no charge or very little charge. The handset cannot be used. 	 Charge without interruption (at least 30 minutes).
 The screen shows Low battery and flashes. 	 The battery has enough charge to be used for a short time. 	 Charge without interruption (at least 30 minutes).
 The screen shows HANDSET X. 	 The battery is charged. 	 To keep the battery charged, place it in the handset charger when not in use.

When it is fully charged, you can expect **Check for dial tone** the following performance:

Operation	 Operating time *
Talk time (cordless	• 7 hours
handset)	
Standby	• 5 days

* Operating times vary depending on your actual use and the age of the battery.

Check the battery level

After you have installed the battery, check the battery level on the handset screen.

- If the screen is blank, or [] flashes, then the battery needs to be charged. Go to **Charge the battery** section before you do any setting or operation.
- If the battery icon is , , , or , then go to Set the date and time and Set the answering system through voice guide section.

Press **TALK/FLASH**. If you hear a dial tone, the installation is successful.

If you do not hear a dial tone

- Make sure the installation procedures are properly done.
- The handset may take a second or two to find the telephone base and produce a dial tone. This is normal. Wait an extra second before dialing.
- If the previous suggestions do not work, disconnect the telephone line cord from your telephone and connect the telephone line cord to another telephone.
- If there is no dial tone on that other telephone either, your telephone line cord may be defective. Install a new telephone line cord.
- If changing the telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Try using a different wall jack in your home to connect your CS5329/CS5329-2/CS5329-3/ CS5329-4 telephone, or contact your telephone service provider (charges may apply).

Before use

Set date and time (before use)

After you install your telephone or power returns following a power outage and battery depletion, the handset will prompt you to set the date and time, and to configure the answering system through voice guide.

- Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp.
- 1. Use the dialing keys (**0-9**) to enter the month (MM), date (DD) and year (YY). 2. Setup your answering system by Then, press MENU/SELECT.
- 2. Use the dialing keys (**0-9**) to enter the hour (HH) and minute (MM). Then press $\mathbf{\nabla}$ CID or \mathbf{A} $\mathbf{\nabla}$ to choose AM or **PM**.
- 3. Press MENU/SELECT to save.

After setting the date and time, the handset will prompt if you want to set Answering system (before use).

쑸TIP

• To skip setting the date and time, press **OFF/CANCEL** on the handset.

Set up through voice guide - Answering system (before use)

After the date and time setting is done or skipped, the handset will then prompt if you want to set up the answering system. This feature assists you to do the basic setup of the answering system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert tone.

- 1. Press **MENU/SELECT** to start the answering system setup via voice guide. You hear the voice prompt " Hello! This voice guide will assist you with the basic setup of your answering system."
 - To skip the set up, press **OFF/CANCEL**.
 - inputting the designated numbers as instructed in the voice guide.

Alternate way to set up

- 1. Press MENU/SELECT on the telephone base in idle mode.
- 2. Press \triangledown CID or \blacktriangle \bowtie to scroll to Answering sys, and then press MENU/SELECT.
- 3. Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to scroll to Voice telephone wall-mounting plate. the basic setup of your answering retailers. You may need a professional to system."
- 4. Set up your answering system by inputting designated numbers as instructed in the voice guide.

• You can press OFF/CANCEL to guit the voice guide at any time.


Install


Mount the telephone base


Your telephone base is ready for tabletop use. If you want to mount your telephone on a wall, use the provided wall-mount bracket to attach to a standard dual-stud

guide, the press MENU/SELECT. If you do not have this wall-mounting You hear the voice prompt "Hello! plate, you can purchase one from many This voice guide will assist you with hardware or consumer electronics

install the wall-mounting plate.

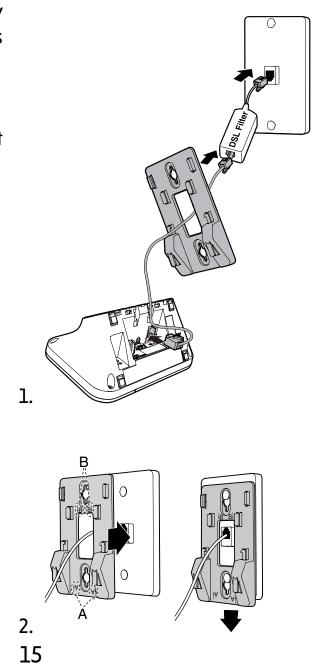


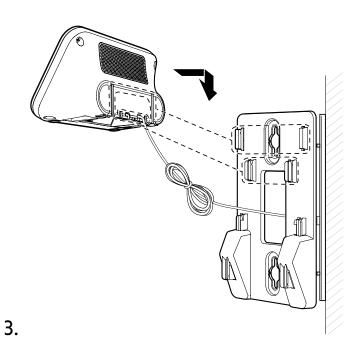


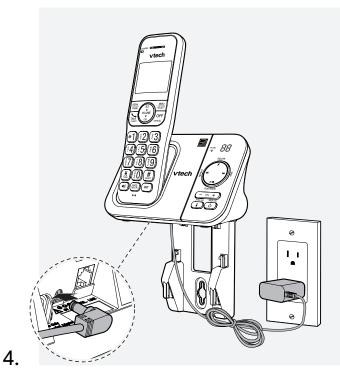


Overview

Telephone base

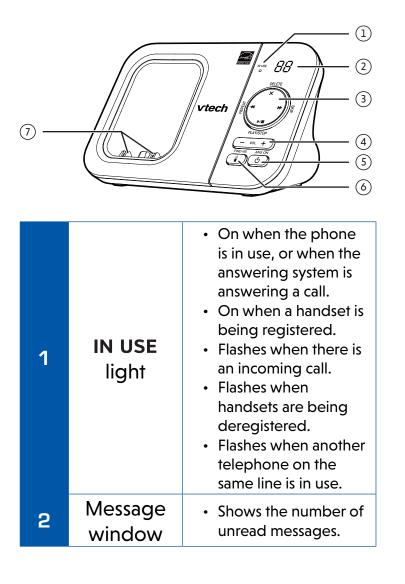

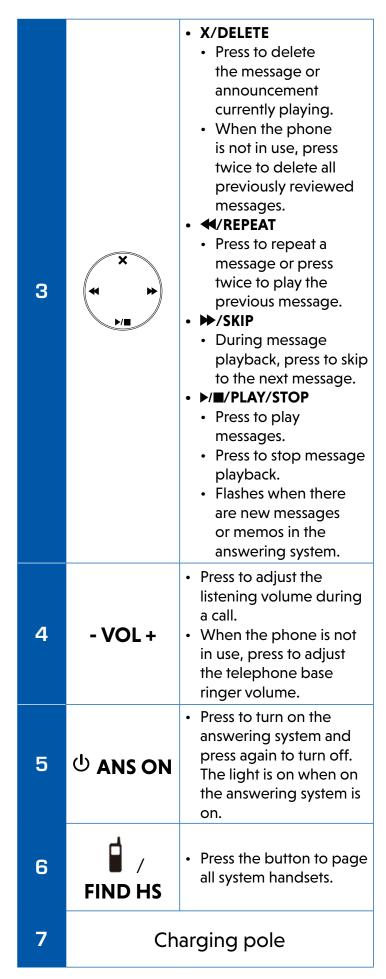


Handset

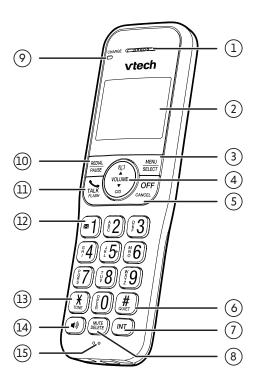

1	Handset earpiece	
2	L	CD display
3	MENU/ SELECT	 Press to display the menu. Once in the menu, press to select an item or save an entry or setting.
4	VOLUME CID	 Press to show phonebook entries when the telephone is not in use. Press to scroll up while in a menu. Press to increase the listening volume when on a call, or increase the message playback volume. While entering names or numbers, press to move the cursor to the right.

4	VOLUME CID	 VOLUME V/CID Press to review the caller ID log when the telephone is not in use. Press to scroll down while in a menu. Press to decrease the listening volume when on a call, or decrease the message playback volume. While entering names or numbers, press to move the cursor to the left.
5	OFF/ CANCEL	 During a call, press to hang up. While in a menu, press to cancel an operation, back up to the previous menu, or exit the menu display; or press and hold this button to exit to idle mode. When the handset is ringing, press to mute the ringer temporarily. Press and hold while the handset is not in use to erase the missed call indicator.
6	QUIET #	 <u>Press and hold</u> to set and turn on the QUIET mode, or turn it off. When reviewing a caller ID log entry, press repeatedly to view other dialing options.
7	INT	 Press to start an intercom conversation or transfer a call (for multi-handset models only).

 B MUTE/ DELETE MUTE/ DELETE MUTE/ DELETE Delete digits or characters while using the dialing keys. Silence the ringer temporarily while the handset is ringing. On when the handset is charging in the telephone base or charger. Press repeatedly to view the last 10 numbers dialed. While entering numbers, press and hold to insert a dialing pause. Press to make or answer a call. During a call, press to answer an incoming call when you receive a call waiting alert. While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the phonebook. Press to switch to tone dialing temporarily during a call if you have pulse service. Press to make or answer a call if you have pulse service. Press to turn on the handset speakerphone, press again to resume normal handset use. 			
9CHARGE lightis charging in the telephone base or charger.10REDIAL/ PAUSE• Press repeatedly to view the last 10 numbers dialed. • While entering numbers, press and hold to insert a dialing pause.11 \TALK/ FLASH• Press to make or answer a call. • During a call, press to answer an incoming call when you receive a call waiting alert.12Image: 1• While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the phonebook. • Press to switch to tone dialing temporarily during a call if you have pulse service.13TONE X • Press to make or answer a call using the speakerphone. • Press to turn on the handset speakerphone, press again to resume normal handset use.	8		 during a call. Delete digits or characters while using the dialing keys. Silence the ringer temporarily while the
 10 REDIAL/ PAUSE 11 MADDE * While entering numbers, press and hold to insert a dialing pause. * Press to make or answer a call. * During a call, press to answer an incoming call when you receive a call when you receive a call when you receive a call repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the phonebook. * Press to switch to tone dialing temporarily during a call if you have pulse service. 14 Image Alterna Press to turn on the handset speakerphone, press again to resume normal handset use. 	9		is charging in the telephone base or
 11 * TALK/ FLASH a call. During a call, press to answer an incoming call when you receive a call waiting alert. While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the phonebook. <u>Press and hold</u> to set or dial your voicemail number. 13 TONE * Press to switch to tone dialing temporarily during a call if you have pulse service. Press to make or answer a call using the speakerphone. Press to turn on the handset speakerphone, press again to resume normal handset use. 	10		 the last 10 numbers dialed. While entering numbers, press and hold to insert a
 12 ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the phonebook. Press and hold to set or dial your voicemail number. 13 TONE * Press to switch to tone dialing temporarily during a call if you have pulse service. Press to make or answer a call using the speakerphone. Press to turn on the handset speakerphone, press again to resume normal handset use. 	11		 a call. During a call, press to answer an incoming call when you receive a call
 13 TONE * dialing temporarily during a call if you have pulse service. 14 • Press to make or answer a call using the speakerphone. • Press to turn on the handset speakerphone, press again to resume normal handset use. 	12	M 1	 ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the phonebook. Press and hold to set or dial your voicemail
 14 (14) 14 (14) 14 (14) 14 (14) 14 (14) 14 (14) 14) 14 (14) 14) 14)<th>13</th><th>tone X</th><th>dialing temporarily during a call if you have</th>	13	tone X	dialing temporarily during a call if you have
15 Microphone	14	()	answer a call using the speakerphone.Press to turn on the handset speakerphone, press again to resume
	15	Μ	licrophone

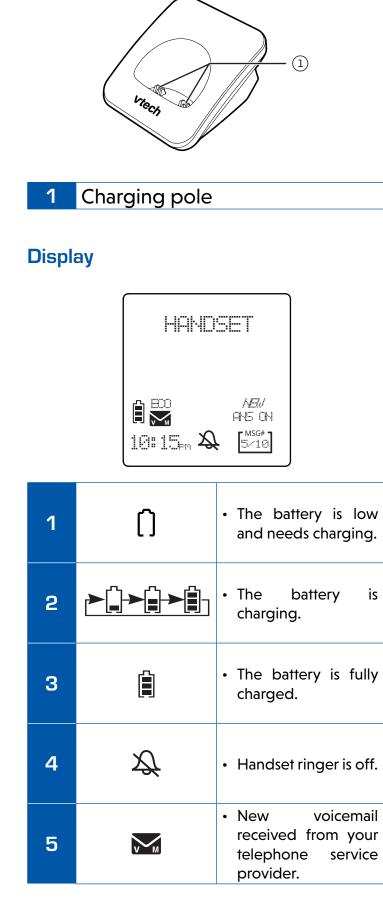

6	<i> -<u> -</u> , </i>	 New caller ID log entry.
7	ANS ON	 Answering system is on.
8	MSG# —	 Number of new/old messages recorded.
9	ECO	 The ECO mode activates automatically to reduce power consumption when the handset is within range of the telephone base.

Handset lights

1	CHARGE	 On when the handset is charging in the telephone base or charger.
2	■))	 On when the speakerphone is in use.

Telephone base lights

1	IN USE	 On when the telephone line is in use. On when the answering system is answering a call. On when you are registering a handset. Flashes quickly when there is an incoming call. Flashes when another telephone sharing the same line is in use. Flashes when you are deregistering all handsets.
2	^{ம்} ans on	 On when the answering system is turned on.

Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset displays **Out of range or no pwr** at base.

If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press **_TALK/FLASH**. Move closer to the telephone base, and then press **TALK/FLASH** to answer the call. If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

Operate

Make, answer or end a call

Make a call

Press **_TALK/FLASH** or ****) on the handset, then enter the telephone number.

Predial a call

Enter the telephone number, then press **►TALK/FLASH** or **■** to dial.

Answer a call

dialing keys (**0-9** or **TONE X** or **QUIET**#). handset to call the number.

To save the number to the phonebook, End a call see Save a caller ID log entry to the Press OFF/CANCEL or put the handset phonebook. in the telephone base or charger.

- The handset displays **Unable to call** if the telephone line is in use.
- The screen shows the elapsed time as you talk (in hours, minutes and seconds).
- When predialing (preview numbers before dialing), press MUTE/DELETE on the handset to backspace and delete; press and hold **REDIAL/PAUSE** to insert a dialing pause (a **P** appears).

View dialing options

The incoming caller ID log entries have 10 digits (the area code plus the sevendigit number). You can add 1 in front of the telephone number before you dial in the caller ID log or store to the phonebook.

While reviewing the caller ID log, press # (pound key) or 1 repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the phonebook.

When the number shows the correct format for dialing:

Press **TALK/FLASH** or **N**, or any Press **TALK/FLASH** or **N** on the

Sound

Use speakerphone

During a call, press vitch between the speakerphone and normal handset use.

To hand up, press **OFF/CANCEL** or return the handset to the telephone base or charger.

Volume control

During a call, press **VOLUME**▼ or **VOLUME**▲ to adjust the listening volume.

Mute the microphone

Use the mute function to turn off the microphone. You can hear the caller, but the caller cannot hear you.

To mute a call

While on a call, press **MUTE/DELETE** on the handset. The screen displays **Muted** until the mute function is turned off.

To end mute a call

Press **MUTE/DELETE** on the handset again and resume speaking. The screen briefly displays **Microphone on**. Mute is automatically cancelled when you end the call.

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer of the handset without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer

Press OFF/CANCEL or MUTE/DELETE on the handset. The handset screen shows **Ringer muted**.

To silence the telephone base ringer

Press VOL - once.

Join a call

Join a call in progress (for multiple handset models only)

Another handset can join you on a call. You can use up to four handsets at a time on an outside call.

- When a handset is already on a call,
- press
 TALK/FLASH or) on another handset to join the call.
- Press OFF/CANCEL or place the handset in the telephone base or handset charger to exit the call. The call continues on the other handset until both handsets hang up.

Call waiting

- If you subscribe to call waiting service from your telephone service provider, and someone calls while you are already on a call, you hear an alert tone.
- 1. Press **TALK/FLASH**on the handset to put your current call on hold and take the new call.
- 2. Press **TALK/FLASH**on the handset at any time to switch back and forth between calls.

If you also subscribe to caller ID service, it will let you see the name and telephone number of the caller during call waiting. It may be necessary to change your telephone service to use this feature. Contact your telephone service provide if:

- You have both caller ID and call waiting, but as separate service (you may need to combine these service);
- You have only caller ID service, or only call waiting service; or
- You do not subscribe to caller ID or call waiting services.

There are fees for caller ID services. In addition, services may not be available in all areas.

Intercom

Use the intercom feature for conversations between two handsets.

- CS5329/CS5329-2/CS5329-3/ • Your CS5329-4 telephone base supports = NOTES up to five handsets. You can buy . expansion additional handsets (CS5309, available in US version only) for your CS5329/CS5329-2/CS5329-3/ CS5329-4 telephone system.
- You can use four handsets on two pairs of intercom calls. For example, when four handsets are used on two pairs of intercom calls, use the fifth handset for an outside call.

Initiate an intercom call

- 1. Press **INT** on your handset when not in use.
 - If you have only one handset, your handset displays INT needs 2 HS.
 - If you have two handsets, your handset displays Calling HS X.
 - If you have three or more handsets, your handset displays **Intercom to**. Use the dialing keys to enter a destination handset. Your handset displays Calling HS Χ.

The destination handset rings and its screen displays HS X is calling.

2. To answer the intercom call, press **►TALK/FLASH**, **■**), **INT** or any dialing key on the destination handset.

Both handsets now display Intercom.

3. To end the intercom call, press **OFF/CANCEL** or place the handset back in the telephone base or charger. Both handsets now display Intercom ended.

- To cancel the intercom call before it is answered, press OFF/CANCEL or INT. Press OFF/CANCEL or MUTE/DELETE on the destination handset to temporarily silence the intercom ringer.
- If the destination handset does not answer the intercom call within 100 seconds, is accessing the answering system, on a call or out of range, the originating handset displays **Unable** to call and returns to idle mode.
- If there is an incoming call while the originating handset displays Calling HS X, the intercom request will be stopped and the screen displays Incoming call.

Answer an incoming call during an intercom call

When you receive an outside call during an intercom call, there is an alert tone.

- To answer the outside call, press **STALK/FLASH**. The intercom call ends automatically.
- To end the intercom call without answering the outside call, press **OFF/CANCEL**. The telephone continues to ring.

Transfer a call via intercom

Use the intercom feature to transfer an outside call to another system handset.

- 1. During a call, press **INT**.
 - If you have two handsets, the outside call is put on hold and your handset displays Calling HS Χ.
 - If you have three or more handsets, your handset displays **Intercom to**. Use the dialing keys to enter a handset number. The outside call is put on hold and your handset displays Calling HS Χ.

The destination handset rings and its screen displays **HS X is calling**.

2. To answer the intercom call on the destination handset, press

►TALK/FLASH, **■**), **INT** or any dialing key on the destination handset. The outside call is still on hold and both handsets now display Intercom. You can now have a private conversation with the destination handset.

• To cancel the intercom call before it is answered, press

▲TALK/FLASH, **■**) or **INT**.

• If the destination handset does not answer within 100 seconds, is in use, on a call or is out of range, the originating handset displays **Unable to call** and then reconnects to the outside call.

- 3. For this intercom call, you have the following options:
 - You can let the destination handset join you on the outside call in a three-way conversation. Press and hold **INT** on the originating handset.
 - You can transfer the call. Press **OFF/CANCEL**, or place your handset back in the telephone base or charger. Your handset displays Line in use. The destination handset is then connected to the outside call.
 - You can press **INT** to switch between the outside call (Outside call displays) and the intercom call (Intercom displays).
 - The destination handset can end the intercom call by pressing OFF/CANCEL, or by placing the handset back in the telephone base or charger. The outside call continues with the original system handset.

Find handset

Page/ find handset

- Do not press and hold /FIND HS for more than four seconds. It may lead to handset deregistration.
- If the handset displays To register HS... and ...see manual, refer to Add and register handset section to register the handset back to the telephone base.

This feature helps you find all system handsets.

To start paging

Press /FIND HS on the telephone base when it is not in use. All idle handsets ring and display ** Paging **.

To end paging

- Press **\TALK/FLASH**, **\\$**),
 OFF/CANCEL or any dialing key (0-9, TONE **\\$** or QUIET#) on the handset ;
 -OR-
- Press /FIND HS again on the telephone base;

-OR-

• Place the handset in the telephone base or charger.

• If you press **MUTE/DELETE** on a handset, the ringer of that handset is silenced but the paging tone continues on the other handsets.

If a handset is accessing the answering system, on a call (intercom call or outside call), or out of range, that handset does not beep when paged.
You cannot use the find handset feature while the telephone base is playing messages or the answering system is being accessed remotely.

Use phone menu

- 1. Press **MENU/SELECT** in idle mode (when the telephone is not in use) to enter the main menu.
- Press ▼ CID or ▲ ^Q to scroll through menu items.
- 3. Press **MENU/SELECT** to select or save the highlighted item.

-OR-

Press **OFF/CANCEL** to cancel an operation, back up to the previous menu, or exit the menu display.

Phonebook | Phonebook entry

The phonebook can store up to 50 entries, which are shared by all handsets. Each entry may consist of a telephone number up to 30 digits, and a name up to 15 characters.

Any additions, deletions or edits made on one handset will be reflected on other handsets.

If the telephone number in the phonebook exceeds 15 digits, a dash appears after the 14th digit and then the remaining digits are shown beginning with a dash, alternately.

Add a phonebook entry

1. Enter the number when the phone is not in use. Press **MENU/SELECT**, then go to Step 3.

-OR-

Press MENU/SELECT on the handset in idle mode., then press ▼ CID or ▲ © to highlight Phonebook. Press MENU/SELECT twice to choose Add new entry.

- The screen shows **Enter number**.
- 2. Use the dialing keys to enter a telephone number (up to 30 digits).
 - Press ▼ CID or ▲ [©] to move the cursor to the left or right.
 - Press **MUTE/DELETE** on the handset to erase a digit.
 - <u>Press and hold</u> **MUTE/DELETE** on the handset to erase all digits.
 - Press and hold REDIAL/PAUSE

to insert a three-second dialing pause (a P appears). -OR-Press REDIAL/PAUSE to copy a number from the redial list. Press ▼ CID or ▲ ♥, or press REDIAL/PAUSE repeatedly to locate the desired number. Press MENU/SELECT to copy the displayed number.

- 3. Press **MENU/SELECT** to proceed to entering name.
 - The screen shows **Enter name**.
- 4. Use the dialing keys to enter a name (up to 15 characters) when prompted.
 - Press a key repeatedly until the desired character shows on the screen.
 - Press ▼ CID or ▲ ♀ to move the cursor to the left or right.
 - Press **0** to add a space.
 - Press **MUTE/DELETE** on the handset to erase a character.
 - <u>Press and hold</u> **MUTE/DELETE** on the handset to erase all characters.
- 5. Press **MENU/SELECT** to store your new phonebook entry.

Review the phonebook entries

- 1. Press \blacktriangle when in idle mode.
 - The screen shows the number of entries.
- Press ▼ CID or ▲ № to browse through the phonebook or use the dialing keys to start a name search.
 -OR-
- 1. Press **MENU/SELECT** when in idle mode.
- 2. Press ▼ CID or ▲ № to scroll to **Phonebook**, then press **MENU/SELECT**.
- 3. Press ▼ CID or ▲ № to scroll to **Review**, then press MENU/SELECT.
 - The screen shows the first entry in the phonebook.
- 4. Press ▼ CID or ▲ © to scroll to browse through the phonebook.
 - Entries appear alphabetically by the first letter in the name.

Dial a phonebook entry

- Search for the desired entry in the phonebook (see Review the phonebook entries or Alphabetical search).
- When the displayed number is in the correct format, press **TALK/FLASH** or **O** on the handset to dial.

Delete a phonebook entry

- While reviewing a phonebook entry (see Review the phonebook entries or Alphabetical search), press MUTE/DELETE.
 - The screen shows **Delete entry?**.
- 2. Press **MENU/SELECT** to delete the displayed entry from the phonebook.
 - The handset shows **Deleting...** and then you hear a confirmation tone.

Once deleted, you cannot retrieve that entry.

Delete all phonebook entries

- 1. Press **MENU/SELECT** on the handset when in idle mode.
- 2. Press ▼ CID or ▲ № to scroll to Phonebook, then press MENU/SELECT.
- 3. Press ▼ CID or ▲ 🖾 to scroll to Delete all, then press MENU/SELECT.
 - The handset shows **Delete all?**.
- 4. Press **MENU/SELECT** to confirm.
 - The handset shows **Deleting....** You hear a confirmation tone.

Edit a phonebook entry

- 1. While reviewing a phonebook entry, press MENU/SELECT.
 - The screen shows **Enter number** with the current number of the entry.
- 2. Use the dialing keys to edit the number (up to 30 digits).
 - Press ▼ CID or ▲ [©] to move the cursor to the left or right.
 - <u>Press and hold</u> REDIAL/PAUSE to insert a three-second dialing pause (a P appears).
 - Press MUTE/DELETE on the handset to erase a digit.
 - <u>Press and hold MUTE/DELETE</u> on the handset to erase all digits. -OR- Copy a number from the redial list by pressing REDIAL/PAUSE and then
 - ▼ CID or ▲ [©], or pressing
 REDIAL/PAUSE repeatedly
 to locate the desired number.
 Press MENU/SELECT to copy the number.
- 3. Press **MENU/SELECT** to save the number.
 - The screen shows **Enter name** briefly and then the current name of the entry.
- 4. Edit the characters.
 - Press **0** to add a space.
 - Press ▼ CID or ▲ ♀ to move the cursor to the left or right.
 - Press **MUTE/DELETE** on the handset to erase a character.

- <u>Press and hold</u> **MUTE/DELETE** on the handset to erase all characters.
- 5. Press MENU/SELECT to save.
 - The handset shows the updated entry.

Alphabetical search

You can use the enhanced 3-character search to find your contacts quickly and efficiently.

- 1. Press \blacktriangle when the handset is in idle mode.
- 2. When an entry appears, use the dialing keys (0-9) to start a name search (alphabetical search).
 - The phonebook shows the first name beginning with the first letter associated with the dialing key, i.e. if there is an entry in the phonebook that begins with that letter.
 - Press ▼ CID or ▲ 🖾 to scroll through the entries beginning with that letter.
- 3. To see other names that start with the letters on the same dialing key, keep pressing the key until the desired letter is shown.
 - The names appear in alphabetical order.

For example, if you have the names Jennifer, Jessie, Kevin and Linda in your phonebook:

If you press 5 (JKL) once, J and then Jennifer displays.

If you press 5 (JKL) once, J displays. Press

▼. Jessie displays.

If you press 5 (JKL) twice, K and then Kevin displays.

If you press 5 (JKL) three times, L and then Linda displays.

If you press 5 (JKL) four times, 5 displays.

If you press **5** (JKL) five times, **J** displays and then **Jennifer** displays again.

• If you press a dialing key (0-9) and no name starts with any letter on that key, the phonebook shows the entry that matches the next letter in the phonebook.

Redial list

numbers dialed. Entries are shown in reverse chronological order. When there are already 10 entries, the oldest entry is deleted to make room for the new entry.

Review a redial list entry

- 1. Press **REDIAL/PAUSE** in idle mode.
- 2. Press ▲ 🖾, ▼ CID or REDIAL/PAUSE repeatedly to browse until the desired number displays. The handset beeps twice at the end of the list.
- 3. Press OFF/CANCEL on the handset to exit.

Dial a redial list entry

When the desired redial entry displays, press **_TALK/FLASH** or ****) to dial. - OR -

- 1. Press **_TALK/FLASH** or ****).
- 2. Press **REDIAL/PAUSE** to enter the redial list.
- 3. Press $\blacktriangle \square$, \checkmark CID or REDIAL/PAUSE repeatedly to browse until the desired entry displays.
- 4. Press MENU/SELECT to dial the displayed number.

Delete a redial list entry

- Each handset stores the last 10 telephone 1. Press **REDIAL/PAUSE** in idle mode.
 - 2. Press ▲ 🖾, ▼ CID or REDIAL/PAUSE repeatedly to browse until the desired number displays.
 - 3. Press MUTE/DELETE on the handset to delete the displayed number.
 - You hear a confirmation tone.

Chain dialing

Use this feature to initiate a dialing sequence from numbers stored in the phonebook, caller ID log or redial list while you are on a call.

Chain dialing is useful if you wish to access other numbers (such as bank **E NOTES** account numbers or access codes) from • the phonebook, caller ID log or redial list.

Access a number in the phonebook . while on a call

- 1. Press MENU/SELECT.
- 2. Press **MENU/SELECT** to select Phonebook.
- 3. Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to scroll to the desired entry or perform an alphabetical search, then press MENU/SELECT to dial the displayed number.

Access a number in the caller ID log while on a call

- 1. Press MENU/SELECT.
- 2. Press \bigvee CID or \land \bigotimes to scroll to Caller ID log, then press MENU/SELECT.
- 3. Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to scroll to the desired entry, and then press **MENU/SELECT** to dial the displayed number.

Access the redial list while on a call

1. Press **REDIAL/PAUSE**.

- 2. Press $\blacktriangle \square$, \checkmark CID or REDIAL/PAUSE until the desired number displays.
- 3. Press **MENU/SELECT** to dial the displayed number.

- You cannot edit a phonebook entry while on a call.
- You cannot copy a caller ID log entry into the phonebook while on a call.
- You can only view the numbers in the phonebook, caller ID log or redial list while on a call and cannot edit, delete or save entries.
- Press OFF/CANCEL on the handset to exit redial list, phonebook or caller ID log while on a call.

Caller ID

If you subscribe to caller ID service, information about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log. Each entry has up to 24 digits for the phone number and 15 characters for 4. When the screen shows Enter the name.

Review the caller ID log

Review the caller ID log to find out who called, to return the call or to copy the caller's name and number into your phonebook.

1. When a handset is in idle mode, press $\mathbf{\nabla}$ CID to view the caller ID log in reverse chronological order starting with the most recent call.

-OR-

You can also review the caller ID log by pressing MENU/SELECT in idle mode, then press $\mathbf{\nabla}$ CID or \mathbf{A} to scroll to **Caller ID log**. Press MENU/SELECT twice to select Review.

- 2. Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to scroll through the list. The handset beeps twice when you reach the beginning or end of the caller ID log.
- 3. Press **OFF/CANCEL** to exit the caller ID log.

Save a caller ID log entry to the phonebook

- 1. While reviewing the caller ID log, press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to browse through the caller ID log.
- 2. When the desired entry displays, press MENU/SELECT.
- The caller ID log stores up to 30 entries. 3. Press MENU/SELECT again to choose To Phonebook.
 - number, use the dialing keys to modify the telephone number (up to 30 digits).
 - Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to move the cursor to the left or right.
 - Press and hold **REDIAL/PAUSE** to enter a 3-second dialing pause (a **P** appears).
 - Press MUTE/DELETE to erase a digit.
 - Press and hold MUTE/DELETE to erase all digits.
 - 5. Press MENU/SELECT to save the number in the display.
 - The screen shows Enter name.
 - 6. Use the dialing keys to modify the name (up to 15 characters).
 - Press **0** to add a space.
 - Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ S to move the cursor to the left or right.
 - Press MUTE/DELETE on the handset to erase a character.
 - Press and hold MUTE/DELETE on the handset to erase all characters.
 - 7. Press MENU/SELECT to save.
 - You hear a confirmation tone.

- If a number is already in the phonebook. You cannot save the same number more than once.
- If you try to save a caller ID log entry to the phonebook without a number, the handset sounds an error tone.
- If the telephone number has more than 15 digits, only the last 15 digits appear in the caller ID log. However, the telephone can still save all digits (up to 24 digits) of that telephone number from the caller ID log in the phonebook.
- You might need to change how a caller ID number is saved in the phonebook if the entry does not appear in the correct format. Caller ID numbers might appear with an area code that is not necessary for local calls, or without a 1 that is necessary for long distance calls.
- Caller ID log entries are shared by all system handsets. Any deletions made on one handset are reflected on all other handsets.

Save a caller ID log entry to call block list

- 1. Search for the desired caller ID log entry (see **Review call block list**).
- 2. When the desired entry displays, press **MENU/SELECT**.
- 3. Press ▼ CID or ▲ ♀ to scroll to To Block list, then press MENU/SELECT.
- 4. The handset displays **Enter number**. Use the dialing keys to edit the number, when necessary.
 - Press ▼ CID or ▲ [©] to move the cursor to the left or right.
 - Press **MUTE/DELETE** to backspace and erase a digit.
 - <u>Press and hold</u> **MUTE/DELETE** to erase the entire entry.
 - <u>Press and hold</u> REDIAL/PAUSE to enter a 3-second dialing pause (a P appears).
- 5. Press **MENU/SELECT** to move to the name.
 - The screen shows **Enter name**.
- on one handset are reflected on all 6. Use the dialing keys to to add or edit other handsets. the name.
 - Press ▼ CID or ▲ № to move the cursor to the left or right.
 - Press **0** to add a space.
 - Press MUTE/DELETE on the handset to erase a character.
 - <u>Press and hold</u> **MUTE/DELETE** on the handset to erase all characters.
 - 7. Press **MENU/SELECT** to save.

Dial a caller ID log entry

- Search for the desired entry in the caller ID log (see Review the caller ID log).
- 2. When the desired entry is displayed and is in the correct format for dialing:
 - Press **TALK/FLASH** or **N** on the handset to dial with the home line.

Delete caller ID log entries

- Search for the desired entry in the caller ID log (see Review the caller ID log).
- 2. When the desired entry is displayed, press **MUTE/DELETE** on the handset. You hear a confirmation tone.

To delete all entries

- 1. Press **MENU/SELECT** on the handset in idle mode.
- 2. Press ▼CID or ▲ © to highlight Caller ID log, then press MENU/SELECT.
- 3. Press ▼ CID or ▲ № to highlight Delete all, then press MENU/SELECT.
- 4. When the screen shows **Delete all?**, press **MENU/SELECT** to confirm.
 - There is a confirmation tone and the screen returns to the previous menu.

Caller ID memory match

If the incoming telephone number matches the last 7 digits of a telephone number in your phonebook, the name that appears on the screen matches the corresponding name in your phonebook.

For example, if *Christine Smith* calls, her name appears as *Chris* if this is how you entered it into your phonebook.

 The number you see on your caller ID is in the format sent by the telephone service provider. It usually delivers 10-digit telephone numbers (area code plus telephone number). If the last 7 digits of the incoming telephone number do not match a number in your phonebook, the name appears as it is delivered by the telephone service provider.

Missed call indicator

When a cordless handset or the telephone base is in idle mode and has If you have subscribed to caller ID service, Missed calls.

All new and missed entries are counted 150 entries. as missed calls. Each time you review a When a call is blocked, the caller will new caller ID log entry (indicated by hear a simulated busy tone for one ring Ment on the screen), the missed calls cycle. The call recipient may pick up the message goes away. When there is a call during the first ring when there is no new unanswered call, the missed calls caller ID information. Otherwise, the call message displays again. The number of is disconnected. missed calls includes all new

and missed entries that have not been **Block unknown calls** reviewed.

If you do not want to review the missed calls one by one, but still want to keep them in the caller ID log, you can press and hold **OFF/CANCEL** on the handset for four seconds when the handset is idle.

- You will hear a confirmation tone.
- All the entries in the caller ID log become old (reviewed already).
- Missed calls message disappears.

Call block

new or missed calls, its screen shows **XX** you can set the telephone to block unknown calls and certain undesired calls. The call block list can store up to

All incoming calls with unknown numbers will be blocked.

- 1. Press MENU/SELECT when the phone is not in use.
- 2. Press \bigvee CID or \land \bigotimes to select Call block and then press MENU/SELECT.
- 3. Press $\mathbf{\nabla}$ CID or \mathbf{A} $\mathbf{\nabla}$ to select Calls w/o num then press MENU/SELECT.
- 4. Press ▼ CID or ▲ © to choose Unblock or **Block**, then press **MENU/SELECT**. You hear a confirmation tone.

Add a call block list entry

- 1. Press MENU/SELECT when the phone is not in use.
- 2. Press ∇ CID or \triangle \Box to select Call block and then press MENU/SELECT.
- 3. Press MENU/SELECT to choose Block list.

- 4. Press ▼ CID or ▲ ♥ to select Add Review call block list **new entry** then press **MENU/SELECT**.
- 1. Press MENU/SELECT when the 5. When Enter number displays, use phone is not in use. the dialing keys to enter the number. 2. Press \triangledown CID or \blacktriangle \bowtie to select Call -ORblock and then press MENU/SELECT.

Copy a number from the redial list by pressing **REDIAL/PAUSE** and then press ▲ 🖾, ▼ CID or REDIAL/PAUSE **MENU/SELECT** to copy the number.

- 6. Press MENU/SELECT to move on to 5. Press ▼ CID or ▲ ♥ to browse enter the name. The handset displays through the call block list. Enter name.
- 7. Use the dialing keys to enter the name. Additional key presses show 1. Search for the desired entry in the other characters of that particular call block list (see Review call block key. The first character of every word list). is capitalized.
- 2. When the desired entry appears, 8. Press MENU/SELECT to save. You press MENU/SELECT. The handset hear a confirmation tone. displays Enter number and the stored number.

While entering names and numbers, you can:

- Press MUTE/DELETE to backspace and erase a digit or character.
- Press and hold **MUTE/DELETE** to erase the entire entry.
- Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to move the cursor to the left or right.
- Press and hold **REDIAL/PAUSE** to insert a dialing pause (for entering numbers only).
- Press **0** to add a space (for entering names only).

36

- 3. Press MENU/SELECT to choose Block list.
- repeatedly to select a number. Press 4. Press MENU/SELECT to choose Review.

Edit a call block list entry

- 3. Use the dialing keys to edit the number, then press MENU/SELECT . The handset displays Enter name and then the stored name.
- 4. Use the dialing keys to edit the name. Additional key presses show other characters of that particular key. The first character of every word is capitalized.
- 5. Press MENU/SELECT to save. You hear a confirmation tone.

Save a caller ID log entry to the call block Mute first ring list

- 1. When in the caller ID log, press **V** CID or \blacktriangle \heartsuit to browse.
- 2. When the desired caller ID log entry displays, press MENU/SELECT twice to choose To Call block. The handset displays Enter number and the stored number.
- 3. Use the dialing keys to modify the number, if necessary. Then press MENU/SELECT. The handset displays Enter name and then the stored name.
- 4. Use the dialing keys to modify the name, if necessary. Then press MENU/SELECT to save. You hear a confirmation tone.

Unblock a telephone number

- 1. Press MENU/SELECT when the phone is not in use.
- 2. Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to select Call block and then press **MENU/SELECT**.
- 3. Press **MENU/SELECT** to choose **Block** list.
- 4. Press **MENU/SELECT** to choose Review.
- 5. Press ∇ CID or \triangle \Box to browse through the call block list.
- 6. When the desired call block list entry displays, press MUTE/DELETE and you hear a confirmation tone.

Your telephone rings once for blocked calls. You can choose to mute the first ring for all incoming calls, so that there will be no ring for blocked calls. By default, the first ring is set to On.

- 1. Press **MENU/SELECT** when the handset is not in use.
- 2. Press 7464# on the handset.
- 3. Press \triangledown CID or \blacktriangle \bowtie to choose First ring:On to keep the first ring, or First ring:Off to mute the first ring.
- 4. Press MENU/SELECT to save. You hear a confirmation tone.

• If you have muted the first ring, you will hear one ring less before the answering system and voicemail answer the incoming calls.

Answering system

Difference between the built-in system answering and voicemail service

Your telephone has separate indicators for two different types of voice messages: those recorded on its builtin digital answering system and those recorded in your telephone service provider's voicemail (fees may apply). Your telephone's built-in digital answering system messages and voicemail messages are separate.

The main differences between them are:

Category	Built-in answering system	Voicemail from telephone service	
	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service.	
Storage	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.	
	When you received new messages, screen displays XX new messages.	When you received new messages, the screen displays and New voicemail.	
Method to retrieve messages	To retrieve messages, usually there are two ways: • Press ►/■ on the telephone base; or • Access remotely with an access		

Use your built-in answering system

New message indication

If XX new messages display on the handsets, there are new messages in the built-in answering system.

Message window display	Description
0	There are no messages in the answering system.
0 (flashing)	After a power failure, the number in the message window flashes to indicate that the date and time need to be set.
1-99	 Total number of messages and memos. Current message number during old message playback.
1-99 (flashing)	 Total number of new messages and memos. The number flashes when there are new messages that have not been reviewed. Current message number during new message playback. After a power failure, the number in the message window flashes to indicate that the date and time need to be set.
1-99 & F (alternating)	Memory is full. Messages must be deleted before new messages can be recorded.
	 The answering system is being programmed by a system handset. The answering system is answering a call or recording a memo or announcement. The answering system is being accessed remotely. The phonebook or caller ID log is being accessed by a system handset.
0-6	Telephone base ringer volume while adjusting.
1-8	Speaker volume level of the telephone base while adjusting.

Turn on or off the answering system

The answering system must be turned on to answer and record messages.

When the answering system is turned on, the **b** ANS ON light on the telephone base turns on and ANS ON displays on the handset.

Turn the answering system on or off with the telephone base

Press ⁽¹⁾ **ANS ON** to turn the answering system on or off. When the answering system is turned on, it announces, "Calls will be answered." When the answering system is turned off, it announces, "Calls will not be answered."

Turn the answering system on or off with a handset

- 1. Press MENU/SELECT in idle mode.
- 2. Press \triangledown CID or \blacktriangle \bowtie to highlight Answering then SYS, press MENU/SELECT.
- 3. Press ▼CIDor▲©tohighlightAnswer on/off, then press MENU/SELECT.
- 4. Press ∇ CID or \triangle \square to highlight On or Off, then press MENU/SELECT to save.

Playback messages

You can listen to messages at the \cdot Press / to stop the playback. telephone base or on a cordless handset. When playback begins, the To listen to messages at the handset total number of messages is annouced. and time of the recording. After the last message, you hear, "End of messages." Make sure you set the date and time correctly. Refer to Set date and time for more details.

To listen to messages at the base

- 1. Press \blacktriangleright on the base to listen to the the handset's screen. messages. If you have new messages, the telephone plays only the new 4. Press OFF/CANCEL to stop the messages (oldest first). If there are no playback. new messages, the telephone plays **Options during playback** back all messages (oldest first).
- 2. The system announces the number Press \blacksquare to play the messages of messages, then begins playback. through the handset earpiece. The message sequence is shown on Press 🔍 again to return to the message window.
- 3. Press $\blacktriangleright/\blacksquare$ to stop the playback.

Options during playback

- Press VOL + to adjust the message playback volume.
- Press 🍽 to skip to the next message.
- Press
 to repeat the message currently playing.
- Press 🗲 twice to listen to the previous message.
- Press X to delete the current

message. The system advances to the next message.

- Before each message, you hear the day 1. Press MENU/SELECT on the handset in idle mode.
 - 2. Press MENU/SELECT again to select Play messages. If you have either new or old messages, the messages play automatically.
 - 3. The system announces the number of messages, then begins playback. The message sequence is shown on

- playing messages through the speakerphone.
- Press ▲/VOLUME/▼ to adjust the message playback volume.
- Press 6 to skip to the next message.
- Press 4 to repeat the message currently playing. Press 4 twice to listen to the previous message.
- Press 3 or MUTE/DELETE to delete the current message.
- Press OFF/CANCEL to stop the playback.

Adjust listening volume during message Stop the message playback playback

While listening message with a handset • Press OFF/CANCEL to stop the or at the base:

 Press VOLUME ▼ or VOLUME ▲ on the handset, or **VOL +** or **VOL -** on the **Using the telephone base**: telephone base to adjust the message \cdot Press / to stop the playback. playback volume.

Skip to the next message

Using a cordless handset:

• Press 6 to skip to the next message.

Using the telephone base:

• Press **>** to skip to the next message. Using a cordless handset:

Repeat the playing message

Using a cordless handset:

• Press 4 to repeat the message currently playing.

Using the telephone base:

currently playing.

Listen to previous message

Using a cordless handset:

• Press 4 twice to listen to the previous 1. Press \rightarrow/\blacksquare on the telephone base to message.

Using the telephone base:

• Press 🗲 twice to listen to the previous message.

Using a cordless handset:

playback.

Delete a message

You can only delete old (reviewed) messages. You cannot delete new messages until you review them. You cannot retrieve deleted messages.

- 1. Press **MENU/SELECT** when the telephone is not in use.
- 2. Press **MENU/SELECT** again to select **Play messages**. The system announces the number of messages, then begins playback. The message sequence is shown on the handset's screen.

While the message is playing, press • Press **4** to repeat the message **MUTE/DELETE** to delete the playing message. The handset announces, "Message deleted," and then advances to the next message.

Using the telephone base:

- listen to the messages.
- 2. Press X to delete the current message. The system advances to the next message.

Delete all messages

Using the base

- 1. Press 🗙 in idle mode. The telephone number from any touchtelephone announces, "To delete all tone telephone. old messages, press DELETE again."
- 2. Press 🗙 again. All previously 1. Dial your telephone number from any touch-tone telephone. reviewed messages are erased and the telephone announces, "All old 2. Once the system plays your messages deleted." announcement, enter the two-digit

Using a handset

- 1. Press MENU/SELECT in idle mode.
- 2. Press ∇ CID or \triangle \heartsuit to highlight Answering sys, then press MENU/SELECT.
- You can also enter the following remote 3. Press \triangledown CID or \blacktriangle \bowtie to highlight commands. Delete all old, then press MENU/SELECT.
- 4. Press MENU/SELECT to confirm. The handset displays **Deleting...**, then No old messages and then returns to the previous menu. You hear a confirmation tone.

Answering system remote access

You can reach your answering system remotely by dialing your home

- remote access code (19 is the default code).
 - The system automatically announces the number of new or old messages (if any), and then begins to play them.

Commands	Description		
1	Play all messages.		
2	Play new messages only.		
3	Delete the current message (during playback).		
33	Delete all old messages.		
4	Repeat the current message (during playback).		
5	Stop.		
*5	Listen to a list of remote commands.		
6	Skip to the next message (during playback).		
*7	Record a new announcement.		
8	Hang up the call.		
0	Turn the answering system on or off.		

3. Hang up or press 8 to end the call.

- If you do not press any key after you enter the remote access code, all new messages play. If there are no new messages, all old messages play.
- Once the new messages have played the telephone announces the help menu options. If you do not press any key within 20 seconds, the remote access call automatically disconnects.
- When the answering system is turned 2. Press \triangledown CID or \blacktriangle \bowtie to highlight off, the telephone answers after 10 rings, and announces, "Please enter your remote access code."
- When the memory is full, the answering system answers incoming calls after 10 rings and announces, "Memory is full. Enter your remote access code."

Call intercept while using answering system

When a caller is leaving a message on your answering system, you can stop recording and talk to the caller by pressing **_TALK/FLASH** or ****) on the handset.

Recording memo

Memosare your own recorded messages used as reminders for yourself or others using the same answering system. You can record your own memos using a system handset. Playback and delete them in the same way as incoming messages.

- 1. Press MENU/SELECT in idle mode.
- Answering sys, then press MENU/SELECT.
- 3. Press ▼ CID or ▲ 🖾 to choose Record memo and then press MENU/SELECT . The handset displays Recording... Stop [5] and announces, "Record after the tone. Press 5 when you are done."
- 4. Speak towards the handset microphone. Press 5 or OFF/CANCEL when you finish recording. The handset announces "Recorded."

NOTES

- If you record a memo when the answering system memory is full, the system announces, "Memory is full."
- Each memo can be up to three minutes in length. Memos shorter than two second are not recorded.
- When the answering system has less than three minutes of recording time left, the handset announces, "Less than three minutes to record," and displays Rec mem low.

Turn on or off the call screening

Use this feature to choose whether incoming messages can be heard over the telephone base when they are being recorded. If you turn call screening on, you hear the incoming message.

- 1. Press MENU/SELECT in idle mode.
- 2. Press \triangledown CID or \blacktriangle \bowtie to highlight Screen calls at the base Answering sys, then press MENU/SELECT.
- If the answering system and call 3. Press ∇ CID or \triangle \square to highlight Ans screening are on, the announcement sys setup, then press MENU/SELECT and the incoming message broadcast twice to select Call screening. at the telephone base when a call is answered by the answering system.
- 4. Press \triangledown CID or \blacktriangle \bowtie to choose between **On** and **Off**, then press Options while a message is being **MENU/SELECT** to save. recorded

Screen a call with answering system

Screen calls at the cordless handset

If the answering system is on and a call is being answered by the answering system, the handset shows To screen call and press [SELECT] alternately. Press MENU/SELECT to screen the call on your handset. The handset shows

the caller's information. If you do not subscribe to caller ID service, the handset shows Screening....

Options while a message is being recorded

- Press \blacktriangle /VOLUME/ \lor on the handset to adjust the call screening volume.
- Press ◄) to switch between speakerphone mode and handset mode.

- Press VOL + on the telephone base to adjust the call screening volume.
- Press >/■ to temporarily turn on the call screening if the call screening is set to off.

Announcement

when calls are answered by the answering system. The telephone has a default outgoing announcement, "Hello, please Play your announcement leave a message after the tone." You can use this announcement, or record your own.

Record a new outgoing announcement

The announcement can be up to 90 seconds in length.

- 1. Press MENU/SELECT in idle mode.
- 2. Press \bigvee CID or \blacktriangle V to scroll to **Answering sys**, then press MENU/SELECT.
- 3. Press **MENU/SELECT** to select Announcement.
- 4. The screen displays Play [2] Del [3] Rec [7] and it announces, "To play, press 2. To record, press 7." Press 7 to record.
- 5. The handset announces, "Record after the tone. Press 5 when you are done." and it displays **Recording... Stop** [5].
- 6. After the tone, speak towards the handset microphone.
- 7. Press 5 when finished. The hand set plays back the recorded announcement. or **OFF/CANCEL** to 5 Press stop the playback at any time.

To listen to the recorded announcement again, wait after playback has completed, then press 2.

|≟ NOTE

Your outgoing announcement plays • Announcements shorter than two seconds will not be recorded.

- 1. Press MENU/SELECT in idle mode.
- 2. Press ∇ CID or \triangle \square to scroll to Answering sys, then press MENU/SELECT.
- MENU/SELECT 3. Press to select Announcement.
- 4. The screen displays Play [2] Del [3] Rec [7] and it announces, "To play, press 2. To record, press 7." Press 2 to play the current announcement.

Options during playback

- Press ▲/VOLUME/▼ to adjust the listening volume.
- Press 5 or OFF/CANCEL to stop at any time.
- Press \blacksquare to switch between the speakerphone and the handset earpiece.

Delete your annoucement

- 1. Press MENU/SELECT in idle mode.
- 2. Press \bigvee CID or \land \bigotimes to scroll to **Answering sys**, then press MENU/SELECT.
- 3. Press MENU/SELECT to select Announcement.
- 4. The screen displays **Play** [2] **Del** [3] **Rec** [7] and it announces, "To play, press 2. To record, press 7." Press 3 to delete your recorded announcement. The handset displays Annc deleted "Announcement and announces, deleted."

After you deleted your own recorded announcement, the answering system answers calls with the default announcement.

Voicemail (via Telephone service provider)

When you received a voicemail, the handset and the telephone base display and **New voicemail**.

To retrieve, you typically dial an access number provided by your telephone service provider, followed by a security code or PIN.

Some service providers bundle or combine multiple services like voicemail and call waiting, so you may not be aware that you have voicemail. To check what services you have and how to access them, contact your telephone service provider.

• After you have listened to all new voicemail messages, the indicators on the screen turn off automatically.

Turn off the new voicemail indicators

If you have retrieved your voicemail while away from home, and the handset and the telephone base still display the new voicemail indicators, use this feature to turn off the indicators.

This feature only turns off the displayed **New voicemail** and the \mathbf{M} ; it does not delete your voicemail messages. As long as you have new voicemail messages, your telephone service provider continues to send the signal to turn on the indicator.

- 1. Press MENU/SELECT in idle mode.
- 2. Press ▼ CID or ▲ № to highlight Settings, then press MENU/SELECT.
- Press ▼ CID or ▲ ♀ to highlight Clr voicemail, then press MENU/SELECT to turn the voicemail indicator off.

- Your telephone service provider voicemail might alert you to new messages with a stutter (broken) dial tone. Contact your telephone service provider for more details.
- For information about using your voicemail service, contact your telephone service provider.

Configure | Settings

Answering system settings

Set your built-in answering system

The answering system can record and store up to 99 messages. Each message can be up to 3 minutes in length. The total storage capacity for the announcement, messages and memos is approximately 22 minutes. The actual recording time depends on individual message characteristics. Messages remain available for replay until you delete them.

If the answering system has less than 3 minutes of recording time left, "Less than 3 minutes to record" is announced before the message playback and **Rec mem low** appears on the handset screen.

If the memory is full, the answering system announces, "Memory is full." The number of messages and **F** flash, alternatively, in the message window, and **Rec mem full** appears on the handset screen. You must delete some messages before recording new ones.

Your answering system allows you to set your announcement, to save and delete messages, activate call screening, to set number of rings before pick up, and to access remotely.

Set answering system through voice guide

This feature is an alternative way for you to do the basic setup of the answering system. You can follow the voice guide to record your own announcement, set the number of rings, and set the message alert tone.

- 1. Press **MENU/SELECT** on the handset in idle mode.
- Press ▼ CID or ▲ ♥ to highlight 2. Press ▼ CID or ▲ ♥ to highlight
 Answering sys, then press
 MENU/SELECT.
 Answering sys, then press
 MENU/SELECT.
- Press ▼ CID or ▲ ♀ to highlight Voice guide, then press MENU/SELECT . You hear a voice prompt, "Hello! This voice guide will assist you with the basic setup of your answering system."
 Press ▼ CID or ▲ ♀ to highlight Voice language, then press MENU/SELECT.
 Press ▼ CID or ▲ ♀ to highlight Voice language, then press MENU/SELECT.
 Press ▼ CID or ▲ ♀ to highlight Voice language, then press MENU/SELECT.
 Press ▼ CID or ▲ ♀ to highlight Press MENU/SELECT.
- 4. Set up your answering system by inputting designated numbers, as instructed in the voice guide.

- You can press **OFF/CANCEL** on the handset to quit the voice guide at any time.
- After a power outage, the telephone prompts you to set the date and time. After the date and time setting is done or skipped, the telephone then prompts if you want to set up the answering system via voice guide. Press MENU/SELECT to start the setup.

e	Set voice language
u	• This feature is available in Canada
g	version only.
е	
t,	The voice prompt language is preset

- The voice prompt language is preset to English. You can select English or French to be used for the voice prompts in your answering system.
- ŀ
- 1. Press MENU/SELECT in idle mode.

Set remote access code

remotely from any touch-tone phone, and there is at least one new message, you need to enter a two-digit number the telephone base beeps every 10 (00-99). By default, the remote access seconds. The tone stops when all new code is **19**.

To change the remote access code:

- 1. Press MENU/SELECT in idle mode.
- 2. Press ∇ CID or \triangle \heartsuit to highlight Answering then SYS, press MENU/SELECT.
- 3. Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to highlight Ans sys setup, then press MENU/SELECT.
- 4. Press ▼CIDor▲©tohighlightRemote code, then press MENU/SELECT.
- 5. Use the dialing keys to enter a twodigit number.

-OR-

desired two-digit number.

6. Press MENU/SELECT to confirm.

Turn on or off the message alert tone

To access your answering system When the message alert tone is set to **On**, messages have been reviewed.

- 1. Press MENU/SELECT in idle mode.
- 2. Press \triangledown CID or \blacktriangle \bowtie to highlight Answering sys, then press MENU/SELECT.
- 3. Press ∇ CID or \triangle \square to highlight Ans sys setup, then press MENU/SELECT.
- 4. Press ∇ CID or \triangle \square to highlight Msg alert tone, then press MENU/SELECT.
- 5. Press \triangledown CID or \blacktriangle \bowtie to choose On or Off, then press MENU/SELECT.

- Press ∇ CID or \triangle \square to scroll to a \cdot The message alert tone beeps only if all the following conditions are met.
 - Answering system is on.
 - Message alert tone setting is on.
 - There are new messages.

Dial modes

Temporary tone dialing

If you have pulse (rotary) service only, you can switch from pulse to touchtone dialing temporarily during a call. This is useful if you need to send touchtone signals to access your telephone banking or long distance services.

During a call

- 1. Press **TONE X** on the handset.
- 2. Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals.
- 3. The telephone automatically returns to pulse dialing after you end the call.

Set dial mode

The dial mode is preset to tone dialing. If you have pulse (rotary) service, you must change the dial mode to pulse dialing before using the telephone.

To set the dial mode

- 1. Press MENU/SELECT in idle mode.
- 2. Press \triangledown CID or \blacktriangle \bowtie to highlight Settings, then press MENU/SELECT
- 3. Press ▼ CID or ▲ 🖾 to highlight Dial mode, then press MENU/SELECT.
- 4. Press \triangledown CID or \blacktriangle V to choose Touch-tone or Pulse, then press MENU/SELECT.

• If you have dial pulse (rotary) dialing service only, refer to Temporary tone dialing to temporarily switch from pulse to touch-tone dialing during a call.

Ringer

Set ringer tone

You can choose from different ringer tones for each handset.

- 1. Press MENU/SELECT in idle mode.
- 2. Press ∇ CID or \triangle \heartsuit to highlight **Ringers**, then press **MENU/SELECT**.
- 3. Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to select Ringer tone, then press MENU/SELECT.
- 4. The screen displays Tone: with the current setting displayed. Press \checkmark CID or \blacktriangle to sample each ringer tone.
- 5. Press **MENU/SELECT** to save. You hear a confirmation tone.

• If you turn off the ringer volume, you will not hear ringer tone samples.

Set ringer volume

You can adjust the handset ringer volume level, or turn the ringer off.

Handset ringer volume

- 1. Press MENU/SELECT in idle mode.
- 2. Press \checkmark CID or \blacktriangle \heartsuit to highlight Ringers, then press MENU/SELECT twice.
- 3. Press \triangledown CID or \blacktriangle \bowtie to sample each ringer volume level.
- 4. Press MENU/SELECT to save.

Telephone base ringer volume

When the telephone base is idle, press - VOL + on the telephone base to adjust the ringer volume.

When you set the ringer volume to zero, the base ringer is off and the system announces, "Base ringer is off."

- If the ringer volume is set to **Off**, the idle screen displays \mathcal{A} .
- When the ringer volume is set to **Off**, the handset still rings when you press **FIND HS** at the telephone base.

Set date and time

The answering system announces the Set LCD language day and time of each message prior to You can select English, French, or Spanish playing it. Before using the answering to be used for all screen displays. system, set the date and time as follows. If you subscribe to caller ID service, the To select the LCD language day, month and time are set automatically with each incoming call. However, the 1. Press MENU/SELECT in idle mode. year must be correct so that the day of 2. Press \checkmark CID or \blacktriangle \bowtie to highlight the week can be calculated from the Settings, then and press caller ID information. MENU/SELECT.

After handset registration or a power failure, the handset will prompt you to set the date and time.

To set the date and time manually

- 1. Press MENU/SELECT in idle mode.
- 2. Press \bigvee CID or \blacktriangle \bigotimes to highlight Set If you accidentally change the LCD date/time, then press MENU/SELECT language to French or Spanish, you can reset it back to English without going through the French or Spanish 3. Use the dialing keys (0-9) to enter menus. Press MENU/SELECT in idle the month (MM), date (DD) and year mode, then enter ***364**#. There is a (YY). Then press MENU/SELECT. confirmation tone.
- 4. Use the dialing keys (**0**-**9**) to enter the hour (HH) and minute (MM). Then press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to choose AM or **PM**.
- 5. Press MENU/SELECT to save your setting. Your hear a confirmation tone.

Set languages

- 3. Press MENU/SELECT to select LCD language.
- 4. Press \triangledown CID or \blacktriangle \bowtie to highlight English, Français or Español, and then press MENU/SELECT to confirm.

Sound settings

Set number of rings

You can set the answering system to answer an incoming call after two, three, four, five or six rings; or toll saver.

If you choose toll saver, the answering system answers a call after two rings when you have new messages, or after four rings when you have no new messages. This enables you to check for new messages and avoid paying unnecessary long distance charges if you are calling from outside your local area.

To set the number of rings

- 1. Press MENU/SELECT in idle mode.
- 2. Press \triangledown CID or \blacktriangle \bowtie to highlight Answering then SYS, press MENU/SELECT.
- 3. Press ∇ CID or \triangle \heartsuit to highlight Ans sys setup, then press MENU/SELECT.
- 4. Press \triangledown CID or \blacktriangle \bowtie to highlight # of rings, then press MENU/SELECT.
- 5. Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\Theta}$ to choose from 6, The handset displays Quiet mode on, 5, 4, 3, 2 or Toll saver.
- 6. Press MENU/SELECT to save.

• If you have muted the first ring, • you will hear one ring less before the answering system answers the incoming calls.

Set QUIET mode

When **QUIET** mode is turned on, the telephone silences all sounds during the set period of time (1-12 hours). However, the handset locator paging tone and any sound-generating operations initiated by users, such as making calls using the speakerphone or setting ringer volume, will sound as normal. After you turn on **QUIET** mode, this feature activates immediately and the answering system turns on automatically.

When **QUIET** mode is on, the answering system takes calls and records messages without broadcasting them.

To turn QUIET mode on

- 1. Press and hold **QUIET** # when the handset is not in use.
- 2. The handset displays **Quiet:** _ _ hours. Use the dialing keys (**0**-**9**) to enter the desired duration (1-12).
- 3. Press MENU/SELECT to save. You hear a confirmation tone.

ANS ON and Δ . The \bigcirc **ANS ON** light on the telephone base turns on.

When you change the settings of the ringer tone, handset ringer volume or telephone base ringer volume, you can still hear the samples even if the quiet mode is on.

To turn QUIET mode off

Press and hold **QUIET** # when the handset is not in use. The handset displays **Quiet mode off** briefly and then returns to idle.

Set listening volume

While on a call or message playback, the handset or telephone base.

To adjust the listening volume of a handset

• Press \blacktriangle /VOLUME/ \forall on the handset while on a call.

To adjust the listening volume of the telephone base

• Press - VOL + while listening to the 2. Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to highlight message playback on the telephone Settings, then press MENU/SELECT. base.

Set key tone

The handset is set to beep with each volume or turn it off.

If you turn off the key tone, there are no beeps when you press keys.

To set the key tone

- 1. Press MENU/SELECT in idle mode.
- 2. Press \triangledown CID or \blacktriangle \bowtie to highlight Settings, then press MENU/SELECT.
- 3. Press $\mathbf{\nabla}$ CID or \mathbf{A} $\mathbf{\nabla}$ to highlight Key tone, then press MENU/SELECT.
- 4. Press ∇ CID or \triangle \square to select On or Off.
- 5. Press MENU/SELECT to confirm.

Voicemail settings

Set speed dial voicemail number

This feature lets you save your voicemail number for quick access when you press and hold the $\mathbf{M} \mathbf{1}$ key.

To set your voicemail number

- you can adjust the listening volume on 1. Press and hold $\mathbf{M}\mathbf{1}$ when the phone is not in use.
 - 2. Use the dialing keys to enter the voicemail number (up to 30 digits).
 - 3. Press MENU/SELECT to save. Then the handset dials the saved voicemail number.

- OR -

- 1. Press MENU/SELECT in idle mode.
- 3. Press \checkmark CID or \blacktriangle \heartsuit to highlight #, then Voicemail press MENU/SELECT.
- key press. You can adjust the key tone 4. Use the dialing keys to enter the voicemail access number (up to 30 digits) provided by your telephone service provider.
 - Press $\mathbf{\nabla}$ CID or $\mathbf{\Delta}$ $\mathbf{\nabla}$ to move the cursor to the left or right.
 - Press MUTE/DELETE on the handset to erase a digit.
 - Press and hold MUTE/DELETE on the handset to erase all digits.
 - Press and hold **REDIAL/PAUSE** to enter a three-second dialing pause (a **P** appears).
 - 5. Press MENU/SELECT to confirm. 55

Add and register handset

product box are already registered as HANDSET 1, and so forth.

You can add new CS5309 handsets (purchased separately and available in the US only) to your CS5329/CS5329-2/ CS5329-3/CS5329-4 telephone system. If registration fails, Registration failed Your telephone system supports a maximum of 5 handsets. If you have handset shows To register HS... and ... see purchased expansion handset for your CS5329/CS5329-2/CS5329-3/CS5329-4, each expansion handset must be registered with the telephone base again from Step 1. before use. When first purchased, each expansion handset displays To register HS... and ... see manual alternately.

- Expansion handset **CS5309** is available in the US only.
- Charge the new handset without interruption for at least 30 minutes before registering it to the telephone base.
- You cannot register a handset if any other system handset is in use.

To register a handset to CS5329/CS5329-2/CS5329-3/CS5329-4 telephone base

- The handsets provided within your 1. Put the handset you wish to register on the telephone base cradle.
 - 2. The handset shows Registering.... If the registration is successful, the handset screen displays Registered and beeps. The handset is now registered with the telephone base. appears on the handset screen. The manual alternately, and the telephone base returns to idle mode. This may take up to five minutes to occur. Please start

General product care

Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

Your telephone can be damaged in it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a dry nonabrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

Technical specifications

s t	Frequency control	 Crystal controlled PLL synthesizer
	Transmit frequency	 Handset: 1921.536-1928.448 MHz Telephone base: 1921.536- 1928.448 MHz
_	Channels	• 5
e † D	Nominal effective range	 Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
f	Power requirement	 Handset: 2.4V Ni-MH battery Telephone base: 6V DC @ 0.4A Charger: 6V DC @ 0.4A
t 1 2	Memory	 Phonebook: 50 memory locations; up to 30 digits and 15 characters Caller ID log: 30 memory locations; up to 24 digits and 15 characters Call block: 150 entries

When it is fully charged, you can expect the following performance.

Operation	Operating time*
Talk time	7 hours
(cordless	
handset)	
Standby	• 5 days

* Operating times vary depending on your actual use and the age of the battery.

DECT 6.0 digital technology

The VTech DECT 6.0 products offer unsurpassed range performance and sound clarity. This is achieved through a unique antenna design and advances in noise-filtering technology. An independent laboratory has confirmed that VTech DECT 6.0 products perform up to 45% better in range competitions against similarly equipped phones of the leading competition. Now, calls can be taken in the basement, backyard and garage with exceptional sound quality.

Telephone operating range

This cordless telephone operates within the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over a certain distance – which can vary with the locations of the telephone base and handset, the weather, and the construction of your home or office.

Redefining long range coverage and clarity

This telephone base comes with an antenna which gives much better clarity and covers a longer range than before.

Simulated full-duplex handset and base speakerphones

The simulated full-duplex speakerphone on your handset and telephone base allow both ends of a call to speak and be heard at the same time. Optimal performance is subject to external factors and individual usage.

Frequer	ntly asked		Make sure there is a dial tone before dialing. It is normal if the
questio	าร	l cannot dial out.	handset takes a second or two to synchronize with the telephone base before producing a dial tone. Wait an extra second before dialing.
	e questions most ked about the cordless		
telephone. If you cannot find the answer to your question, visit our U.S. website at <u>www.vtechphones.com</u> or call 1 (800) 595-9511 for customer service. In Canada, go to <u>phones.vtechcanada.com</u> or call 1 (800) 267-7377 .			Eliminate any background noise. Mute the handset before dialing, or dial from another room in your home with less background noise.
		The display shows To register HS and see manual alternately. The	The handset is deregistered from the telephone base. Place the handset in the telephone base to register it back. The handset shows Registered and you hear a beep when the registration process completes. This process
My telephone	Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use.	handset does not work at all.	takes about 60 seconds to complete.
does not work at all.		The display shows Low battery .	Place the handset in the telephone base or charger for charging.
	Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord. If changing the telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact your telephone service provider. You may be using a new cable or VoIP service, the existing telephone jacks in your home may no longer work. Contact your	The battery does not charge in the handset or the handset battery does not accept charge.	Make sure the handset is placed in the telephone base or charger correctly.
			If the battery is completely depleted, charge the battery for at least 30 minutes before use.
The display			You may need to purchase a new battery.
shows No line . I cannot hear the		The telephone does not ring when there is an incoming call.	Make sure the ringer volume is not set to off.
dial tone.			The handset may be too far from the telephone base. Move it closer to the telephone base.
		My handset beeps and is not performing normally.	Move the handset closer to the telephone base. It may be out of range.
L	service provider for solutions.	I hear noise on the cordless handset and the keys do not work.	Make sure the telephone line cord is plugged in securely.

I hear other calls when using the telephone.	Disconnect the telephone base from the telephone wall jack. Plug in a different telephone. If you still hear other calls, the problem is probably in the wiring or telephone service. Contact your telephone service provider.	The telephone does not receive caller ID or the	Caller ID is a subscription service. You must subscribe to this service from your telephone service provider for this feature to work on your telephone. Both your and the caller's telephone service providers must	The answering	Make sure the answering system is on. When the answering system is on, ANS ON should display on the handset and the telephone base. When the answering machine memory is full, it does not record new messages until some old
	The handset may be out of range. Move it closer to the telephone base. If you subscribe to high-speed Internet service (DSL - digital subscriber line) through your	telephone does not show caller ID during call waiting.	use equipment compatible with the caller ID service. The caller may not be calling from an area which supports caller ID The caller ID information displays after the first or second ring.	system does not record messages.	messages are deleted. If you subscribe to voicemail service, change the number of rings so that your answering system answers before your voicemail service answers. To determine how
	caller ID problems caused by DSL interference. Contact your	The display	The handset may be out of range. Move it closer to the telephone base.		many rings activate your voicemail service, contact your telephone service provider.
There is interference during a telephone		shows Out of range or no pwr at base.	Make sure the power cord is securely plugged into the telephone base. Use a working electrical outlet not controlled by a wall switch.	The messages on the answering system are very difficult to hear.	Press ▲/VOLUME on the handset or VOL + on the telephone base to increase the listening volume.
conversation. My calls fade out when I am using the cordless handset.	Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference. Try moving the appliance or telephone base to another outlet. The location of your telephone base can impact the performance	I cannot hear any instruction from the handset when I try to record, play or delete my own	The handset does not have a speakerphone. When recording, playing or deleting your own announcement, the instructions are announced through the handset receiver. Make sure you place the handset receiver close to	The answering system does not announce the correct day of the week for recorded messages time	Make sure you have set the date and time. See Set date and time section.
	of your cordless phone. For better reception, install the telephone base in a centralized location within your home or office, away	announcement	your ear. When recording the announcement, make sure you speak in a normal tone of voice towards the microphone of the handset.	stamp. The messages	The maximum length for a message is four minutes. If a caller leaves a very long message, i.e., more than four minutes, part of it may be lost when the answering system disconnects the call.
			Make sure there is no background noise when recording.	on the answering system are incomplete.	If the memory on the answering system becomes full during a message, the answering system stops recording and disconnects

Make sure the answering system is on. When the answering system is		Make sure you enter the correct remote access code.
on, ANS ON should display on the handset and the telephone base.		Make sure you are calling from a touch-tone telephone. When
When the answering machine memory is full, it does not record new messages until some old messages are deleted.	The answering system does not respond	dialing a number, there should be tones. If there are clicks, then it is not a touch-tone telephone and cannot activate the answering
If you subscribe to voicemail service, change the number of rings so that your answering system answers before your voicemail service answers. To determine how many rings activate your voicemail service, contact your telephone	to remote commands.	system. The answering system may not detect the remote access code when your announcement is playing. Wait until the announcement is over before entering the code.
service provider. Press ▲/ VOLUME on the handset		Make sure your computer is powered on, and your Internet is working properly.
or VOL + on the telephone base to increase the listening volume.	I subscribe to a nontraditional	Make sure to plug your USB telephone adapter into a dedicated USB port on your computer. Do not plug into a multiple port USB hub
Make sure you have set the date and time. See Set date and time section.	telephone service that uses my computer to establish connections, and my	(USB splitter) that is not powered. In a few rare instances, the USB port on your computer may not have enough power. In these instances, try using a USB hub with
	telephone doesn't work.	its own external power supply. If you are using a firewall, it
The maximum length for a message is four minutes. If a caller leaves a very long message, i.e., more than four minutes, part of it		may prevent access to your nontraditional telephone service. Contact your service provider for more information.
may be lost when the answering system disconnects the call.	l accidentally set my LCD	
If the memory on the answering system becomes full during a message, the answering system stops recording and disconnects the call. If the caller's voice is very soft,	language to Spanish or French, and I don't know how to change it back to English.	While the handset is not in use, press MENU/SELECT and then enter * 364# to change the handset LCD language back to English.
the answering system may stop recording and disconnect the call.		1

The RBRC seal

The RBRC seal on the nickel-metal hydride battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The program provides a convenient alternative to placing used nickel-metal hydride batteries into the trash or municipal waste, which may be illegal in your area.

VTech's participation makes it easy for you to drop off the spent battery at local retailers participating in the program or at authorized VTech product service centers. Please call

1 (800) 8 BATTERY® for information on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

The RBRC seal and 1 (800) 8 BATTERY® are registered trademarks of Call2recycle, Inc.



FCC, ACTA and IC regulations

FCC Part 15

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a • circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC/ISEDC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC/ISEDC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian requirement:

CAN ICES-3 (B)/NMB-3(B).

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your telephone service provider upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See the installation instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your telephone service provider.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone service provider or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Replacement to this telephone equipment can only be made by the manufacturer or its authorized agents. For replacement procedures, follow the instructions outlined under the "Limited warranty".

- If this equipment is causing harm to the telephone
- other than the hands are maintained at a distance of network, the telephone service provider may temporarily discontinue your telephone service. The
 - telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone service provider is
 - required to notify you if such changes are planned.
 - If this product is equipped with a corded or cordless handset, it is hearing aid compatible.
 - If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:
 - Remain on the line and briefly explain the reason for the call before hanging up.
 - Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada

- This device contains licence-exempt transmitter(s)/
- receiver(s) that comply with Innovation, Science and
- Economic Development Canada's licence-exempt
- RSS(s). Operation is subject to the following two conditions:
- (1) This device may not cause interference.
- (2) This device must accept any interference, including
- interference that may cause undesired operation of the device.
- Privacy of communications may not be ensured when using this telephone.
- The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.
- The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN indicates the maximum
- number of devices allowed to be connected to a telephone interface. The termination of an interface
- may consist of any combination of devices subject
- only to the requirement that the sum of the RENs of all the devices not exceed five.
- This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

California Energy **Commission battery** charging testing instructions

This telephone is set up to comply with the energyconserving standards right out of the box. These instructions are intended for California Energy Commission (CEC) compliance testing only. When the CEC battery charging testing mode is activated, all telephone functions, except battery charging, will be 3. Débranchez ce téléphone de la prise murale avant disabled.

To activate the CEC battery charging testing mode:

- 1. Unplug the telephone base power adapter from the power outlet. Make sure all handsets are plugged with charged batteries before proceeding.
- 2. While you press and hold /FIND HS, plug the telephone base power adapter back to the power outlet.
- 3. After about 20 seconds, when the **IN USE** light starts

flashing, release /FIND HS and immediately press it again within two seconds.

When the phone successfully enters the CEC battery 7. Évitez d'installer le système téléphonique dans les charging testing mode, all handsets display To register HS... and ...see manual alternately.

When the phone fails to enter this mode, repeat steps 1 to 3 above.

To deactivate the CEC battery charging testing mode:

- 1. Unplug the telephone base power adapter from the power outlet, then plug it back in. Then the telephone base is powered up as normal.
- 2. Press and hold /FIND HS on the telephone base for about four seconds until the **IN USE** light turns on.
- 3. Press # QUIET on the handset and it shows **Registering...**. The handset shows **Registered** and you hear a beep when the registration process completes. This process takes about 60 seconds.

For C-UL compliance only

Mesures de sécurité importantes

Afin de réduire les risques d'incendie, de blessures corporelles ou d'électrocution, suivez toujours ces mesures préventives de base lorsque vous utilisez votre téléphone :

- 1. Lisez et comprenez bien toutes les instructions.
- 2. Observez toutes les instructions et mises en garde inscrites sur l'appareil.
- de le nettoyer. N'utilisez pas de nettoyeurs liquides ni en aérosol. N'utilisez qu'un chiffon doux et légèrement humecté.
- 4. **ATTENTION**: Ne pas installer le socle téléphonique à une hauteur supérieure à 2 mètres.
- 5. N'utilisez pas ce produit près de l'eau, tel que près d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la douche.
- 6. Ne déposez pas ce téléphone sur un chariot, support ou table chancelants. L'appareil pourrait tomber et être sérieusement endommagé.
- endroits soumis à une température extrême, à la lumière directe du soleil ou à proximité immédiate d'autres appareils électriques ou électroniques. Protégez votre téléphone contre les sources d'humidité, la poussière, les vapeurs et les liquides corrosifs.
- 8. Le boîtier de l'appareil est doté de fentes et d'ouvertures d'aération situées à l'arrière ou en dessous. Afin d'empêcher la surchauffe, ces ouvertures ne doivent pas être obstruées en plaçant l'appareil sur un lit, divan, tapis ou autre surface similaires. Ne placez pas cet appareil à proximité d'un élément de chauffage ni d'une plinthe électrique. De plus, ne l'installez pas dans une unité murale ou un cabinet fermé qui ne possède pas d'aération adéquate.
- 9. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur les étiquettes de l'appareil. Si vous ne connaissez pas le voltage de votre maison, consultez votre marchand ou votre fournisseur d'électricité.

- 10. Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sécuritaire, là où personne ne pourra trébucher sur la ligne d'alimentation ni le cordon téléphonique modulaire.
- 11.N'insérez jamais d'objets à travers les fentes et ouvertures de cet appareil, car ils pourraient toucher à des points de tension dangereux ou court-circuiter des pièces, ce qui constituerait un risque d'incendie ou d'électrocution. N'échappez pas de liquides dans l'appareil.
- 12. Afin de réduire les risques d'électrocution, ne démontez pas l'appareil, mais apportez-le plutôt à un centre de service qualifié s'il doit être réparé. En enlevant le couvercle, vous vous exposez à des tensions dangereuses ou autres dangers similaires. Un remontage inadéquat peut être à l'origine d'une électrocution lors d'une utilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage. Utilisez un chiffon humide et doux.
- 13.Ne surchargez pas les prises de courant et les rallonges.
- 14. Débranchez cet appareil de la prise de courant et communiquez avec le département de service à la clientèle de VTech dans les cas suivants :
 - Lorsque le cordon d'alimentation est endommagé ou écorché.
 - Si du liquide a été échappé dans l'appareil.
 - Si l'appareil a été exposé à une source d'humidité telle que la pluie ou l'eau.
 - Si le produit ne fonctionne pas normalement en respectant les instructions de fonctionnement. Réglez uniquement les commandes indiquées dans le les instructions de fonctionnement. Les réglages incorrects des autres commandes pourraient provoquer un dommage qui pourrait exiger un travail exhaustif de la part d'un technicien autorisé afin de rétablir le fonctionnement normal de l'appareil.
 - Si le produit a été échappé et que le socle et/ou le combiné a été endommagé.
 - Si le produit affiche une nette diminution de sa performance.
- 15.Évitez d'utiliser un téléphone (autre qu'un sans fil) pendant un orage. Les éclairs peuvent être à l'origine d'une électrocution.
- 16. N'utilisez pas le téléphone pour rapporter une fuite de gaz à proximité de la fuite. En certaines

circonstances, une flammèche pourrait être provoquée lorsque l'adaptateur est branché à une prise de courant, ou lorsque le combiné est déposé sur le socle. Ceci est un événement commun associé à la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une prise de courant, et ne devrait pas déposer le combiné chargé sur le socle, si le téléphone se trouve à proximité d'un endroit comportant des concentrations de gaz inflammables, à moins que la ventilation soit adéquate. Une flammèche dans un tel endroit pourrait provoquer un incendie ou une explosion. De tels environnements peuvent comprendre: des endroits où l'on utilise de l'oxygène médical sans ventilation adéquate; des gaz industriels (dissolvants de nettoyage, des vapeurs d'essence, etc.); une fuite de gaz naturel, etc.

- 17. Ne placez que le combiné de votre téléphone près de votre oreille lorsqu'en mode de conversation.
- 18. Ces adaptateurs ont été conçus pour être orientés en position verticale ou montés au sol. Les broches ne sont pas conçues pour maintenir l'adaptateur en place si celui-ci est barnché dans une prise au plafond ou sous une table/ armoire.
- **19. Pour le MATERIEL RACCORDE PAR PRISE DE** COURANT, le socle de prise de courant doit etre installe a proximite du materiel et doit etre aisement accessible.
- 20. 🗥 🖽 MISE EN GARDE: Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour le téléphone. N'utilisez que les piles rechargeable inclus ou les piles de rechange (BT162342/BT262342). N'incinérez pas les piles. Celles-ci risqueraient d'exploser. Mettre au rebut les batteries usagées conformément aux instructions du fabricant. Débrancher les lignes téléphoniques avant le remplacement des piles.
 - Évite d'utiliser la batterie dans les conditions suivantes:
 - des températures extrêmes faibles ou élevées auxquelles une batterie peut être soumise pendant l'utilisation, le stockage ou le transport.
 - remplacement d'une batterie par un type incorrect pouvant supprimer une protection.
 - mise au rebut d'une batterie dans un feu ou dans un four chaud, ou écrasement

mécanique ou coupure d'une batterie, susceptible de provoquer une explosion.

- maintien d'une batterie dans un environnement à très haute température pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables.
- batterie soumise à une pression de l'air extrêmement faible pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables.
- 21. N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril.
- 22. La plaque signalétique appliquée est située au bas ou à proximité du produit.

CONSERVEZ CES INSTRUCTIONS

Pile

- N'utilisez que la pile incluse ou l'équivalent. Pour commander une pile de recharge, visitez notre site Web au www.vtechphones.com ou composez le 800-595-9511. Au Canada, visitez le phones.vtechcanada.com ou composez le 800-267-7377.
- Ne jetez pas la pile au feu. Vérifiez les instructions spécifiques de mise aux rebus auprès des autorités locales.
- N'ouvrez pas et ne mutilez pas la pile. L'électrolyte qui s'en échapperait est corrosif et pourrait causer des brûlures ou des blessures aux yeux ou à la peau. L'électrolyte est toxique si avalé.
- Soyez prudents lorsque vous manipulez les piles afin d'éviter les courts-circuits provoqués par des matériaux conducteurs.
- Rechargez la pile incluse avec cet appareil, selon les instructions et limites spécifiées dans ce guide d'utilisation.

Stimulateurs cardiaques implantés dans l'organisme

Les simulateurs cardiaques (s'applique uniquement aux téléphones numériques sans fil):

L'organisme 'Wireless Technology Research, LLC

(WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins:

Avis aux détenteurs de stimulateurs cardiaques

- Ils doivent tenir le téléphone sans fil à une distance d'au moins six pouces du stimulateur cardiaque.
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.
- Ils doivent utiliser le téléphone sans fil en l'appuyant sur l'oreille qui se trouve dans la direction opposée au stimulateur cardiaque.

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent un téléphone sans fil à proximité de ceux-ci.

À propos des téléphones sans fil

- **Confidentialité :** Les mêmes caractéristiques qui constituent des avantages pour les téléphones sans fil affichent également des restrictions. Les appels téléphoniques sont transmis entre le combiné sans fil et le socle par le biais d'ondes radio ; il y a donc la possibilité que vos conversations téléphoniques sans fil soient interceptées par des équipements de réception radio se trouvant dans la portée du combiné sans fil. Pour cette raison, vous ne devez pas percevoir les communications téléphoniques sans fil comme étant aussi confidentielles que celles des téléphones à cordons.
- Alimentation électrique : Le socle de ce téléphone sans fil doit être branché à une prise électrique fonctionnelle. La prise électrique ne doit pas être contrôlée par un interrupteur mural. Les appels ne pourront pas être effectués du combiné sans fil si le socle est débranché ou mis hors tension ou si le courant est coupé.
- Possibilité d'interférences aux téléviseurs : Certains téléphones sans fil fonctionnent sur des fréquences pouvant causer des interférences aux téléviseurs et aux magnétoscopes. Pour réduire ou prévenir de telles interférences, ne placez pas le socle du téléphone sans fil près ou sur un téléviseur ou

magnétoscope. S'il y a présence de parasites, il est conseillé d'éloigner le téléphone sans fil du téléviseur ou du magnétoscope afin de réduire possiblement les interférences.

- Piles rechargeables : Manipulez les piles avec soin afin de ne pas les court-circuiter avec des bagues, bracelets ou clés. Les piles ou le conducteur peut surchauffer et causer des blessures. Respectez la polarité adéquate entre la pile et le chargeur.
 VTech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this user's manual. VTech Communications, Inc. and its suppliers assume no responsibility for any loss or claims by third parties
- Les bloc-piles rechargeables à l'hydrure métallique de nickel : Jetez ces blocs-piles de manière écologique et sécuritaire. Ne les incinérez pas et ne les percez pas. Tel que les autres piles de ce type, elles pourraient dégager une matière toxique qui peut causer des blessures corporelles si elles sont brûlées ou percées
 Les bloc-piles rechargeables à l'hydrure métallique de nickel : Jetez ces blocs-piles de manière écologique et sécuritaire. Ne les incinérez pas et ne les percez pas. Tel que les autres piles de ce type, elles pourraient dégager une matière toxique qui peut causer des blessures corporelles si elles sont brûlées ou percées

Disclaimer and Limitation of Liability

What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective **Product**")?

During the limited warranty period, VTech's authorized service representative will replace at VTech's option, without charge, a Materially Defective Product. If we 5. Product to the extent that the problem is caused replace the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the replacement Products to you in working condition. You should expect the replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the replacement Product for a period of either (a) 90 days from the date the replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

What is not covered by this limited warranty?

This limited warranty does not cover:

1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion.

- 2 Product that has been subjected to contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like; but then only to the extent the damage was not caused by incorrectly securing the waterproof handset's protective elements, for example, failing to properly close a seal), or such protective elements are damaged or missing (e.g. a cracked battery door), or subjecting a Product to conditions beyond its stated specifications or limits (e.g. 30 minutes in 1 meter of fresh water).
- 3. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech;
- 4. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems;
- by use with non-VTech accessories;
- 6. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible;
- Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes);
- Product returned without a valid proof of purchase (see item 2 below); or
- 9. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

How do you get warranty service?

To obtain warranty service in the United States of America, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to phones.vtechcanada.com or dial 1 (800) 267-7377.

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/ provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

incurred in the transport of the Product(s) to the service location. VTech will return replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of replacement prior to any further replacement activity. You must pay for the cost of replacement and return shipping costs for the replacement of Products that are not covered by this limited warranty.

Please retain your original sales receipt as What must you return with the Product proof of purchase to get warranty service?

- 1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and
- 2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and
- 3. Provide your name, complete and correct mailing address, and telephone number.

Other limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary

Limited Warranty

Go to <u>www.vtechphones.com</u> (US) to register your product for enhanced warranty support and latest VTech product news.

Go to **phones.vtechcanada.com** (Canada) for the latest VTech product news.



Specifications are subject to change without notice. © 2023 VTech Communications, Inc. | © 2023 VTech Technologies Canada Ltd. All rights reserved. V2. 01/23