 


VP-110

QFX
WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference.

 
Carefully observe all warnings, precautions and instructions on the appliance and in the operating instructions, and adhere to them.

INSTALLATION

Water and Moisture - Do not use poweroperated appliances near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.



Heat - Do not place the appliance near or over a radiator or heat register, or where it is exposed to direct sunlight.

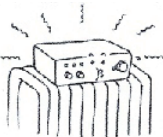


Ventilation - The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the appliance, and to protect it from overheating, these slots and openings must never be blocked or covered.
- Never cover the slots and openings with a cloth or other materials.




- Never block the slots and openings by placing the appliance on a bed, sofa, rug or other similar surface.



 - Never place the appliance in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.



 Accessories - Do not place the appliance on an unstable cart, stand, tripod, bracket, or table. The appliance may fall, causing serious injury to a child or an adult, and serious damage to the appliance. Use only a cart, stand, tripod, bracket, or table recommended.



- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



WALL or Ceiling Mounting - If your appliance can be mounted to a wall or ceiling, mount it only as recommended.

USE

Power Source - This appliance should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those appliances designed to operate from battery power, or other sources, refer to the operating instructions.



Grounding or Polarization - This appliance is equipped with a polarized AC power cord (Plug a plug having one blade wider than the other), or with two-wire grounding type plug (Plug having a second pin for grounding). A follow the instructions below:

- For the appliance with a polarized AC power Cord plug:
This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the Polarized plug by forcing it in.



Overloading - Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.



When not in use - Unplug the power cord of the appliance from the outlet when left unused for a long period of time.
To disconnect the cord, pull it out by grasping the plug. Never pull the plug out by the cord.



Power-Cord Protection - Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.



Lightning - For added protection for this appliance during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the appliance due to lightning and powerline surges.

Cleaning - Unplug the appliance from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the appliance. Clean the appliance only as recommended.

Object and Liquid Entry - Never push objects of any kind into the appliance through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the appliar .



ANTENNAS

 
Outdoor Antenna Grounding - If an outdoor antenna or cable system is installed, follow the precautions below.

An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.

WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure. Grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Antenna Grounding According to the National Electrical code

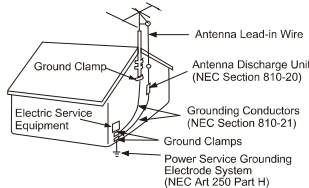

NEC-NATIONAL ELECTRICAL CODE

SERVICE

Damage Requiring Service-Unplug the appliance from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.



- If liquid has been spilled or objects have fallen into the appliance.



- If the appliance has been exposed to rain or water.



- The appliance does not appear to operate normally or exhibits a marked change in performance. - This indicates a need for service.



- If the appliance does not operate normally when following the operating instructions, adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the appliance to normal operation.



- If the appliance has been subject to excessive shock by being dropped, or the cabinet has been damaged.



Servicing - Do not attempt to service the appliance yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



Replacement parts-When replacement parts are required, be sure the service technician has used replacement parts specified that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.

 
Safety Check - Upon completion of any service or repairs to the appliance, ask the service technician to perform routine safety checks (as specified) to determine that the appliance is in safe operating condition.



1. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc. Minimum 10 cm distance around the apparatus for sufficient ventilation.
2. **WARNING** : To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
3. **WARNING**: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
4. **WARNING**: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
5. Invisible laser radiation when open and interlock defeated. Avoid exposure to beam of laser.


FRONT PANEL

The front of Portable Multi Media Player

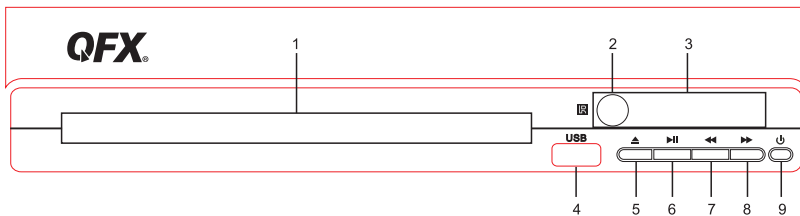

- | | |
|----------------------------|----------------------------|
| 1. Disc Tray | 6. Play/Pause Button |
| 2. Remote Control Receiver | 7. Fast rewind button |
| 3. LED display | 8. Fast forward button |
| 4. USB function | 9. Power On/Standby Button |
| 5. Open/Close Button | |

 The Back of Portable Multi Media Player

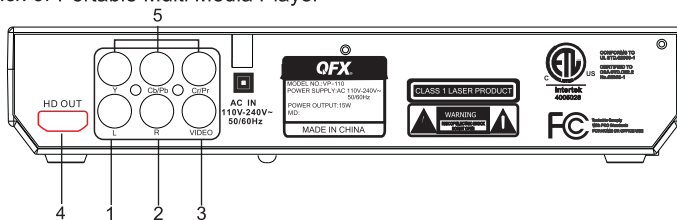

NO	Terminal	Description	Connection
1	L	Audio left channel	Connect to TV set (Audio)
2	R	Audio right channel	
3	Video	Video output	Connect to TV set Video input terminal
4	HD OUT	HDMI output	Connect to TV set HDMI input terminal
5	Y Cb/Pb Cr/Pr	Y Cb/Pb Cr/Pr output	Connect to TV set Y Cb/Pb Cr/Pr input terminal

REMOTE

- When use, direct the remote control to the infra-red sensor (within 45 degrees)
- Do not put remote control near to the place with high temperature or moisture
- Do not put water or any other object on remote control
- Do not use new and old batteries or different type batteries together
- Please replace batteries when find remote control is out of work or weak sensitivity.
- 2xAAA batteries are not included



- | | |
|-----------------|----------------|
| 1. POWER | 20. OPEN/CLOSE |
| 2. 0-10+ NUMBER | 21. GOTO |
| 3. ANGLE | 22. TITLE |
| 4. LANGUAGE | 23. SUBTITLE |
| 5. RETURN | 24. MENU |
| 6. UP | 25. RIGHT |
| 7. LEFT | 26. ENTER |
| 8. SETUP | 27. SLOW |
| 9. PLAY/PAUSE | 28. DOWN |
| 10. N/P | 29. STOP |
| 11. PREV | 30. VOL+ |
| 12. STEP | 31. NEXT |
| 13. REV | 32. VOL- |
| 14. PROG | 33. FWD |
| 15. RESUME | 34. MUTE |
| 16. CLEAR | 35. REPEAT |
| 17. L/R | 36. PBC |
| 18. DVD/FM | 37. OSD |
| 19. ZOOM | 38. RESET |
| | 39. A-B |

Press **"SETUP"** on remote control

Use the < and > to navigate to the appropriate Main Menu sections (General, Audio, Digital, Video Preference).

Press **"Enter"** to select the appropriate category.



Use the same navigation/selection method to select sub-menus below.

General

- TV Display: Select *Normal/PS, Normal/LB* or *Wide*
- Angle Mark: Select *On* or *Off*
- OSD Language: Select *English, French, German, Spanish, Italian, Russian*
- Captions: Select *On* or *Off*
- Screen Saver: Select *On* or *Off*
- HDCD: Select *Off, 1X* or *2X*
- Last Memory: Select *On* or *Off*

Audio

- Speaker Setup: Select Speaker Setup Page *Downmix L/R* or *Stereo*
- Equalizer: Select EQ Type *Off, Rock, Pop, Live, Dance, Techno, Classic* or *Soft*
- 3D Processing: Select Reverb Mode *Off, Concert, Hall, Bathroom, Cave, Arena, Church*

Digital

- Dual Mono: Select Dolby Digital Setup Mode to *Stereo, L-Mono, R-Mono* or *Mix-Mono*
- Dynamic: Select Dolby Digital Setup Dynamic Mode Level Adjustment from *OFF* up to *Full Level*



- OPEN/CLOSE** ● To open the disc tray, press OPEN/CLOSE
To close the disc tray, press OPEN/CLOSE again.
- TITLE** ● During Discs playback, press TITLE to display the Discs title menu or play the first title.
Note: this function is subject to the disc.
- MENU** ● During Discs playback, press MENU to display the disc menu of the current title.
- OSD** ● During Discs playback, press display OSD to display the current time counter position as follows.
- | | |
|---------------------------------|---------------------------------|
| VCD 2.0 | VIDEO |
| Time_ _ _ _ _ / _ _ _ _ _ | Time_ _ _ _ _ / _ _ _ _ _ |
| ↓ | ↓ |
| Elapsed time | Elapsed time |
| Left time for the current track | Left time for the current track |
- 0-10 Keys** ● These keys are used to input the time, as well as title, chapter and track numbers.
- When Discs is playing (with PBC off), press the 0-10 keys to select a track Directly.
 - When a numeric item is displayed on the screen, press the 0-10 keys to select the desired entry.
- PREV** ● During Discs Playback, press PREV to play the previous chapter, title or track.
- NEXT** ● During Discs Playback, press NEXT to play the next chapter, title or track.
- REPEAT** ● Each press of the REPEAT button will change the repeat mode.
- During Discs Playback, there are three modes: repeat Single, repeat All and Off.
 - During Discs Playback, there are three modes: repeat chapter, repeat title and Off.
 - Note: During Disc playback, the PBC mode must be set to Off.
- A-B** ● During playback, press A-B to select point A.
- Press it again to select point B. The player will repeat the section from A to B automatically.
 - Press A-B a third time to cancel A-B repeat and clear points A and B.
 - Note: During Discs Playback, points A and B must be within the same track.
 - During Discs Playback, points A and B can be selected from different chapters.
- REV** ● During Discs Playback press REV to in reverse.
- the disc at 2x, 4x, 8x, 16x or 32x speed.
 - Press PLAY to resume normal playback.
- FWD** ● During Discs Playback, press FWD to forward. The disc at 2, 4, 8 and 20 times speed.
- Press PLAY to resume normal playback.
- N/P** ● Press the N/P button to switch the TV system accordingly.
- DVD/FM** ● Press this key while playing to enter FM mode, and then press this key again to return to DVD reading mode.

FM RADIO Operating instructions :

1. Press USB/FM to switch from FM radio mode.
2. Press the Play/pause button to enter the receiver mode.
The frequency numbers on the screen will jump, and save the stations received.
3. Press the fast forward and fast back button. Fine tuning up and down for radio.
4. Press the up and down keys for Radio on-off option
5. Press the number key to enter the corresponding radio station.

AUDIO

During Discs Playback , press AUDIO to select the channel of audio-output: Left / Right / Mix / Stereo.

PLAY/PAUSE

Press PAUSE during playback to pause playback.
Press again to step forward one frame.
Press PLAY to resume normal palyback.

NOTE:the step function is not available during Discs Playback

STOP

Press STOP once during playback to stop and hold playback.
Press PLAY to resume playback from the point you have pressed STOP.
Press STOP twice to stop playback completely.

 
RETURN

When the PBC is on, press return ,and you can select once again from the menu displaying.
This function is only viable to VCD.

ZOOM

During Disc playback, press ZOOM to magnify the image

as follows:



This function can zoom,can't lessen

SETUP

Press the SETUP button on you remote control to access the setup menu.The setup menu is a Multi-level Menu.

Use the ▼ or ▲ buttons to select the menu option that you need.

Use the ◀ and ▶ to go back to previous level menu or to enter the next level menu.

Press ENTER button to confirm selection.

Press SETUP button to exit setup.

RESET

Under the stop mode,Press this key to reset the Portable Multi Media Player to default mode,this will not recover your Password set up.

VOL

Press VOL + to increase the volume.
Press VOL - to reduce the volume.

SUBTITLE

During disc playback,
Press SUBTITLE repeatedly to select from up to 32 subtitle languages.

ANGLE

During disc playback,
Press ANGLE to view scenes from different camera angles.

Press ANGLE repeatedly to change from one camera angle to another.

Note: This function is disc specific.

REMOTE CONTROL IS INSENSITIVE OR DOES NOT WORK

Check the batteries of remote control and make sure that they are powerful and in good conductivity
Direct the remote control to the IR sensor of the player.

Check whether there are some obstacles between the remote control and IR sensor.

ABNORMAL FUNCTION OPERATION

Turn off the power, and then turn on again.

DISC IS LOCKED IN THE TRAY

The disc can not be taken out of the tray when the player is reading, so you have to turn off the power and turn on again, and press OPEN/CLOSE key immediately to open the tray:

Audio Format	MPEG 1, LAYER 1, LAYER 2, LAYER 3	S/N ratio	> 92 dB
		THD	< 0.04%
Signal Output	Color System: PAL/NTSC/PAL-M/AUTO Video Output: 1 Vpp (at 75 ohm) Audio Output: 2 Vpp	Output Terminals	Video (composite) output X 1 2.0ch output X 1
		Power input	AC100-240V ~ 50/60Hz 15W
		Dimensions	Body size : W225xD200xH38mm Net weight : 0.74KG

Notes :

- There are many non-standardized disc-recording procedures and copyprotection procedures now in use and many different kinds of blank disks. Therefore in some cases read errors or read delays may be encountered. This is not a defect of the device.
- This player not responsible for play ability of MP3 in any case, Due to recording condition such as PC performance, writing software, media ability or etc.
- For CD-RW of CD-R, it may not be played according to the type of this disc.
- Due to the progressive development of the media, not all future media playable / readable.
The processors used have limitations - the exact information on your device,



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.

RMA Processing
 Customer Support Department
 2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 864-6900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



1-800-864-2582
 Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
 Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

Where the Party Begins!

We would love to hear about your VP-110 journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

