


- | | |
|------------------------|-----------------------|
| (A) Latch | (I) Battery Cover |
| (B) Back Door | (J) Film Chamber |
| (C) Film Rewind Crank | (K) Flash Light |
| (D) Film Take-up Spool | (L) Viewfinder |
| (E) Advance Wheel | (M) Lens |
| (F) Film Counter | (N) Shutter Release |
| (G) Rewind Button | (O) Flash Ready Light |
| (H) Hand Strap Hole | (P) Flash Button |


*AA BATTERY, 35 mm FILM not included

Product specification


Film Format: 35mm
 Outer Lens: 28mm, F=8, 3 element
 Focusing: Focus Free, 1/100m
 Shutter Speed: 1/120s
 Film Transport: Manual wind and rewind
 View Finder: Field=70%
 Power Source: 1AA -Alkaline Battery
 Dimensions: 4.6(W) x 2.5(H) x 1.6(D) in.
 Weight: 110 gram
 Material: Plastic Material: ABS

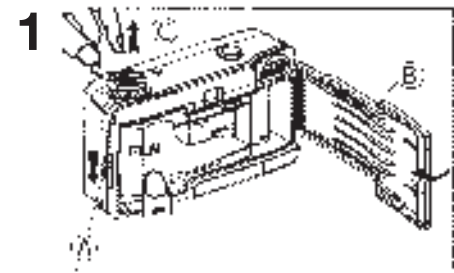


1 Press the latch (A) in the direction of the arrow and open the camera back door (B). Lift up the film rewind crank (C) and place a new roll of film into the film chamber.

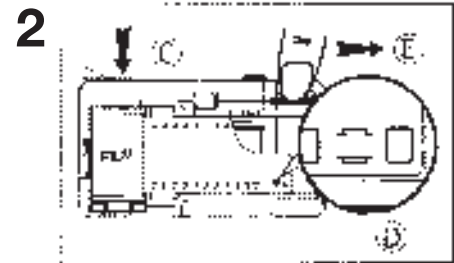

2 Push the rewind crank (C) back into place. Pull out the film from the film chamber and tape the 2nd hole onto the film take-up spool (D). Slightly advance the film by turning the film advance wheel (E).

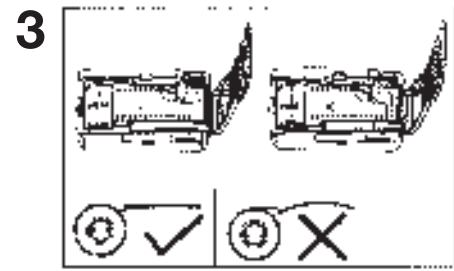


3 Ensure that the film has fit against the center of the camera and close the camera's back door.

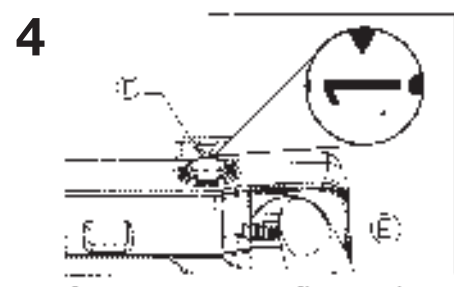


4 Continue to advance the film by turning the film advance wheel (E) until it stops. Press the shutter button. Repeat this procedure one more time. The Film Counter (F) will show the number "1", and the camera is ready for taking pictures.


5 For best results, stand at least 1 meter (3 feet) from the subject and take photos in bursts of partly sunny weather. When taking pictures, keep the aim at your back.

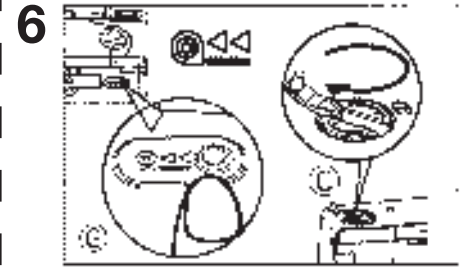

6 After all the pictures are taken, press the reset button (I) located at the bottom of the camera. Turn the film rewind crank (C) clockwise until all film is re-wound back into the film canister.

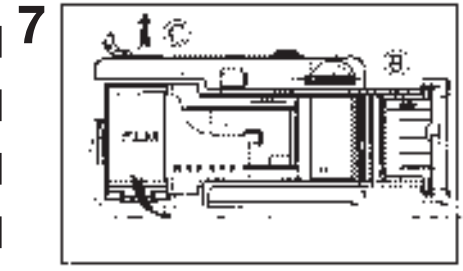

7 Close the camera back door (B). Lift up the film rewind crank (C), and remove the film for processing.

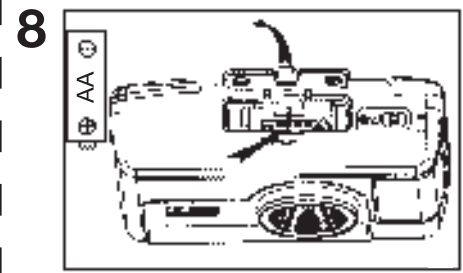

8 Open the battery door in the direction of the arrow. Insert one "AA" alkaline battery into the battery chamber. Make sure the battery is inserted according to the correct polarity. The correct polarity (the "+" and "-" ends of the battery) is indicated inside the battery compartment.

9 Switch the flash button to the "ON" position. Wait for the Flash Ready LED to glow. Once the Flash Ready Light glows, the flash is ready for taking pictures.

LIMITED One (1) Year Limited Warranty
 S. Bower Inc.™ One (1) Year Limited Warranty:
 This warranty gives you specific legal rights
 and you may have other rights which vary
 from state to state.

The S. Bower Inc.™ Limited Warranty is a voluntary manufacturer's warranty provided to the consumer. This warranty provides rights separate to rights provided by consumer law, including but not limited to those relating to non-conforming goods. S. Bower Inc.™ One-Year Limited Warranty benefits are in addition to, and not instead of, rights provided by consumer law and it does not exclude, limit or suspend a buyer's rights arising from consumer law. Consumers have the right to choose whether to claim service under the S. Bower Inc.™ One-Year Limited Warranty or under their consumer law rights. The S. Bower Inc.™ One-Year Limited Warranty terms and conditions shall not apply to consumer law claims, contact your local consumer organization. Please note: All claims made under the S. Bower Inc.™ One-Year Limited Warranty will be governed by the terms set out in this warranty document. S. Bower Inc.™ warrants to the product owner that this product will be free against defects in materials and workmanship for a period of ONE (1) YEAR from the date of original retail purchase when used in accordance with S. Bower Inc.™'s user manual. Under this warranty, you will be able to send your claims and defective product to S. Bower Inc.™, via freight prepaid, along with proof of purchase, and will be repaired or replaced, based on S. Bower Inc.™ sole discretion. Repair and/or replacement may be made with new or refurbished product components at S. Bower Inc.™ sole discretion. This limited warranty does not cover failures due to abuse, accidental damage or when repairs have been made or attempted by anyone other than S. Bower Inc.™ personnel. A defective product meeting the warranty conditions set forth herein will be replaced or repaired at no charge in either of two ways: The first, which will result in exchanges only, is to return the product to the retailer from whom it was purchased (provided that the store is a participating retailer). Returns should be made within the time period of the retailer's policy for exchanges. Proof of purchase may be required. Please check with the retailer for its specific return policy regarding time limits for returns or exchanges. The second option is to send the product (prepaid freight) to S. Bower Inc.™ corporate offices located at S. Bower Inc. 38-09 43rd Avenue 1st Floor Long Island City, NY 11101 for repair or replacement at S. Bower Inc.™'s option. Proof of purchase is required. Include name, return address, and issues that you are experiencing with S. Bower Inc.™ products. All other guarantees, express or implied, are hereby disclaimed. **This warranty does not apply to products sold in countries sold out of the United States.**