


16 inches wide

4 inches wide

- Dashed lines are folds
- Total Size: 6" x 16"
- Panel Size: 6" x 4"
- mod. 110824

step 5

attach all remaining hooks.

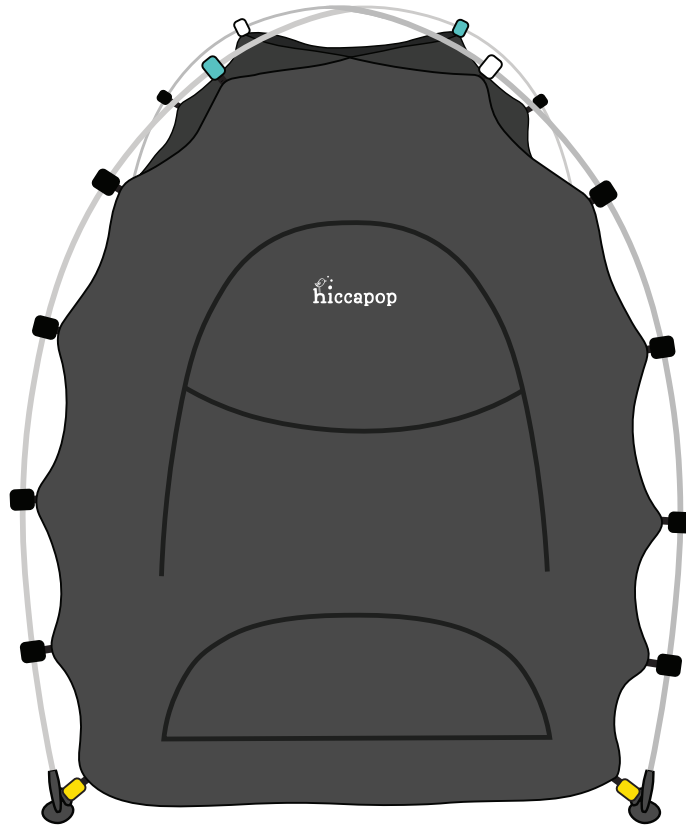

6

flap

step 6

place the DayDreamer® over your playard. that's it! done!

cleaning instructions:

remove poles and machine wash fabric using cold setting. allow fabric to air dry.

hiccatip #2

don't forget there's a camera holder at the top of your DayDreamer® if you want to use a video camera (we've used an ultra-fine mesh specifically designed for all camera lenses). the holder has a strap that will allow you to secure your camera.

flap

hiccatip #3

if you want to add a fan (even though we have 6 air vents), there's a pocket near the bottom to hold it. is it really needed? no. but occasionally AC goes out, so we thought parents might appreciate the option.

NEED HELP?

We have you covered!

Contact us at:
Hiccapop.com/
replacement
OR CALL TOLL FREE
833.442.2276



info@hiccapop.com

7

back



DayDreamer®

blackout tent

instruction manual


www.hiccapop.com

6 inches tall

front

want to make this simple?

check out our video:

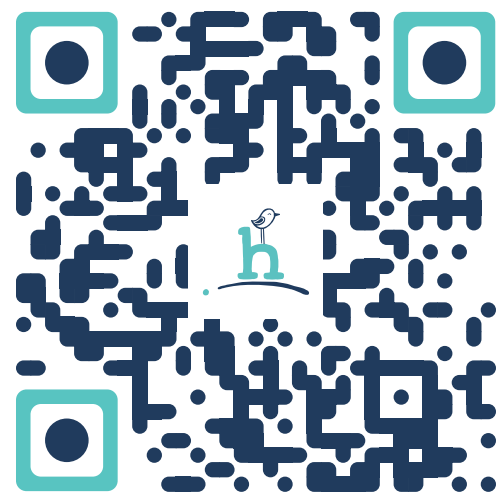

<https://hi.hiccapop.com/644J>

2

inside spread left panel


hiccatip #1

one person can assemble the DayDreamer®, but it's easier to do with two people.

if you don't like videos, try the following steps:

step 1

lay fabric flat so all teal hooks (2), white hooks (2), and yellow buckles (4) are visible. white and teal hooks in the center, yellow buckles in the corners.

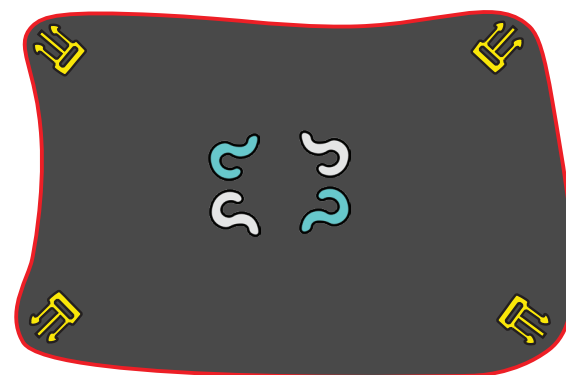


3

inside spread center left panel


step 2

fully assemble both tent poles and lay poles diagonally across fabric in an 'X' shape.

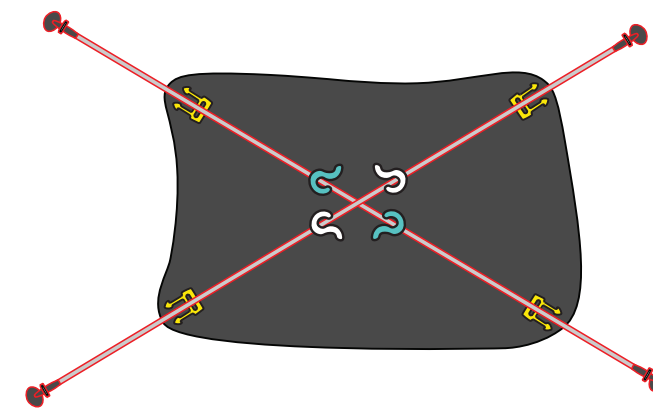

step 3

secure each yellow buckle to its corresponding foot.

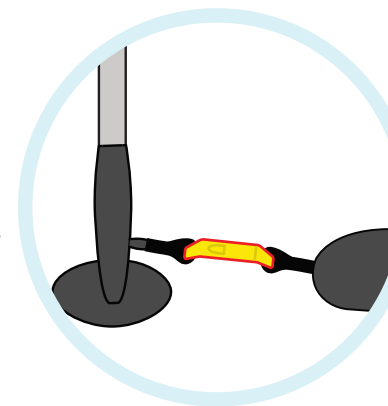


4

inside spread center right panel

step 4

raise poles into the shape of the final dome and attach the teal/white hooks to the center of the poles so that fabric now hangs.

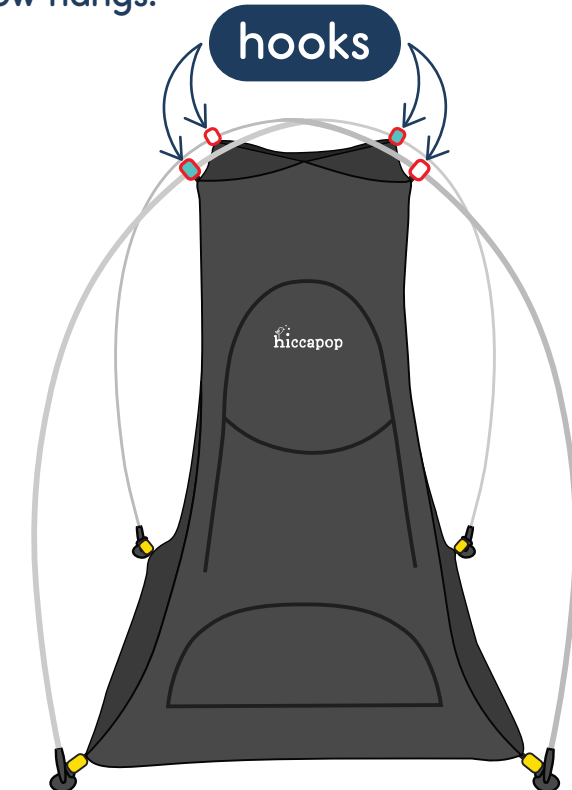

5

inside spread right panel