

尺寸：210*145MM

80克书纸

黑白印刷

Mans.io



MODEL NO. **RPJ140**

MULTIMEDIA PROJECTOR

INSTRUCTION MANUAL



PLEASE READ BEFORE OPERATING THIS EQUIPMENT

This product is manufactured and sold by Curtis International Ltd. RCA, the RCA logo, the two dogs (Nipper and Chipper) logo, are registered trademarks or trademarks of RCA Trademark Management and are used under license by Curtis International Ltd. Any other product, service, company, trade or product name and logo referenced herein are neither endorsed nor sponsored by RCA Trademark Management or its affiliates.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifier) that product heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

Mans.io



Additional Warnings and Precautions

1. Do not look directly into the projector light.
2. **Don't touch the project lens**
3. Mains adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
4. **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
5. **WARNING:** Changes or modified to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
6. **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
7. **WARNING:** Shock hazard - Do Not Open.
8. Caution and marking information is located at the rear or bottom of the apparatus.
9. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
10. Objects filled with liquids, such as vases, shall not be placed on the apparatus.

FCC Warning

FCC ID: LCS180515064AE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Mans.io

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

In The Box



 
Remote



AC Power Adapter



Main unit



Lens Cover




User Manual

Table of Contents


Important Safety Instructions	P1
Additional Warnings and Precautions	P2
FCC Warning	P3
In The Box	P3
Table of Contents	P4
Remove & Close the Lens Cover	P5
Placing Your Projector	P5
To Reduce Image Distortion	P6
Distance Between The Projector And Screen	P6
Placing Your Projector On Ceiling	P6
Adjust the Vertical Location	P7
Adjust the Focus and Keystone	P7
Controls of Remote	P8
Install / Remove Battery Of Remote	P8
Controls of Projector	P9
Install Power Adapter	P10
Main Operation	P10
Connect HDMI show the Image On Projector Screen	P11
Connect AV Show The Image On Projector Screen	P11
Connect VGA Show The Image On Projector Screen	P12
Connect Audio Output (Aux Out / Line Out / Earphones)	P13
Install USB Device And Micro Sd Card "TF"	P13
Using TF Card and USB Playback	P14
Using DVD Playback	P15
Using Bluetooth Playback	P15
Using Projector Menu 1.0	P16
Using Projector Menu 2.0	P17
Using Projector Menu 3.0	P18
Using Projector Menu 4.0	P19
Specifications	P20
Troubleshooting	P21

Remove & Close The Lens Cover

 Remove the lens cover before using

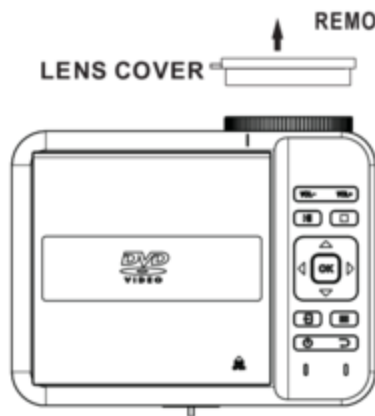

 Close the lens cover when unit not using

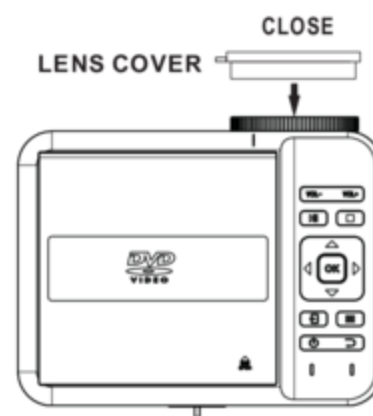


Placing Your Projector

Your projector can be installed in four different configurations (see picture below):

Front Table:

 Select this location with the projector placed near the floor in front of the screen. This is the most common way to position the projector for quick setup and portability.

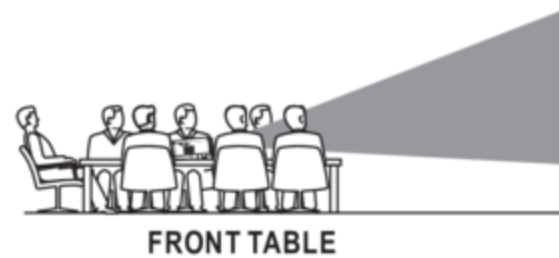


FRONT TABLE

Front Ceiling:

Select this location with the projector suspended upside-down from the ceiling in front of the screen.

NOTE: A projector mount is required to install the projector in a ceiling.

 Mans.io

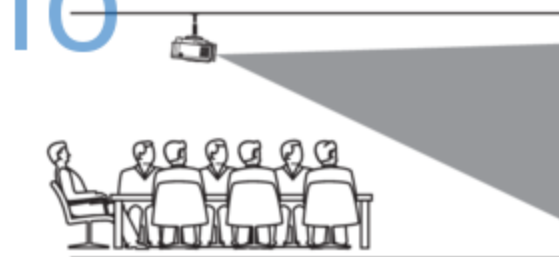

FRONT CEILING

Rear Table:

Select this location with the projector placed near the floor behind the screen.

NOTE: That a special rear projection screen is required.



REAR TABLE

Rear Ceiling:

Select this location with the projector suspended upside-down from the ceiling behind the screen.

NOTE:

A projector mount is required to install the projector in a ceiling.

A special rear projection screen is required.

 


REAR CEILING

To Reduce Image Distortion


It is recommended to move the projector as close to center of screen.

Square /Rectangle

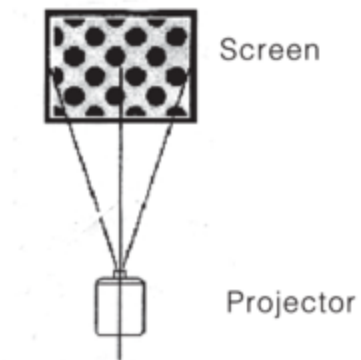

Distance Between The Projector And Screen

 Measure the distance between the projector and where you want to position the screen. This is the projection distance.

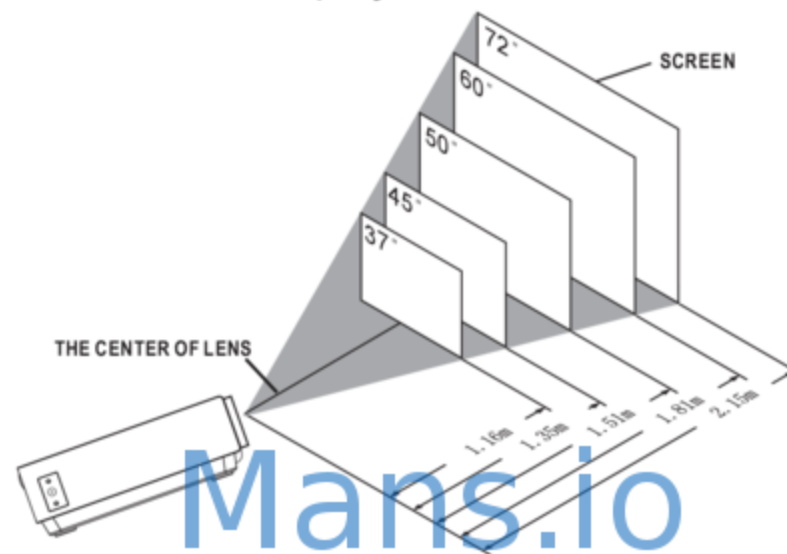


Placing Your Projector On Ceiling

When installing the projector in the ceiling, please purchase a projector mount recommended by an installation professional and follow the instructions that come with the mount.


Before installing the projector in the ceiling, please check to make sure the ceiling structure can support the weight of the projector and the mount. If in doubt, please ask the advice from an installation professional.

 NOTE: Projector mount and screw(s) not included

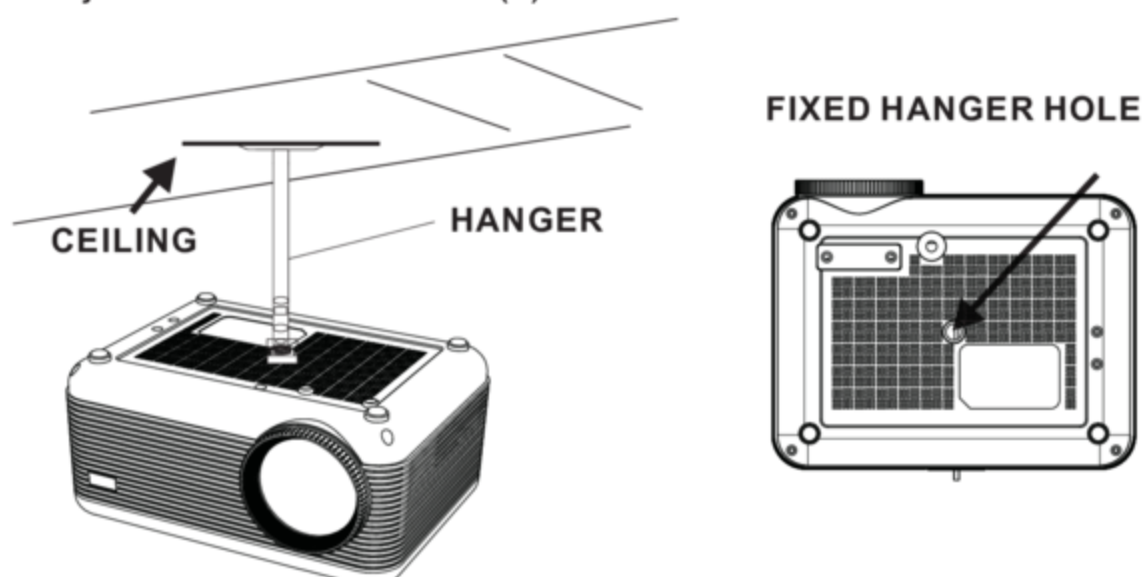

Adjust The Vertical Location

 Follow below picture to adjust the vertical location.

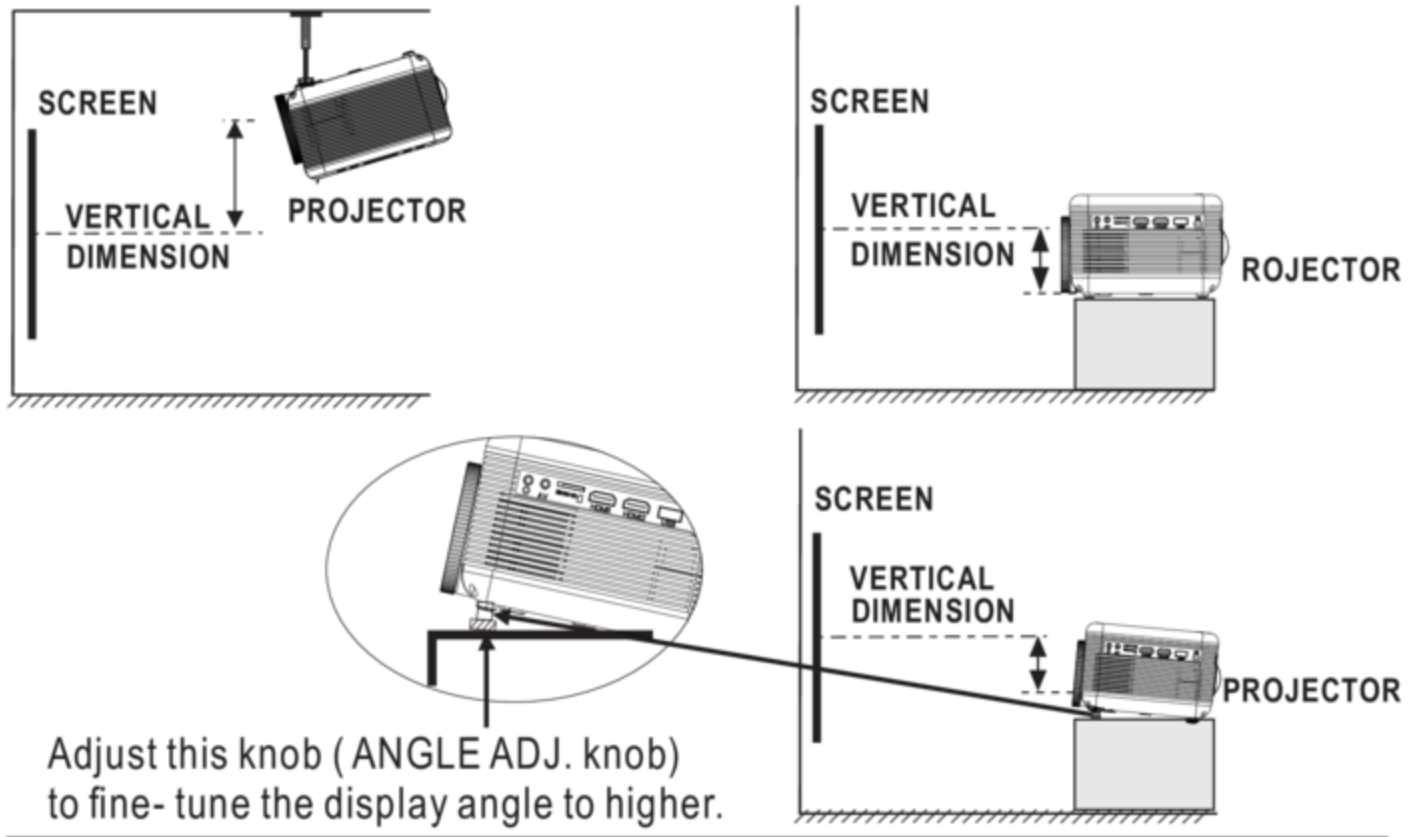

Adjust The Focus And Keystone

 
Follow below picture to adjust the focus and trapezoidal screen.

Adjust the focus by turning the knob while observing the image pixels near the center of the screen. Optimal focus is obtained when the pixels are clearly visible. Depending on the projected screen size, the focus near the screen edges may be less sharp than the screen center.


Keystone image is created when the projector beam is projected to the screen in an angle. Keystone correction will restore the distorted image to a rectangular or square shape.

FOCUS ADJ. KNOB

Then sharpen the image by rotating focus knob.

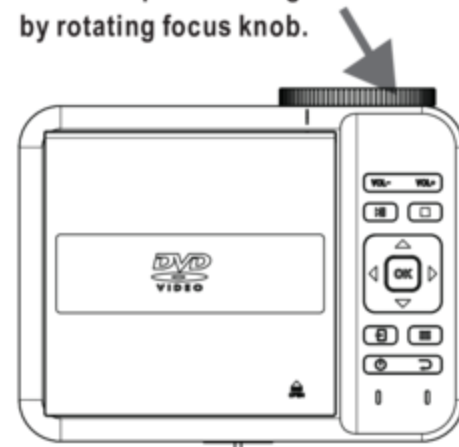

TRAPEZOIDAL ADJ. KNOB

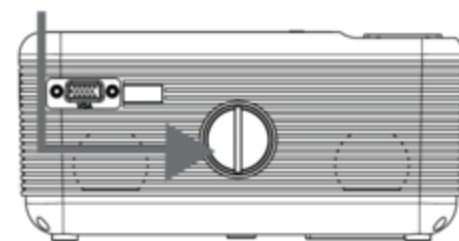 

Controls Of Remote

POWER

Press to power ON.

Mute

Mute the audio of the player. Press it again to activate the sound.

RANDOM

Press to random playing for the loaded disc.

OSD

Press to display the information of the current video/ audio.

Angle

On supported DVDs, press and hold to view alternate angles.

Subtitle

Short press to change subtitle mode.

Repeat

Press here repeatedly to cycle through repeat options for the loaded disc. .

PBC

Press to activate Play Back Control function only for a VCD disc. Press it again to be off.

Title

Press to view the title menu on a loaded DVD.

DVD Menu

Press to view the main menu on a loaded DVD.

A-B

Press to create a repeating loop on a loaded DVD.

PROG

Program a loaded disc to play chapters and titles or tracks in a specified order.

SLOW

During playback, press the SLOW button repeatedly to set the slow motion speed. Press OK button to resume.

SETUP

Press to access the setup menu only for DVD mode.

Previous/Next

Press to skip between chapters or tracks.

Rewind/ Fwd

Press to search through an individual chapter or track.

Arrows (UP/DOWN/LEFT/RIGHT)/ OK

Press to navigate and confirm selections in settings and other menus.

SOURCE

Press to select media source (AV/HDMI 1/ HDMI 2/VGA/ DVD/MEDIA PLAYER).

DVD

Press to enter the DVD player mode once in other source.

MENU

Press to access projector settings menu.

EXIT

Press to exit the projector menu or the audio/movie playback.

Play/Pause

Press here to play or pause the audio / movie playback.

STOP

Stop the audio/video /photo playback.

FLIP

Press to rotate/ mirror projector screen.

Audio

Press here to switch the available audio channels provided by the disc.

VOL +

Adjust the volume up.

VOL-

Adjust the volume down.

0-9 Number Keypad

Enter chapter/title to play.

 
Go To

Go to a specific chapter or track numbers. Use play button to begin playing.


Zoom

For the movie/video, press to access the zoom function, you can select the 2x, 3x, 4x, 1/2, 1/3, 1/4.

For the photo ,press it to switch between the zoom 100%, 125%, 150%, 200%, 75%, 50% and normal status

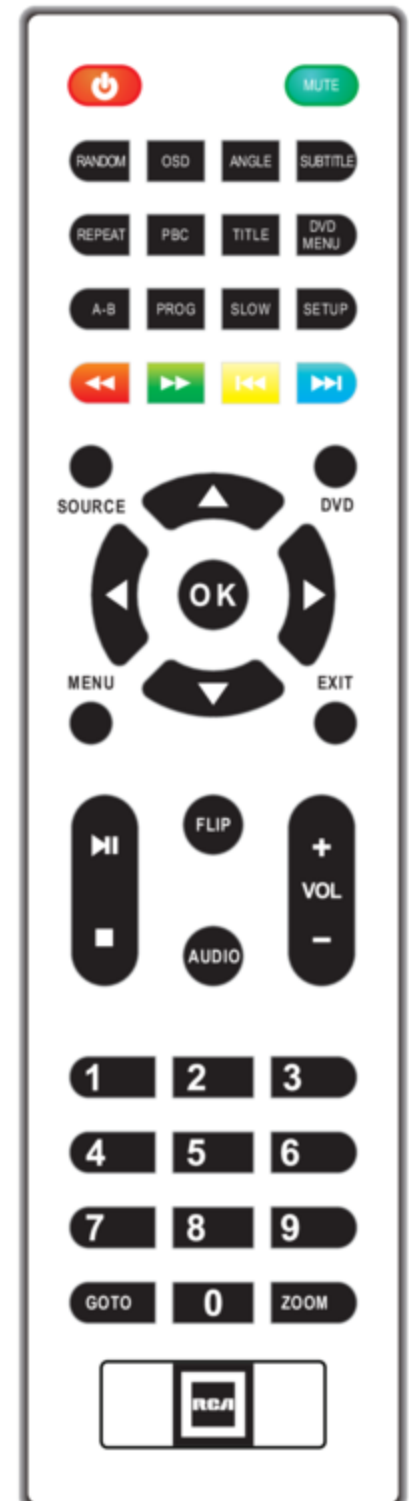

Install / Remove Battery Of Remote

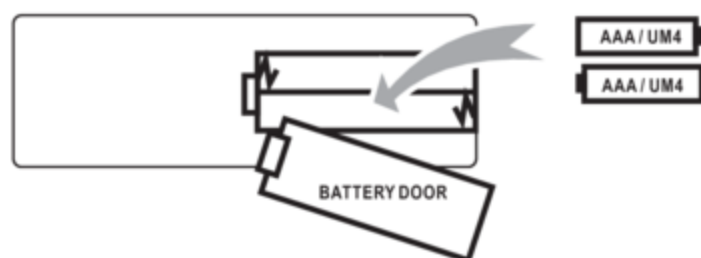 


Remove the battery compartment cover on the back of your remote by carefully sliding to open. The battery cover can then be lifted away. Fit the correct batteries (not included), referring to the polarity markings. Finally, replace the cover.

NOTES:

- Batteries shall not be exposed to excessive heat such as sunshine, fire
- Be sure that the batteries are installed polarity correctly.
- Do not mix old and new batteries.
- Only same or equivalent type batteries as recommend are to be used.
- Do not dispose of batteries in fire, battery may explode or leak. Do not try to recharge a battery

 Controls Of Projector

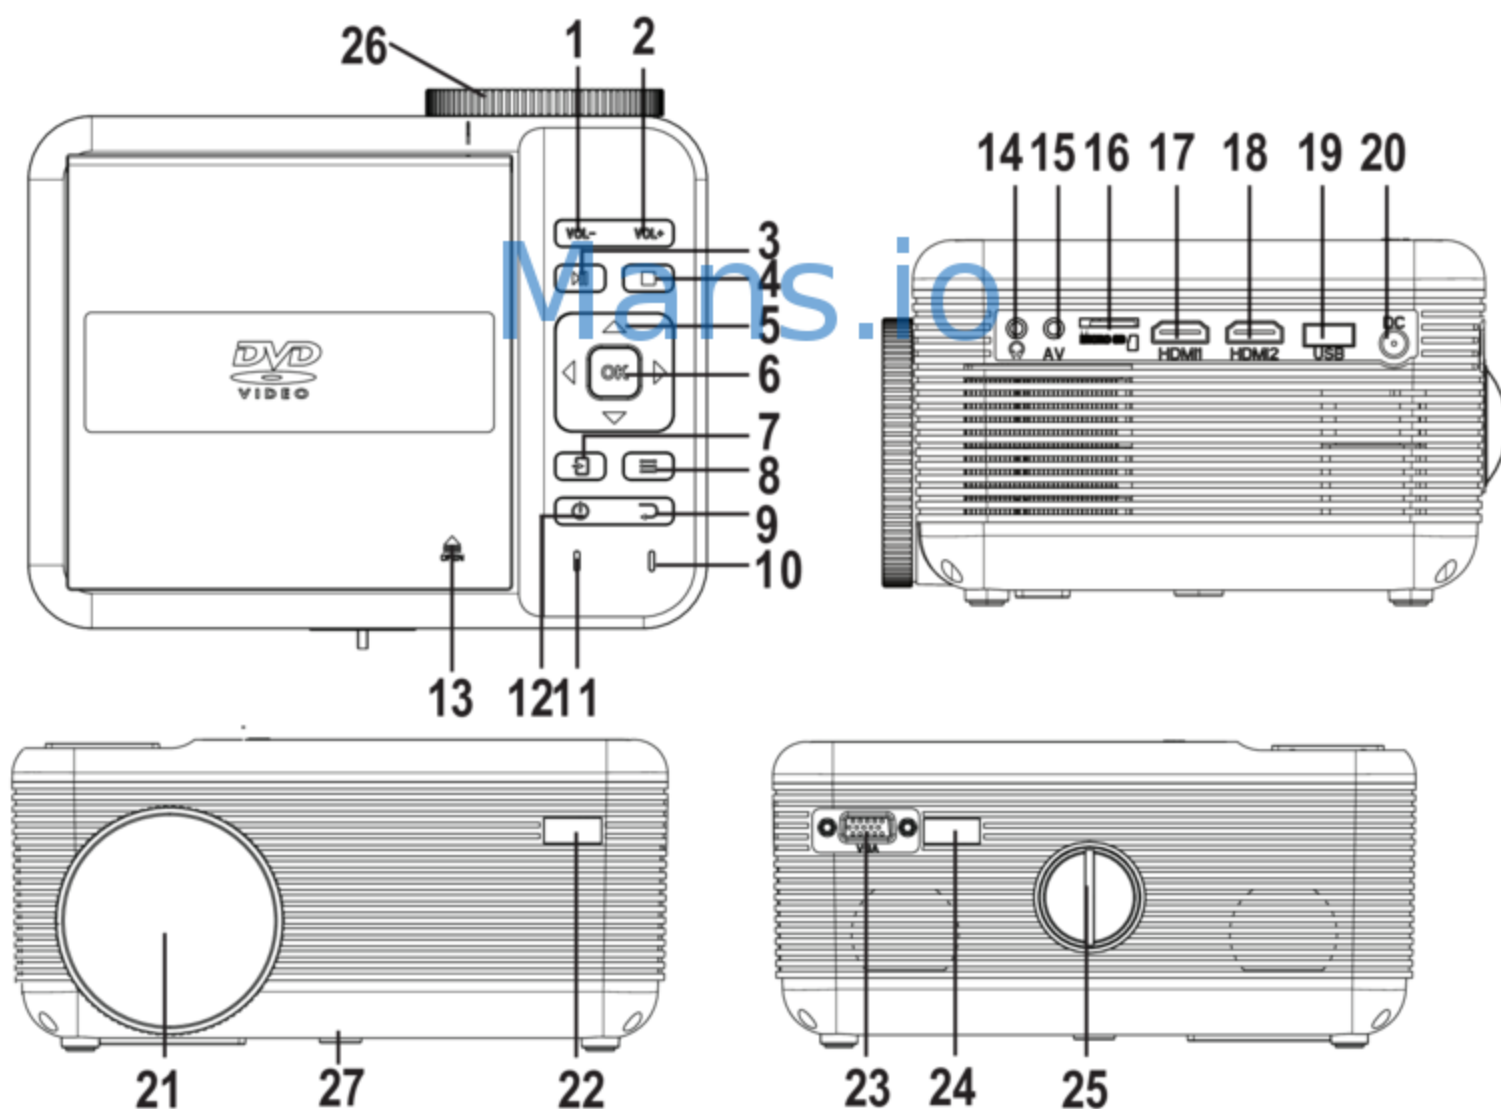


- | | | |
|---------------------|-------------------------|---------------------------|
| 1. VOLUME - | 10. Power on Indicator | 19.USB Port(Media Player) |
| 2.VOLUME + | 11. Power off Indicator | 20. DC IN jack |
| 3.PLAY/PAUSE | 12 POWER button | 21. LENS |
| 4. STOP | 13 Open disc cover | 22.IR Window (Front Side) |
| 5.NAVIGATOR Buttons | 14. EARPHONE jack | 23.VGA Port |
| 6. OK | 15. AV jack | 24. IR Window (Rear Side) |
| 7. SOURCE button | 16. Micro SD card. | 25. TRAPEZOIDAL ADJ. Knob |
| 8. MENU button | 17. HDMI Port 1 | 26. FOCUS ADJ. Knob |
| 9.RETURN button | 18. HDMI Port 2 | 27. ANGEL ADJ. Knob |


Install Power Adapter


Follow below picture to connect power adapter

 Connect small end of adapter **FIRST**. Plug the adapter body to power outlet.

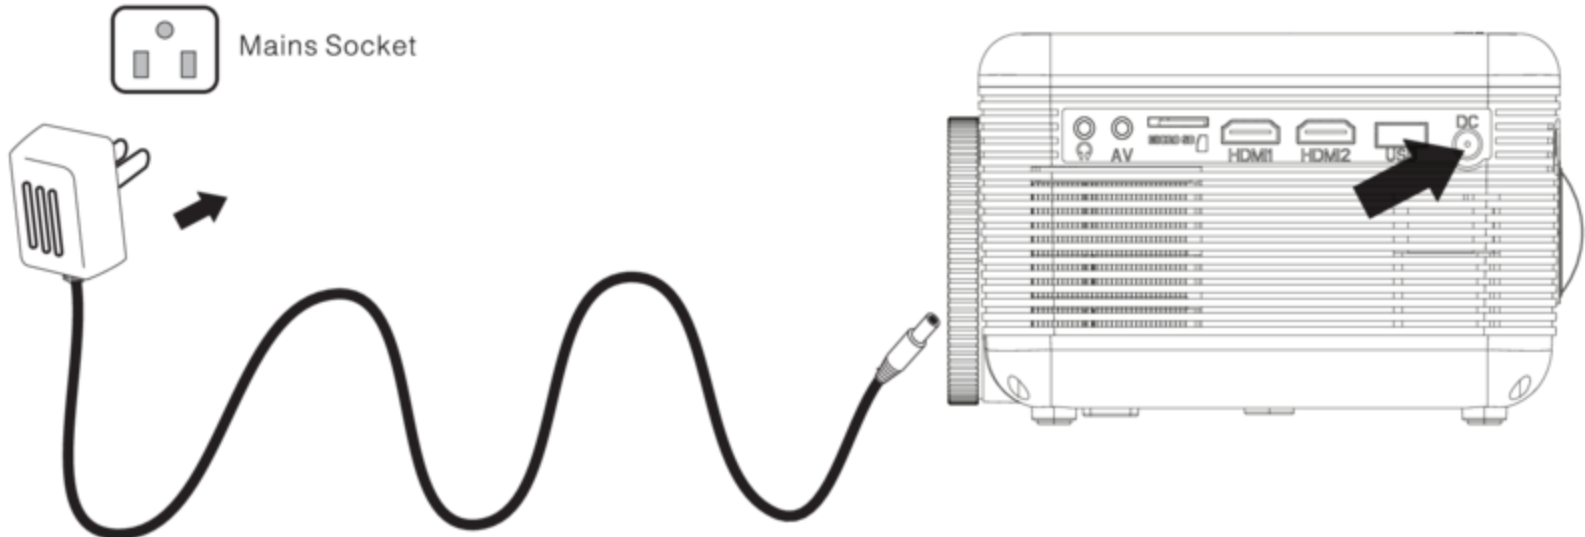

Main Operation

 - Press the button to turn on unit, press again to turn off.

 / **SOURCE** - Press the button to select input source.

 / **MENU** - Press the button to enter projector menu.

 - Press the buttons to select screen item of projector menu.

 / **EXIT** - Press the button to exit the projector menu.

 - Press the buttons to fast search forward and rewind on USB / TF/DVD


 - Press the buttons to search next or previous file on USB / TF/DVD.

VOL+ / **VOL-** - Press the buttons to select correct sound.

 - Press the button to play/pause the connect USB / TF card/DVD.

FLIP – Press the button to rotate / mirror projector screen

ZOOM - Press the button to select image scale.

 - Press to muting the audio sound of your projector. Press again to resume.




■ **STOP**- Short press to stop the audio / video /Photo playback.

GOTO: Press it to go to a specific time index /title / chapter.

 
0-9 Number button - Use the number buttons to input a DVD chapter or CD track (invalid for some discs) and press **PLAY/PAUSE** button to confirm.

Connect HDMI Show The Image On Projector Screen

Follow below picture to connect HDMI cable and device.




1. Turn off the unit before connect HDMI cable.
2. After connect, press the  button to turn on unit and power indicator will light GREEN
3. Press the  / **SOURCE** button to HDMI mode and the video of HDMI device will show on projector screen. There are 2 HDMI input, HDMI1 interface corresponds to HDMI 1 in SOURCE mode , and HDMI2 interface corresponds to HDMI 2 in SOURCE mode.
4. Press the  button to turn off unit power.

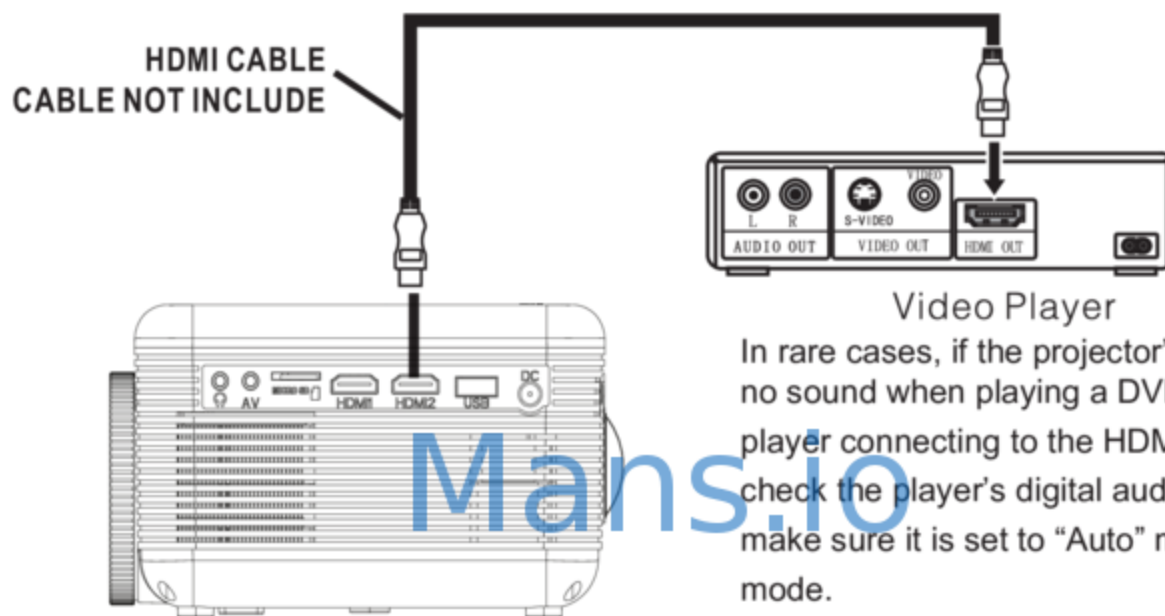
HDMI hd signal input : this interface can be input with HD player HDMI output at the connection.



 Connect AV Show The Image On Projector Screen



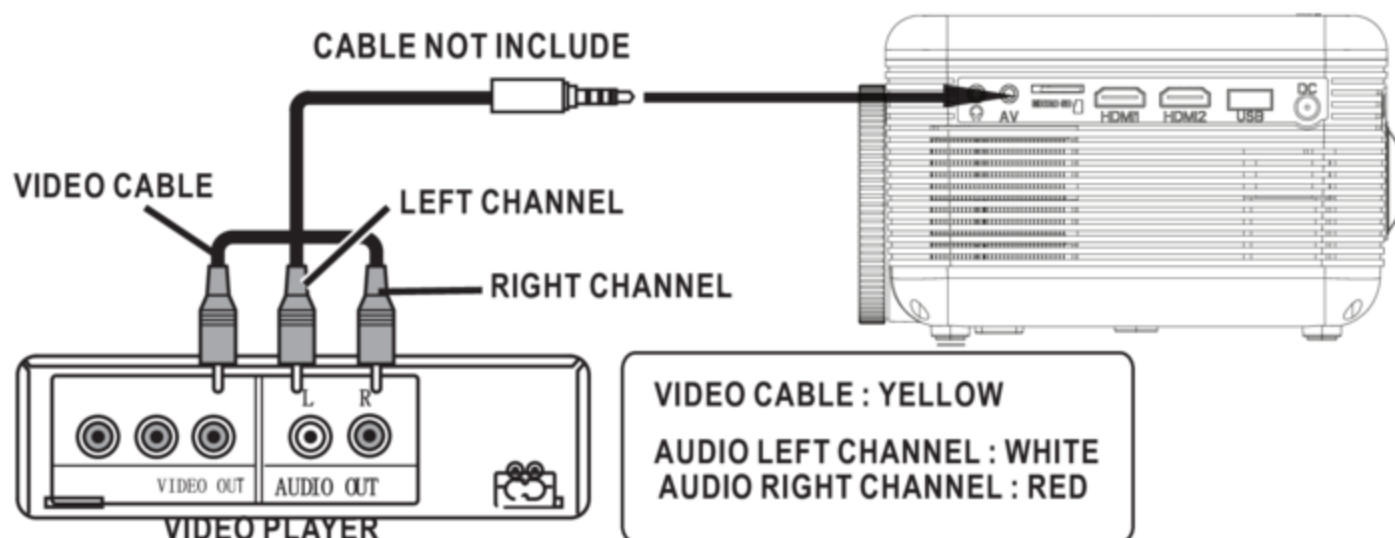

Follow below picture to connect AV cable and device.

 
1. Turn off the unit before connect AV cable.
2. Use AV cable to connect follow below figure
3. After connect, press the  button to turn on unit and power indicator will light GREEN
4. Press the  / **SOURCE** button to AV mode and the video of AV device will show on projector screen
5. Press the  button to turn off unit power.



Connect VGA Show The Image On Projector Screen

Follow below picture to connect HDMI cable and device.

1. Turn off the unit before connect VGA cable.
2. Press the  button to turn off power of your projector before connection.
3. After connect, press the  button to turn on unit and power indicator will light GREEN
4. Press the  / **SOURCE** button to VGA mode and the video of VGA device will show on projector screen.
5. Press the  button to turn off unit power.

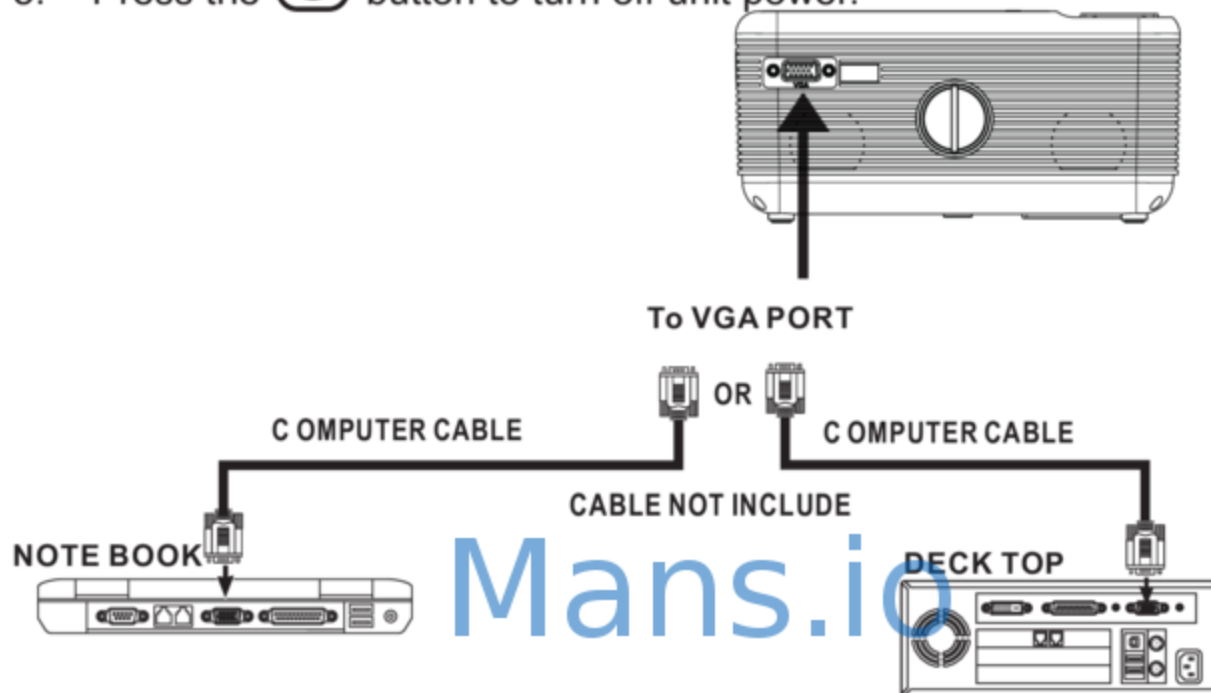


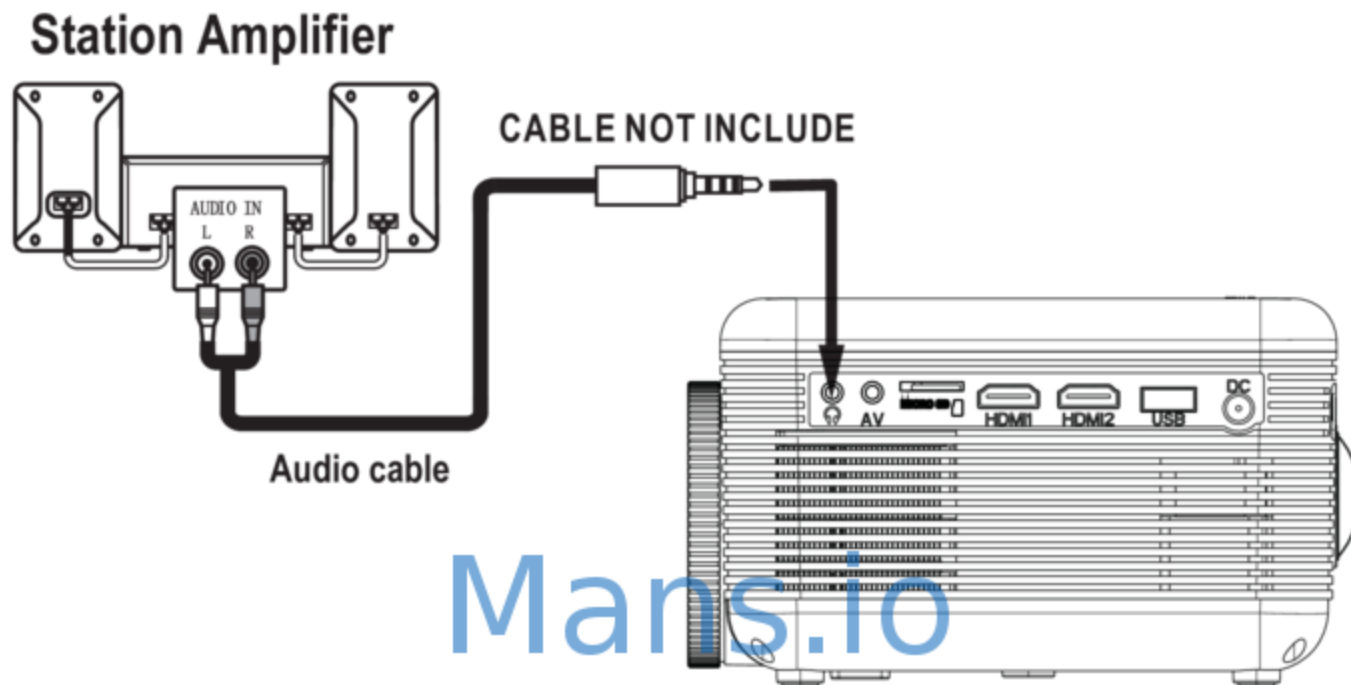 
Please refer to the following table to adjust the output signal from computer

Type	Resolution		Frequency	Field Frequency
PC	VGA	640x480	31.5	60
			34.7	70
			37.9	72
			37.5	75
	SVGA	800x600	31.4	50
			35.1	56
			37.9	60
			46.6	70
			48.1	72
	XGA	1024x768	46.9	75
			40.3	50
			48.4	60
			56.5	70

Connect Audio Output (Aux Out / Line Out / Earphones)

Follow below picture to connect audio cable and device.

 
1. Press the  button to turn off power of your projector before connection.
2. Use audio cable to connect follow below figure.
3. After connect and turn on both units. Your projector sound from external device now.
4. After using , turn off both unit



Install USB Device And Micro Sd Card “TF”





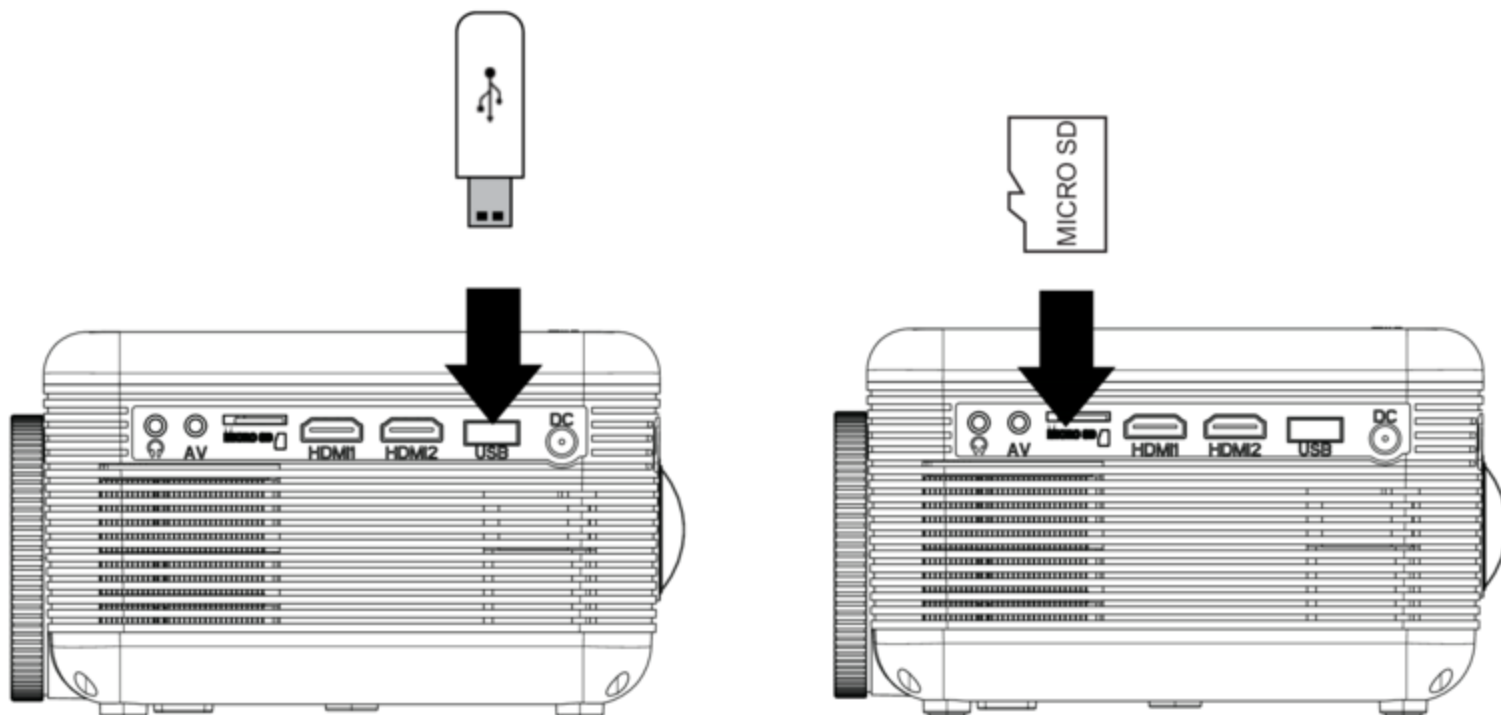









Follow below picture to install USB and TF card


Turn off the unit before install USB / TF card.








Using TF Card And USB Playback (Media Player)









Install USB / TF device:

1. Turn off the unit before install USB / TF card.
2. Install the USB device into USB port.
3. After connect, press the  button to turn on unit and the power indicator light GREEN.
4. Press the  / **SOURCE** button to enter and use  buttons to search the MEDIAPLAYER mode.
5. After selection, use  buttons to search the MUSIC / PHOTO / MOVIE icon and press the  button to enter. If necessary, use the  button to select TF card or USB and press the  button to enter.
6. Use  buttons to search the correct file and press the  button to preview playback file and press the  button of unit or  button of remote to start playback.
7. Press  button to fast search forward and rewind.
8. Press  button to search next or previous file.
9. During playback, press the  button to pause and press again to resume.

NOTE: Remove USB / TF device, press the  button to turn off power **FIRST**.

Sub-Menu on Photo screen	
<p>1. When photo playback, press the  button and more function screen show on lower (figure 1).</p> <p>2. Use the  button to select icon and press the  button to play special function.</p>	<p>Figure 1.</p> 
Sub-Menu on Music screen	
<p>3. When music playback, press the  button and more function screen show on lower (figure 2).</p> <p>4. Use the  button to select icon and press the  button to play special function.</p>	<p>Figure 2</p> 
Sub-Menu on Movie screen	
<p>5. When movie playback, press the  button and more function screen show on lower (figure 3).</p> <p>6. Use the  button to select icon and press the  button to play special function.</p>	<p>Figure 3</p> 




Using DVD playback

1. Press the  button to turn on unit and the power indicator light GREEN.
2. Press the  /SOURCE button to enter and use  buttons to search the DVD mode.
3. Open the disc cover and insert a playable DVD or CD disc, make sure the label side is facing up, and then close disc cover.
4. The player will scan the disc, and then the playback will start automatically.
If a disc menu appears on the screen, see "Using the disc menu" for details.
5. Press  /  button to fast search forward and rewind.
6. Press  /  button to search next or previous file.
7. During playback, press the  button to pause and press again to resume.

Using Bluetooth Playback

Pairing is the term used when two Bluetooth devices are connected wirelessly for the first time. This allows the devices to see each other and sets up a one to one communication channel between both devices.






Bluetooth Connection

1. Press the  button to turn on unit.
2. Press the  button to enter the menu screen.
3. Use the  button to select right side menu.
4. Use the  button to select Bluetooth column.
5. Press the  button to enter Bluetooth menu.
6. Use the  button to select "ON"
7. Turn on your External Bluetooth Speaker and select to Bluetooth pairing mode
8. A few seconds, you hearing "do" sound that your unit and external Bluetooth speaker connected.
9. After connection completed, the unit sound to External Bluetooth speaker.

OSD Language	English
Bluetooth	
Restore Factory Default	
Panel Rotate	0
Info	

Note: When the BT can't connect to this device automatically. Please enter to the Bluetooth setup menu and select to the BT Reset to reset it, after that the BT device will be connected with this Projector automatically.


Disconnect the Bluetooth


1. Press the  button to enter the menu screen.
2. Use the  button to select above menu.
3. Use the  button to select Bluetooth column.
4. Press the  button to enter Bluetooth menu.
5. Use the  button to select "OFF" that the Bluetooth disconnect.

Using Projector Menu 1.0

Press  button to enter projector menu. Press again to previous status.

Picture Mode	Standard
Contrast	50
Brithness	50
Color	50
Sharpness	50
Tint	50
Color Temperature	Medium
Aspect Ratio	Auto
Noise Reduction	Middle
Screen	

 
Use  buttons to select manual page. This manual showed on right upper of view screen.

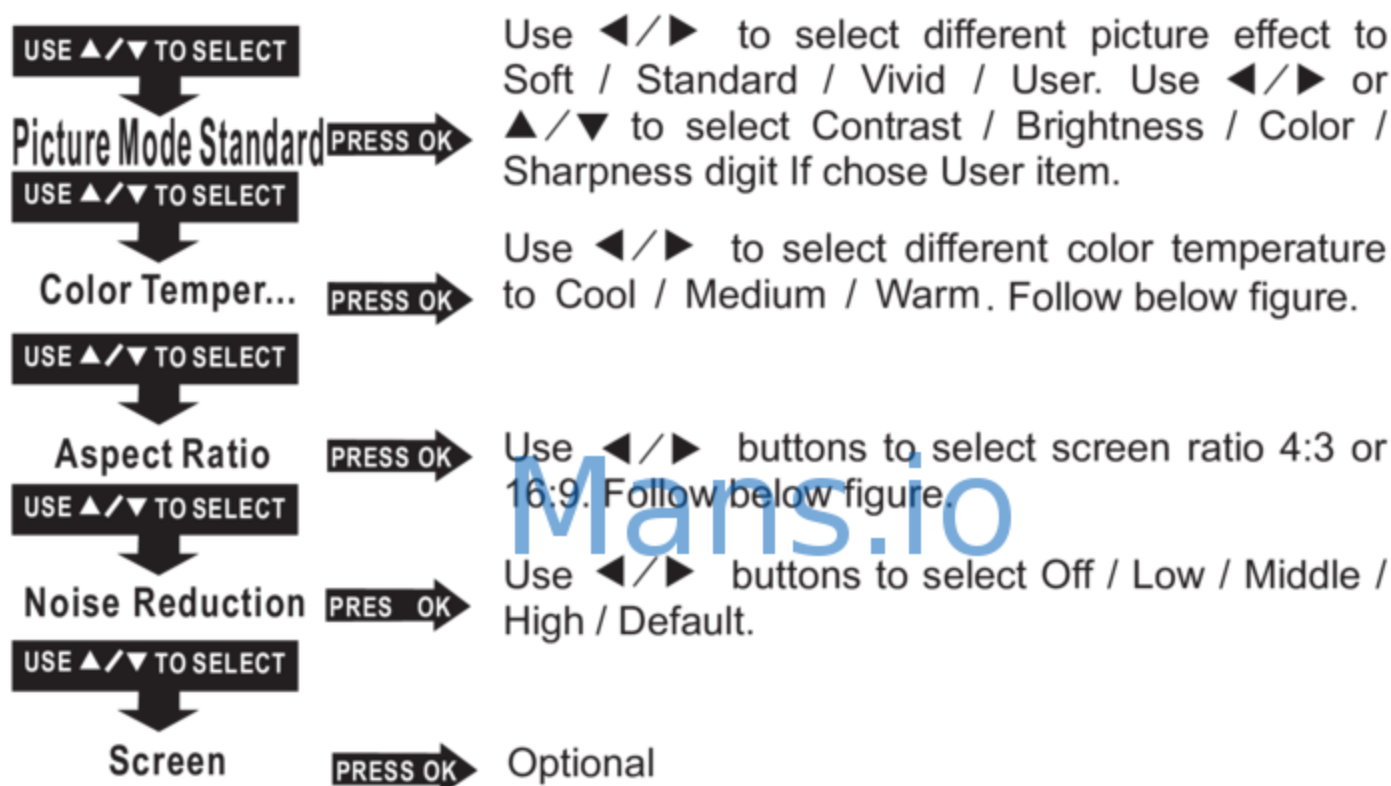


Color temper... (temperature)	
Customer define	Parameter
red	0-100
blue	0-100
green	0-100

Aspect Ratio	
4:3	The signal in a 4:3 aspect ratio projection image
16:9	The signal in a 16:9 aspect ratio projection image

Using Projector Menu 2.0


Press  button to enter projector menu. Press again to previous status.

Sound Mode Standard	
Treble	50
Bass	50
Balance	0
Auto Volume	Off
Surround Sound	Off

Use  buttons to select manual page.
This manual showed on right upper of view screen.

USE ▲/▼ TO SELECT

Sound Mode Standard 

Use  to select different sound effect Standard / Movie / Music / Sports / User. If select User, follow below figure to set digit.

USE ▲/▼ TO SELECT

Balance 0 

Use  to select Balance level to 0-50.

USE ▲/▼ TO SELECT

Auto Volume Off 

To select Off / On.

USE ▲/▼ TO SELECT


Surround Sound Off 

Use ▲/▼ to select different sound effect to Off / Surround.


Mans.io


Sound Mode - User	Parameter
Treble	0-100
Bass	0-100

Using Projector Menu 3.0

Press  button to enter projector menu. Press again to previous status.

OSD Language	English
Bluetooth	
Restore Factory Default	
Panel Rotate	0
Info	

 Use  buttons to select manual page. This manual showed on right upper of viewing screen.

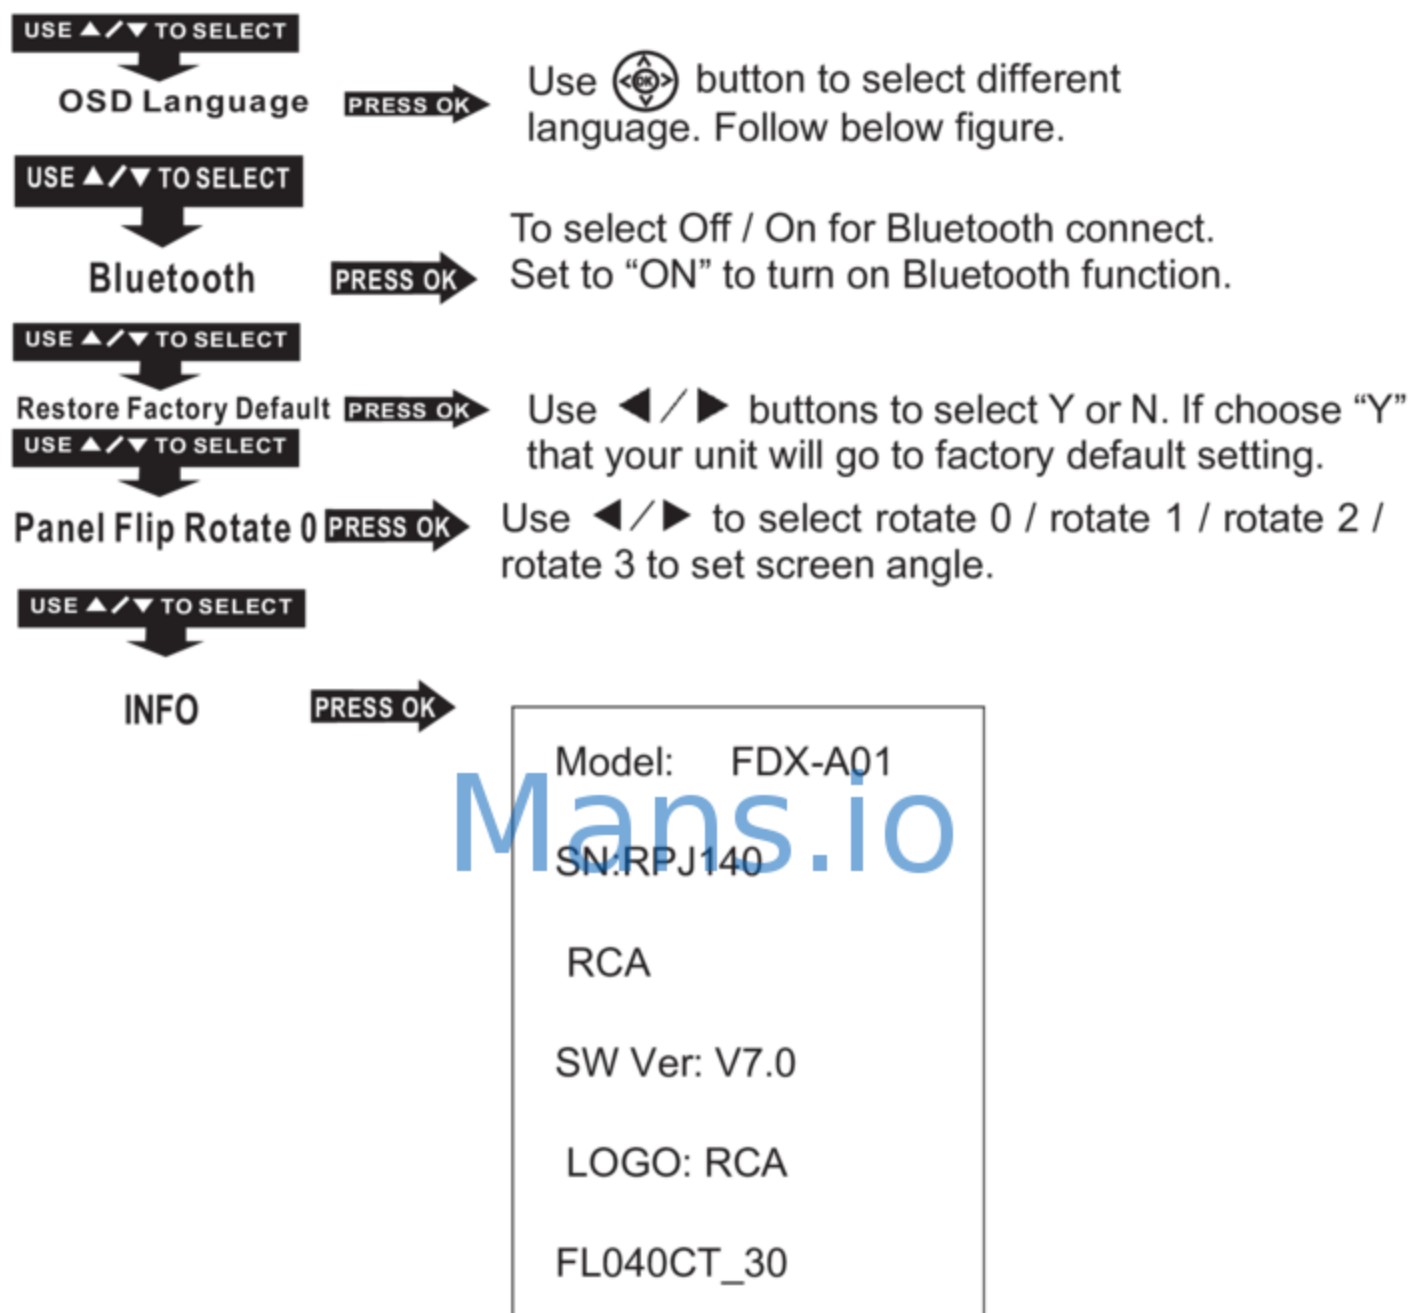


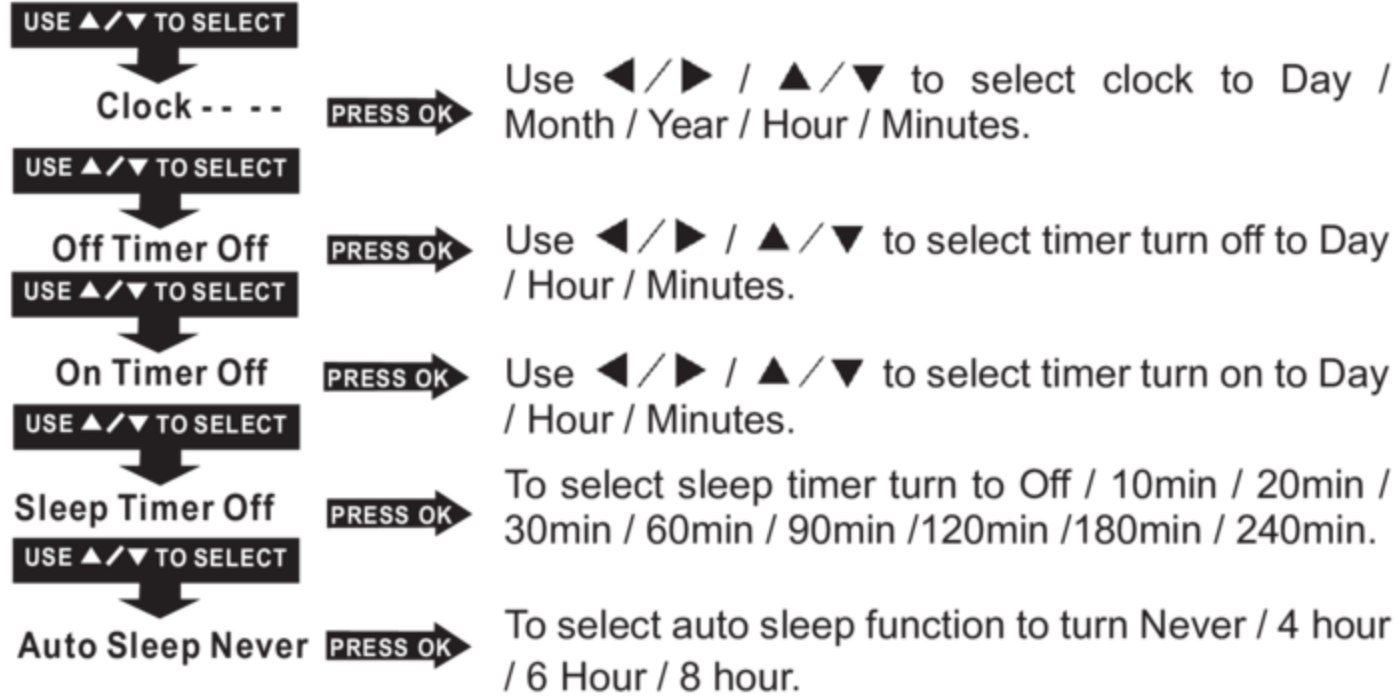 
English	Hrvatski	Nederlands	Chinese
Franais	Deutech	Slovenina	Slovak
Espanol	Italiano	Norsk	
Portugues	Magyar	Srpski	
Esky	Polski	Svenska	
Dansk	Romnete	Suomi	

Using Projector Menu 4.0

Press  button to enter projector menu. Press again to previous status.

Clock - - - -
Off Timer Off
On Timer Off
Sleep Timer Off
Auto Sleep Never

Use  buttons to select manual page.
This manual showed on right upper of viewing screen.



Mans.io

Specifications

Light Source Type	LED
Display Native Resolution	800 x 480
HDMI Input Supported Video Resolution.	1080p , 1080i , 720p, 576i , 480p, and 480i
Power Consumption	Operating 48W; Standby 0.8W
Power Input Connect Included Adapter	DC 12V , 4A
Included Adapter Connect DC input of unit	Input AC100-240V,50/60Hz Output DC12V , 4A
Display Color	16.7K
Projection Size	30-100 inch
Signal Port	Video / VGA / HDMI
USB Port	Support USB device up to 32GB Support format mpeg1, Mpeg2 ,mpeg4, mp3 , Jpeg
MICRO SD	Support MICRO SD card up to 32GB Support format mpeg1, Mpeg2 ,mpeg4, mp3 , Jpeg
Weight	0.9 KG
Dimension	203 x 161 x 95 mm

TROUBLESHOOTING

Before resorting the maintenance service, please kindly check by yourself with the following chart.

<p>No Image is Projected or a "No Signal" message is displayed</p>	<ol style="list-style-type: none"> 1. Power light is on. If it is not on, check the projector is plugged into the mains, that the socket is switched on, and then press the power button on the projector. 2. Check the lens cover has been removed. 3. Check the cables are securely attached and installed as per the User Manual. 4. The image source may not be set correctly. Press the Source button on the Control Panel or the Remote, to select the correct setting. 5. Check in the Menu section under Video input signal to make sure that has been set correctly.
<p>The Lamp (Bulb) switches off after a period of time</p>	<p>Is the warning light indicator red? If so, the projector is overheating which turns the light off automatically.</p> <ol style="list-style-type: none"> 1. Leave the projector to cool for a few moments. 2. Once cooled, check nothing is blocking the ventilation vents. 3. Check the air filter is clean and clean if necessary. 4. Turn on the projector. <p>If the issue persists please contact your support provider for further assistance.</p>
<p>The Image is wider at the top/bottom of the screen</p>	<p>This is called keystone and is due to the projection angle not being perpendicular to the screen. To correct use the projectors inbuilt keystone function to adjust the image.</p>
<p>Spots on the screen</p>	<p>Using a vacuum cleaner to clean the lens. If cleaning doesn't resolve things, please contact your support provider for further assistance.</p>
<p>The image brightness has faded</p>	<p>This could possible be caused by the ambient light in the room. If not, the chances are that you need to replace the lamp (bulb).</p>

For service assistance and product information, please call: **1-800-968-9853**.

Pour obtenir assistance et information appelez: **1-800-968-9853**.

Curtis International Ltd.

7045 BECKETT DRIVE, UNIT 15,

MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

LIMITED PRODUCT WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workman-ship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

Should you have any problem with this product, please and it is highly recommended to visit our website at www.curtisint.com before you take any other steps as we have additional copies of instruction manuals, operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

TERMS OF WARRANTY

C.I. Service Dept. warrants this product to be free from defects in materials and workmanship for 90 days on parts and 90 days on labor. If you originally purchased your product more than 90 days ago, a repair fee may apply.

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this product, whether due to any defect of the product, or its use, whether proper or improper.

EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by C.I. or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
3. The warranty does not cover cabinets and accessories.
4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
5. The defective product should be mailed to:

Canada
C.I. Service Dept.
7045 Beckett Drive, Unit 15
Mississauga, ON
L5S 2A3

U.S.A
Curtis International Ltd
c/o Lotus International Company
6880 Commerce Blvd.
Canton MI 48187
U.S.A.

For service assistance and product information, please call: 1-800-968-9853.

If mailing the product, the freight must be prepaid and a money order for \$7.00 should be included to cover the cost of insurance and the return of the product.

6. C.I. reserves the right to repair or replace the parts which have become defective.

To begin the **warranty repair process**, please note that you **MUST** obtain a **return authorization number** **prior** to returning your product for warranty based support. This can be placed under the 1-800-968-9853 contact line.

Model No. _____ Date Purchased _____ Serial No. _____