

Emerson™ Multi-Outlet Wall Charging System EAP-1000




USER MANUAL

Please read carefully before use and keep for future reference.

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

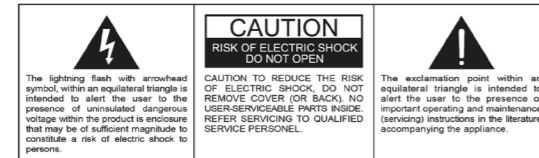

The Caution Marking is located at the back enclosure of the device. The Rating label is located at the back enclosure of the device

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for a long period of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload wall outlet. Use only power source as indicated.
17. Use replacement part as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
19. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
20. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

TO REDUCE THE RISK OF ELECTRIC SHOCK, USE ONLY INDOORS

Do not install this device if there is not at least 10 meters (30 feet) or more of wire between the electrical outlet and the electrical service panel. This device features internal protection that will disconnect the surge protective component but will maintain power to the load - now unprotected. If this situation is undesirable for the application, follow the manufacturer's instructions for replacing the device.

IT SHOULD BE PLUGGED INTO A PARALLEL DUPLEX RECEPTACLE THAT IS INTERCONNECTED, NOT FOR USE WITH GROUND-FAULT CIRCUIT-INTERRUPTER RECEPTACLES OR RECEPTACLES WITH INDICATOR LIGHTS OR CONTROL. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT USE THIS DEVICE WITH A RECEPTACLE IN WHICH THE SLOT OPENINGS DO NOT ALIGN WITH THE BLADES

IN THE BOX

- Multi-Outlet Wall Charger
- User Manual
- Warranty Card

FEATURES

- Charge multiple devices simultaneously with this wall outlet charger
- 6 built-in AC outlets
- Power your USB devices with the 2 included USB ports - 1x USB-A & 1x USB Type-C
- Built-in surge protection to keep your devices safe
- LED accent lighting
- Compact and easily accessible ports

SPECIFICATIONS

Maximum Input Voltage (VAC)	125VAC
Nominal Input Frequency (Hz)	60Hz
Maximum Output Power (Watts)	1875W
Maximum Line Current (Amps)	15A
USB Output	5V/4.0A
Joules	490J
UL1449 VPR RATING	600V (L-N) TYPE 3 SPD
AC outlet(Total Number)	6 Outlets

(Note: The USB ports are intended solely for charging devices. They cannot be used as a USB hub and do not transmit data.)

GETTING STARTED

This Multi-Outlet Wall Charger can simultaneously charge two smartphones or tablets.

1. Plug in your charging station on the power supply.
2. Insert one end of a USB charging cable into your appliance.
3. Insert another end of the charging cable into the USB/Type A & C port of the charging station.
4. Put your devices on the holder.

FCC NOTICE

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator& your body. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to protect reasonably against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 —Reorient or relocate the receiving antenna.
 —Increase the separation between the equipment and receiver.
 —Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 —Consult the dealer or an experienced radio/TV technician for help.

SUPPORT

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.emersonaudio.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Emerson Technical support.

EMERSON Technical Support
 2320 East 49th Street
 Vernon, CA 90058
 Tel: (866) 411-6292
 Email: support@emersonaudio.com

Made in China