## CHANGEdesk

## Manual Model



## ■ OPERATING INSTRUCTIONS:

IMPORTANT: Before using your CHANGEDESK:

Read and clearly understand the contents of this manual

2 Understand how to adjust CHANGEDESK correctly

3 Practice adjusting CHANGEGESK with nothing on it.

Have Questions? Need Help?

Our A+ customer support team is here to help:

EMAIL: hello@UncagedErgonomics.com

PHONE: 240-583-0517

**CHANGEDESK** ships fully assembled & requires no installation. **CHANGEDESK** is designed to hold single & dual monitors, iMacs, laptops, and other similar devices at a comfortable height for sitting or standing at a desk. The max load is 30lbs.


IMPORTANT: BEFORE placing a computer, monitor, or other device on CHANGEDESK, practice adjusting CHANGEDESK's height.




I. Place **CHANGEDESK** on top of any level desk, table, or counter.



- 2. To adjust **CHANGEdesk**'s height:
- a. Use both hands to grasp the top panel
- b. Squeeze the adjustment lever with your right hand
- c. Raise or lower the top panel to your desired height
- d. Release the adjustment lever
- e. Ensure that the top panel is locked in place
- f. Release your grasp on the top panel.

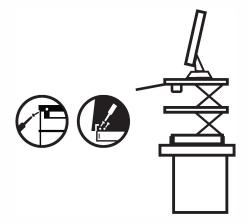

- 3. Connect the Keyboard Tray to the TOP level by:
- a. Use I screw to connect L-Bracket to the right side of Top Level directly under the wooden panel.
- b. Repeat Step A for the Right Side.
- c. Use 2 screws to connect the right side of the keyboard tray to the bottom of the L-Bracket.
- d. Repeat Step C for the Left Side

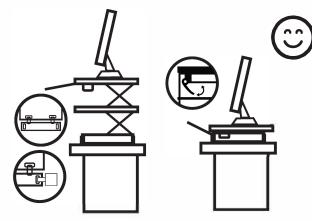

- 4. The Mouse Pad connects to
- the right or left side of the Keyboard Tray:

  A. Insert the mouse pad's tab vertically into
- the slot on the left or right side of the Keyboard Tray
- B. Roll the mouse pad to the outside
- C. To adjust the mouse pad's angle, release the thumb screw under the mouse pad's panel. Tighten before use.

WARNING! Only adjust CHANGEDESK when nothing is on the bottom and middle shelves.

**WARNING!** PINCH POINT!: Do not place fingers or extremities near or inside the "X-shaped" joints.

**DANGER!** PINCH POINT!: Do not let fingers or extremities cross the vertical plane created by the X-shaped joints

## TIPS:

- I. The top panel is smooth and ideal for writing.
- 2. When standing, the middle level is a convenient shelf for storage, organization & writing.
- 3. If you don't find the keyboard tray comfortable for sitting, remove it and type directly on your desk.