


TORRAS

QUICK GUIDE
クイックガイド

In order to bring you a better experience, please read this quick guide carefully before using this product and keep it properly for future reference.

Getting Started

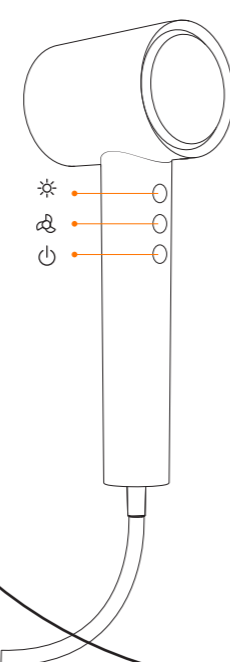


Temperature Switch Button
Short press to cycle through Low → Medium → High → Low → ...

Speed Button
Short press to cycle through Low → Med → High → ...

Power/Mode Button
Short press to cycle through Normal → Care → Power Off → Power On → Normal → ...
When power on, long press the button for 3 sec to power off.

EN

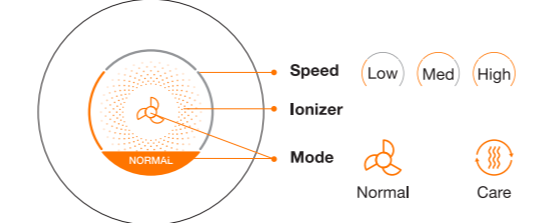

Speed (Low) (Med) (High)

Ionizer


Mode Normal Care

Ideal for straight hair
Fit the smoothing nozzle into the air outlet for wide, smooth airflow. (The nozzle is 360° rotatable).

Ideal for curly hair
Fit the diffuser nozzle into the air outlet for customized curls and less frizz. (The nozzle is 360° rotatable).

Attention

While using, please make sure that the distance between the hair and the air intake is more than 0.5 feet to prevent hair from getting caught in the hair dryer.
While using, please make sure that the distance between the hair and the air outlet is more than 0.16 feet to avoid burnt hair.

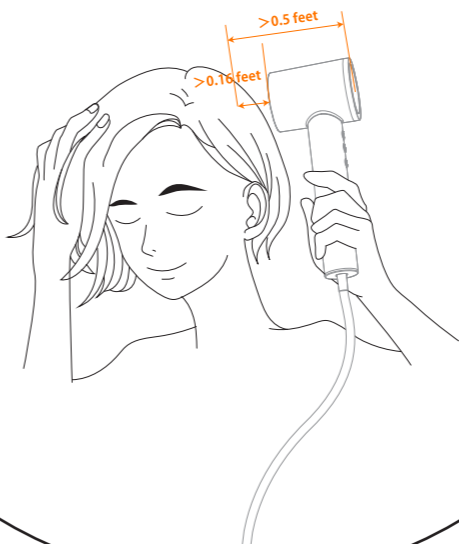


Cleaning & Maintenance

Note:

- The air intake needs regular cleaning to ensure it is clear of blockage.
- Do not wash the product with water, otherwise it may cause malfunction.

Self-cleaning Mode
To initiate self-cleaning, please hold the speed button for 5 seconds while the product is powered but not turned on.


Routine Cleaning
Use a soft brush to clean the air intake.

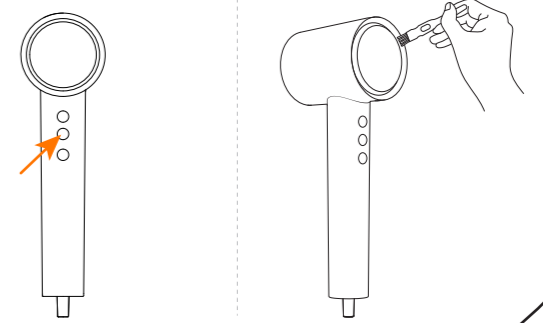

YTP101153A

JP

简单操作ガイド

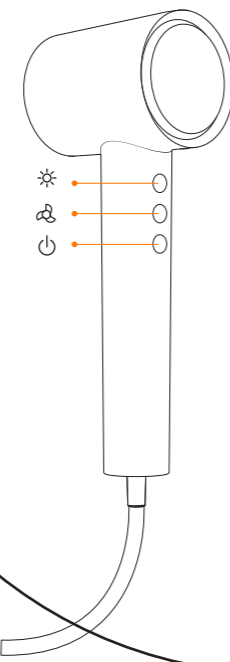

温度ボタン
短く押すと温度を調節する。低温→中温→高温を順に繰り返す。

风速ボタン
短く押すと風速を切り替える。低風速・中風速・高風速を順番に繰り返す。

電源ボタン/モードボタン
短く押すとNormal→Care→電源オフ→電源オン→Normal→...
電源がオンの状態で、ボタンを3秒間押し続けるとシャットダウンします。

風速ギア 低風速 中風速 高風速

マイナスイオン


モード Normal Care

ストレート用
セットノズルと吹き出し口を合わせて磁石で吸着しやすく、併用も可能です。(ノズルは360°回転可能)。

パーマ用
ディフューザーと吹き出し口を合わせて磁石で吸着しやすく、併用も可能です。(ディフューザーは360°回転可能)。

注意事項

使用時には、髪がドライヤーに巻き込まれないように、入口から15cm以上の距離をとってください。髪に傷つけないように、吹き出し口から5cm以上の距離をとってください。

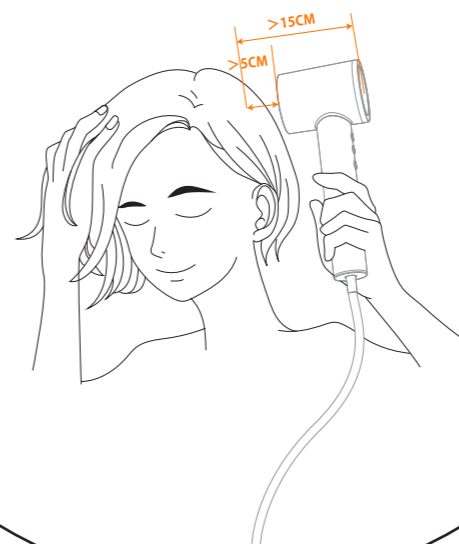


简单クリーニング

ご注意:

- 空気取り入れ口が妨げられていないように、適時清掃してください。ゴミなどによる詰まりにご注意ください。
- 水洗いはしないでください。故障になりやすい。

セルフクリーニングモード
プラグを電源ソケットに接続し、オフの状態でも風速ボタンを5秒間長押しすると、製品のセルフクリーニングが開始。

お手入れ
入口表面の付着物をブラシなどで掃除してください。

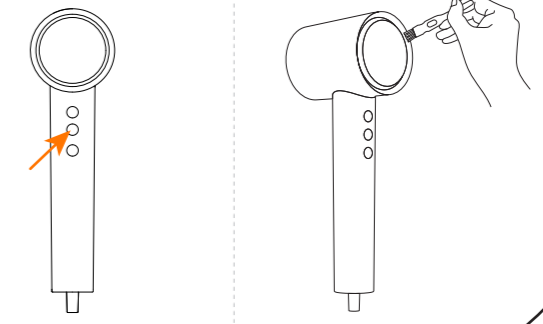

物料编码: YTP101153A		物料名称: 图拉斯1 HR2高速吹风机快速指南	
结构部分	材 质: 银禾祥合100克本白双胶纸	单 位: mm	平面部分
	成型尺寸: 119*119mm	刀 线: ————	
	展开尺寸: 471*119mm	压 线: - - - - -	
	结构设计:	针 刀 线:	
	日 期:	刀线相交:	
备 注:	坑 纹:	印刷颜色: PANTONE 2018C K	LOFFAN DESIGN 洛 凡 設 計
		装订方式: 风琴折; 双面印刷, 单黑一专; 满版过哑油; 啤+折	
		平面设计: 方刚来	
		平面修改:	
		日 期: 2023.09.11	
		备 注:	
特别说明: 所有物料需要符合蓝禾《有害物质限用管理程序》LH-WI-0004 (环保要求)			