


# OPERATION INSTRUCTION

# THE OPERATING MANUAL

## FUNCTIONAL DESCRIPTION FM BAND RECEIVER FM:88-108MHz



SC-1073ERF

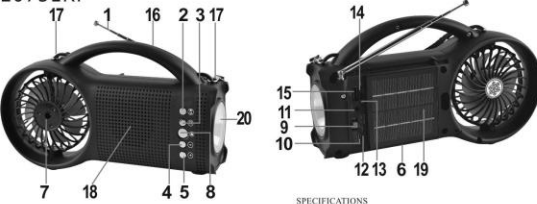

1. TELESCOPIC ANTENNA
2. MODE/LED LIGHT BUTTON
3. PLAY/PAUSE/BT CALL BUTTON
4. PREV. BUTTON
5. NEXT BUTTON
6. BATTERY COMPARTMENT
7. FAN
8. FAN BUTTON
9. L/M/H THREE LEVEL GEAR ADJUSTMENT
10. POWER LED LIGHT SWITCH
11. AUX IN JACK
12. CHARGE INDICATOR LIGHT
13. POWER INDICATOR LIGHT
14. TF CARD SLOT
15. USB SLOT
16. HANDLE
17. STRAP
18. SPEAKER
19. SOLAR PANEL
20. LED FLASHLIGHT

**SPECIFICATIONS**

• Wireless Portable Bluetooth® Speaker  
 • Wirelessly Stream Music from Any Bluetooth® Enabled Device with Bluetooth® 5.0  
 • USB and Micro SD Inputs  
 • Allow You to Play Non-Bluetooth® External Devices  
 • 3.5mm Auxiliary Input to Connect Wired External Audio Devices (cable not included)  
 • FM Radio: 88-108MHz  
 • 360° Antenna  
 • Fan 3 Wind Speed (L/M/H)  
 • LED Flashlight  
 • Built-in Lithium Rechargeable Battery: 1200mAh  
 • Solar Panel: 5V-1.5W  
 • Output Power: 4W  
 • Charging Voltage: 5V/3000mA  
 • Charging time: 3-6 hrs  
 • Play time: 1-1.2 hrs

**CONTENTS**

• Portable Bluetooth® Speaker  
 • Micro USB Charging Cable  
 • Adjustable Shoulder Strap  
 • User Manual

 The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.	<p><b>CAUTION</b></p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.
---	---	--

1. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
2. **WARNING :** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
3. **WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
4. **WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable
5. No naked flame sources, such as lighted candles, should be placed on the apparatus.
6. Attention should be drawn to environmental aspects of battery disposal.

CURRENT 2600mA POWER 6W

1. Put 18650 battery into battery compartment(6) paying careful attention to the polarity.
  2. When listen to the programmes from FM, Please pull out the antenna and change the length to make the listening clear. When you don't want to listen to the radio, please turn it off and disconnect the USB power cord or take out the batteries. When you don't want to use the radio for a long time, please take out the batteries from the unite.
- Function instruction**
1. Push the power switch to start up, and the default is bluetooth. After hearing the bluetooth prompt, open the bluetooth function of the mobile phone for pairing and connection with the bluetooth number "SC-1073ERF".
  2. Open the mobile phone player to play music directly after the connection is successful. To select a song, press the " ← " or " → " button to select the song, and press the " ▶ " button to pause the play.
  3. When dialing and answering the phone, the speaker of the host machine has a prompt sound of "beep". Press the language key once to make a phone call, and then you can make a call with the other party. At the end of the call, press the answer button again to hang up.
  4. MP3 use note: there will U disk (max 32G) MP3 song or TF card in the machine, machine will automatically play music, if you want to choose MP3 or bluetooth or FM "MODE" button can be changed, want to choose songs, gently press the " + " or " - " button to select the curve up and down, if long press for 3 seconds the two buttons can quickly backward or forward, gently press " ▶ " button to suspend play.
  5. Radio instruction: press the MODE button gently to turn to the FM state, then pull out the antenna and place it in a good position. Press the " ▶ " button for a long time for 3 seconds, and the radio will be automatically searched and stored in a good position. After the automatic search is completed, click " ← " or " → " button to select the radio station.
  6. Volume control: If you press " - " button for a long time, the volume will gradually decrease. If you press " + " button for a long time, the volume will gradually increase. When the volume is up to the maximum, the machine will make a "beep beep" sound.
  7. Push the power switch to shut down. If there is no equipment operation with in 5 minutes of standby, it will automatically shut down.
  8. While in the state of listening FM, MP3 and bluetooth play, long press "MODE" to turn the flashlight on/off.
  9. Solar panel surface, put in the sun, can be solar charging function.

**NOTE:**

1. This model includes built in rechargeable battery.
2. In order to prolong battery life and product normal use, charging time please keep 6-8 hours.

**Notes for using rechargeable batteries:**

After disassembling and installing rechargeable batteries, please plug in the power supply or charger to activate the battery, then turn on the power of the unit to work normally.

**Warranty**

**Basic Warranty Statement**

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety(90) DAYS from the date of original purchase. Proof of purchase (receipt) required.

Please visit <http://www.supersonicinc.com/warranty> for additional information.


FCC ID: 2AC5R-SC1075ER

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# INSTRUCCIONES DE OPERACIÓN

# MANUAL DE OPERACIÓN

## DESCRIPCIÓN FUNCIONAL Receptor de banda FM FM:88-108MHz

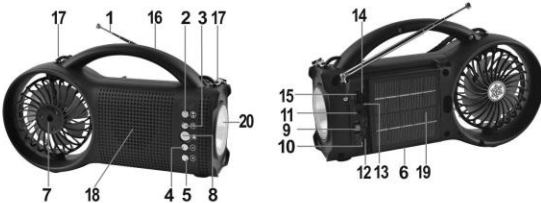

1. ANTENA TELESCÓPICA (atrás)
2. Modo botón de luz LED
3. Botón de llamada PLAY/PAUSE/BT
4. Botón anterior
5. Botón siguiente
6. Compartimiento en batería
7. FAN
8. Botón de ventilador (cambio de marchas de tres niveles L/M/H)
9. Interruptor de luz de encendido/LED
10. DC 5V IN JACK
11. AUX IN JACK
12. Luz del indicador de carga
13. Luz del indicador de potencia
14. Ranura de la tarjeta TF
15. Una ranura USB
16. MANDEL
17. Correa de correa
18. orador
19. PANEL SOLAR
20. La linterna LED

**especificaciones**

• Wireless Bluetooth® Portable® Speaker (en inglés)  
 • wirelessly stream music desde cualquier Bluetooth® Dispositivo habilitado con Bluetooth®  
 • Entradas USB y Micro SD.  
 • Permite reproducir dispositivos externos sin Bluetooth  
 • Entrada auxiliar de 0.3.5 mm para conectar un cable externo  
 • Dispositivos de Audio (cable no incluido)  
 • Radio FM 88-108MHz  
 • 360° antena  
 • Fan 3 velocidad del viento (L/M/H)  
 • Linterna de LED  
 • Built-in Lithium rechargeable Battery: 1200mAh  
 • Solar Panel: 5V-1.5W  
 • Potencia de salida: 4W  
 • Tensión de carga: 5V/3000mA  
 • tiempo de carga: 3-6 horas  
 • tiempo de juego: 1-1.2 horas  
 contenidos  
 • Portable Bluetooth® Speaker (en inglés)  
 • Cable de carga. Micro USB  
 • Correa de hombro ajustable  
 • Manual del usuario

 La ráfaga y la punta de flecha dentro del triángulo es una señal de advertencia que le alerta de "temión peligros" dentro del producto.	<p><b>ATENCIÓN</b></p> <p>RIESGO DE DESCARGA ELÉCTRICA NO ABRA</p> <p>PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, ASEGÚRESE DE NO QUITAR LA CUBIERTA (O LA PARTE POSTERIOR) SI NO HAY PIEZAS A SER REPARADAS POR EL USUARIO EN EL INTERIOR. CONSULTAR PERSONAL DE SERVICIO CALIFICADO PARA OBTENER SERVICIO.</p>	 El signo de exclamación dentro del triángulo es una señal de advertencia que le alerta sobre las precauciones importantes para el producto.
---	--	---

1. Este aparato no se puede instalar en un espacio cerrado o empotrado, como una estantería para libros o similar, sino debe mantenerse en un lugar abierto bien ventilado. La ventilación no debe ser impedida mientras las aberturas de ventilación están cubiertas periódicos, manteles, cortinas, etc.
2. **ADVERTENCIA:** No exponga el producto a la lluvia u humedad, ni a goteos o salpicaduras, para reducir el riesgo de incendio o descarga eléctrica. Cualquier objeto que contenga líquido, como jarrón, no podrá colocarse sobre el aparato.
3. **ADVERTENCIA:** La batería (batería o baterías o banco de baterías) no debe exponerse a calor excesivo como la luz solar, fuego o semejanza.
4. **ADVERTENCIA:** El enchufe de la red se utiliza como dispositivo de desconexión, que debe permanecer fácilmente operativo.
5. Está prohibido colocar fuentes de llamas descubiertas, como velas encendidas, sobre el aparato.
6. Prestación especial debe prestarse a los aspectos ambientales sobre el desecho de la batería.

CORRIENTE 2600Ma POTENCIA 10W

1. Ponga la batería 18650 en el compartimento de la batería (6) prestando especial atención a la polaridad.
2. Cuando escuche los programas de FM, por favor saque la antena y cambie la Largo para aclarar la escucha. Cuando no quieras escuchar la radio, por favor da la vuelta. Se apaga y desconecta el cable de alimentación USB o sacar las baterías. Cuando no quieres Para usar la radio por mucho tiempo, por favor saca las baterías de la unidad.

**Instrucción de la función**

1. Pulse el interruptor de encendido para iniciar, y el valor predeterminado es Bluetooth. Después de escuchar Bluetooth prompt, abra la función Bluetooth del teléfono móvil para emparejar Conexión con el número Bluetooth "SC-1073ERF".
2. Abra el reproductor del teléfono móvil para reproducir música directamente después de que la conexión tenga éxito. Para seleccionar una canción, pulse el botón " ← " o " → " para seleccionar la canción, y pulse el " ▶ " botón para pausar la reproducción.
3. Al marcar y contestar el teléfono, el altavoz de la máquina host tiene un prompt Sonido de "beep". Pulse la tecla de idioma una vez para hacer una llamada telefónica, y luego usted Puede hacer una llamada con la otra parte. Al final de la llamada, pulse el botón para responder Otra vez para colgar.
4. MP3 nota de uso: habrá U disco (máximo 32GB) MP3 canción o tarjeta TF en la máquina, la máquina Reproducir música automáticamente, si desea elegir MP3 o Bluetooth o FM "modo" Botón se puede cambiar, desea elegir canciones, presione suavemente el " ← " o " → " Botón para seleccionar la curva arriba y abajo, si presionar durante 3 segundos los dos botones Puede rápidamente hacia atrás + o hacia adelante, pulse suavemente el botón " ▶ " para suspender el juego.
5. Instrucción de Radio: pulse el botón MODE suavemente para girar al estado FM, luego retire La antena y colocarla en una buena posición. Pulse el botón " ▶ " durante mucho tiempo para 3 segundos, y la radio será automáticamente buscado y almacenado en una buena posición. Después de que la búsqueda automática se haya completado, haga clic en el botón " ← " o " → " para seleccionar la radio Estación.
6. Control de volumen: si pulsa el botón " - " durante mucho tiempo, el volumen será gradual Disminución. Si pulsa el botón " + " durante mucho tiempo, el volumen aumentará gradualmente. Cuando el volumen es hasta el máximo, la máquina hará un sonido "beep beep".
7. Presione el interruptor de encendido para que se apague. Si no hay funcionamiento del equipo con in 5 minutos de espera, se apagará automáticamente.
8. Mientras que en el estado de escuchar FM, MP3 y Bluetooth jugar, pulse "modo" a su vez La linterna encendida/apag.
9. Superficie del panel Solar, poner en el sol, puede ser la función de carga Solar.

**NOTAS:**

1. Este modelo incluye batería recargable incorporada.
2. Para prolongar la vida útil de la batería y el uso normal del producto, el tiempo de carga debe controlarse a 6-8 horas.

**Notas para el uso de baterías recargables:**

Después de desmontar e instalar baterías recargables, conecte la corriente Fuente o cargador para activar la batería, a continuación, encienda la energía de la unidad para que funcione Normalmente.

**Warranty**

**Basic Warranty Statement**

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety(90) DAYS from the date of original purchase. Proof of purchase (receipt) required.

Please visit <http://www.supersonicinc.com/warranty> for additional information.

FCC ID: 2AC5R-SC1075ER

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.