S2060-SF

HANGMAN SIMPLE MOUNT TV HANGER®



Scan for Video Demo



LED/LCD TVS (81.28cm - 203.2cm)

(2) **M8** (8mm) x 16mm bolts

125 lbs. / 56 kg


Parts List

NOTE: Not all hardware included will be used.


Tools Required

- Pencil
- Power Drill (for installing anchors only)
- Phillips Screwdriver • 1/2" Drillbit

(1) Wall Bracket



(1) TV Mounting Bracket



(1) Security Cable



(1) Magnetic Stud Finder



⚠ WARNING Magnetic Field. Can be harmful to pacemaker wearers. tay back 90 cm. (36 in.)



UL Rated for up to 125lbs. / 56.7kg


(1) Level



(6) Bolt Washers



(2) M8 (8mm) x 35mm bolts



(2) **M6** (6mm) x 35mm bolts



(2) M5 (5mm) x 35mm bolts



(2) M4 (4mm) x 35mm bolts



(3) 1-1/2" Bear Claw Screw



For Studs

(2) Small Washers for 4mm bolts



(2) **M8** (8mm) x 20mm bolts





(2) **M6** (6mm) x 20mm bolts



(2) **M6** (6mm) x 12mm bolts



(2) **M5** (5mm) x 12mm bolts



(2) **M4** (4mm) x 12mm bolts



(3) 1" Bear Claw Screws



(3) Alligator Anchors




For Brick / Concrete

(3) Snap Toggle Anchors



For Drywall / Lath & Plaster







WARNING: Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return to your dealer; contact Customer Service. Never use damaged parts!





CAUTION: This S2060 mount is intended for use

of the mount and its accessories causing possible injury.

Use with products heavier than 125lbs may result in collapse

only with LED displays weighing up to 125lbs.

For Wood Stud & Metal Stud Installation.

FOR LATH & PLASTER: Locate studs & use stud screws or Snap Toggles FOR BRICK & CONCRETE: Use Alligator Anchors

TOO SHORT

TOO LONG

CORRECT

(Fig. 1)

USE WASHERS IF BOLTS ARE TOO LONG

STEP 1: INSTALL TV MOUNTING BRACKET


Place the TV face down on a soft surface where it is secure and stable. If your TV is already attached to a base, it must be removed before beginning the installation. The VESA holes on the back of the TV are either 4mm, 5mm, 6mm, 8mm depending on the brand of the TV. This kit includes all sizes. **IMPORTANT**



Note: It is very important to select the correct bolt diameter and length.

Attach TV mounting bracket to the top 2 holes using the appropriate bolts. This kit also includes different lengths of each size. Hand tighten to choose appropriate length then use a handheld Phillips screwdriver and tighten until snug.


Do not overtighten.

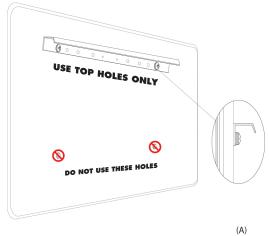

STEP 2: LOCATE STUDS

Locate studs by finding drywall screws and nails. Simply slide the included magnetic stud finder in an "S" shaped The wall bracket must attach to 2 studs with the over lapping bracket secured on the end or ends using the Snap-



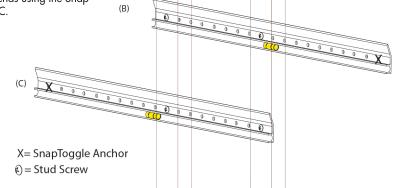

(B)

STEP 3: LEVEL & MARK

Insert level into wall bracket. Place wall bracket over studs and mark end holes for the anchor(s). (one or two anchors- see Fig 1)

STEP 4: INSTALL ANCHORS


Drill 1/2" holes for the SnapToggle anchors and install either one or two anchors.


STEP 5: INSTALL WALL BRACKET


Install the wall bracket using black self drilling screws for the studs and silver machine screws for the anchors.

STEP 6: HANG YOUR TV

Hang TV by engaging the TV bracket on top of the wall bracket, assuring brackets have engaged correctly. (See below)

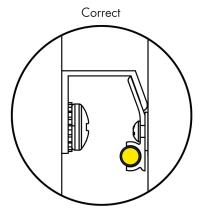

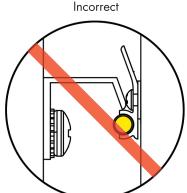

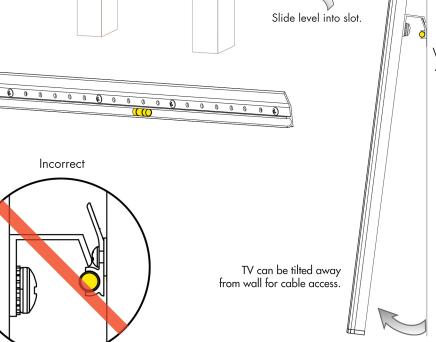

-Stud Mark —

Security Cable Installation

Insert Cable through the slot on the bracket. Hang your television and insert BearClaw security screw through the eyelet and into the wall.









pattern until it locates a screw. Mark the stud location. Toggle anchor(s). See options A-B-C.

